



## Parts List for BT3600-B3 Type 1

Item Number	Part Number	Description	Qty Required
1	5140013-61	WHEEL GUARD (L)	1
2	5140013-62	NUT,L.H.WHEEL	1
3	5140013-63	WHEEL,DISC	1
4	5140023-62	BRACKET	1
5	186172-00	EYE SHIELD	2
6	5140013-66	COVER,INNER	1
7	5140013-67	TOOL REST L.	1
8	5140013-68	BALL BEARING	1
9	5140066-12	HOUSING,BEARING	1
9	5140013-69	HOUSING,BEARING	1
10	5140023-63	ROTOR	1
11	5140023-65	CORDSET	1
12	5140023-67	STATOR	1
13	5140013-73	WASHER,WAVY	1
14	5140013-74	STRAIN RELIEF	1
15	5140013-75	PLATE,MOUNTING	1
16	5140013-76	MOTOR HOUSING	1
17	5140013-77	WARNING LABEL	1
18	5140023-69	NAMEPLATE	1
19	5140013-79	COVER,RH WHEEL	1
20	5140013-80	TOOL REST R.	1
21	5140013-81	GRINDING WHEEL	1
22	5140013-82	FLANGE,WHEEL	1
23	5140013-83	NUT,R.H.WHEEL	1
24	5140013-84	COVER,RH WHEEL	1
25	5140013-85	BASE	1
26	5140013-86	SWITCH COVER	1

## Parts List for BT3600-B3 Type 1

Item Number	Part Number	Description	Qty Required
27	5140013-87	SWITCH	1
29	5140023-72	CAPACITOR	1
30	5140013-90	BASE PLATE	1
31	5140013-91	RUBBER FOOT	1
32	5140013-92	GRINDING WHEEL	1
34	5140023-73	WASHER	31
35	5140023-74	SPRING WASHER	14
36	5140023-75	SCREW	4
37	5140023-76	SCREW	1
38	5140023-77	NUT	10
39	5140023-78	SCREW	6
40	5140013-60	SCREW	1
41	5140014-01	SCREW	1
42	5140014-02	HEX BOLT	1
43	5140014-03	WASHER,FLAT	1
44	5140013-64	WASHER	1
46	5140023-79	BRACKET	1
47	5140023-80	CORD PROTECTOR	1
48	5140023-81	CORD CLAMP	1
49	5140023-82	CLAMP PLATE	1
50	5140023-83	HEX BOLT	2
51	5140023-84	WASHER	2
52	5140023-71	COVER	1