



Parts List for CD1440K Type 1

Item Number	Part Number	Description	Qty Required
1	497014-58	CLAMSHELL	1
2	311978-01	F/R ACTUATOR	1
3	148354-03	BIT CLIP	1
4	607918-41	SCREWDRIVER BIT	1
5	497030-40	VSR SWITCH	1
6	000000-00	No Longer Available	1
7	419262-00	MOTOR & PINION	1
8	330013-03	SCREW	4
9	498796-00	KEYLESS CHUCK	1
10	149518-01	SCREW	1
11	311975-01	TOP,INSERT	1
12	000000-00	No Longer Available	1
13	497017-23	ID LABEL	1
14	046376-00	PIN	1
15	330019-00	SCREW	2
861	497641-05	LATCH	2
861	499124-13	KIT BOX	1
866	PS140	14.4V BATTERY	1
867	645221-00	BATTERY CAP	1
871	418352-02	PS180 14.4V CHARGER	1