



Parts List for CS144 Type 1

Item Number	Part Number	Description	Qty Required
1	497492-00	HANDLE ASSY.	1
2	000000-00	No Longer Available	1
3	497513-00	SHROUD	1
4	486563-00	SCREW	2
5	497549-00	BAFFLE	1
6	000000-00	No Longer Available	1
7	497905-00	TERMINAL BOARD	1
8	497486-01	PIVOT SCREW	1
9	497525-00	MOTOR & GEARBOX	1
10	497524-00	STOPPER	1
11	497577-00	EYELET	1
12	498156-00	SCREW	1
13	497526-00	SCREW,M4 X 17	9
14	497503-00	CRANK,LOCK-OFF	1
15	497504-00	SPRING,LOCK-OFF	1
16	497476-00	SCREW,BLADE	1
17	497477-00	WASHER,OTR BLD	1
18	000000-00	No Longer Available	1
18	340781-30	BLADE 73-280	1
19	497478-01	IN.CLAMP WASHER	1
20	497479-00	RING,RETAINING	1
21	497480-00	GUARD,LOWER	1
22	497481-00	SPRING,GUARD	1
23	98000-09	WRENCH,HEX-4MM	1
24	497550-00	SHOE	1
25	497552-00	KERF INDICATOR	1
26	497551-00	SCREW,M4 X 7	1

Parts List for CS144 Type 1

Item Number	Part Number	Description	Qty Required
27	497583-00	PLUG,WRENCH	1
28	497915-00	KNOB	1
29	497558-00	BOLT	1
30	497898-00	NUT,ACORN	1
31	497576-00	LEVER	1
32	000000-00	No Longer Available	1
33	497582-01	WIRECLIP	1
34	497485-00	HEXSCREW,M6X15	1
35	498513-00	WASHER,SPRING	1
39	497473-00	NP:CS144 T1	1
856	000000-00	No Longer Available	1
856	132144-00	RIP FENCE	1
861	497566-00	KITBOX	1
866	PS140	14.4V BATTERY	1
871	418352-02	PS180 14.4V CHARGER	1