



## Parts List for LST136 Type 1

Item Number	Part Number	Description	Qty Required
1	90582102	HANDLE ASSEMBLY	1
2	90567876	TRIGGER	1
3	244053-00	SPRING, TRIGGER	1
4	90572573	SWITCH LOCK	1
5	90548007	SPRING	1
6	90569937	SWITCH	1
7	90576509	PCB ASSEMBLY	1
8	90568745	TERMINAL BLOCK	1
9	90516498	SPRING	2
10	90577120	SPEED WHEEL	1
11	329301-00	CLAMP,CORD	2
13	90582104	TUBE & MOTOR ASSM	1
14	90582103	MOTOR HOUSING ASSY.	1
16	90550451	SPRING	1
19	90559541-03	GEAR & SPINDLE	1
20	90564281	SPOOL & LINE	1
21	90566944	SPRING	1
22	385022-03	COVER	1
23	747329	SCREW	19
24	90571331	EDGE GUIDE	1
25	90576510	LEAD WIRE	1
36	90567077	LEVER ASSEMBLY	1
37	90580098	AUXILIARY HANDLE	1
38	90580088	SCREW,MACHINE	1
39	90570279-01	KNOB	1
40	90567871	GUARD ASSM.	1
41	681914-00	SCREW	2

## Parts List for LST136 Type 1

Item Number	Part Number	Description	Qty Required
42	90559117	BLADE	1
43	90562021	WARNING LABEL	1
44	90573894	LABEL	1
45	90573659	BRAND LABEL	1
46	370748	SCREW	4
150	90573895	WARNING LABEL	1
151	90575882	LABEL	1
152	90573898	RATING LABEL	1
866	LBXR36	BATTERY	1
871	90567393-00	CHARGER	1