



## Parts List for PS3600K-2 Type 1

Item Number	Part Number	Description	Qty Required
1	000000-00	No Longer Available	1
2	311978-00	ACTUATOR	1
3	148354-03	BIT CLIP	1
4	607918-41	SCREWDRIVER BIT	1
5	486784-00	VSR SWITCH	1
6	000000-00	No Longer Available	1
7	000000-00	No Longer Available	1
8	330013-04	SCREW	6
9	498796-00	KEYLESS CHUCK	1
10	149518-01	SCREW	1
11	311975-02	TOP,INSERT	1
12	000000-00	No Longer Available	1
13	418442-03	NAMEPLATE	1
16	PS140	14.4V BATTERY	1
17	418352-02	PS180 14.4V CHARGER	1
861	499125-00	KIT BOX	1