 
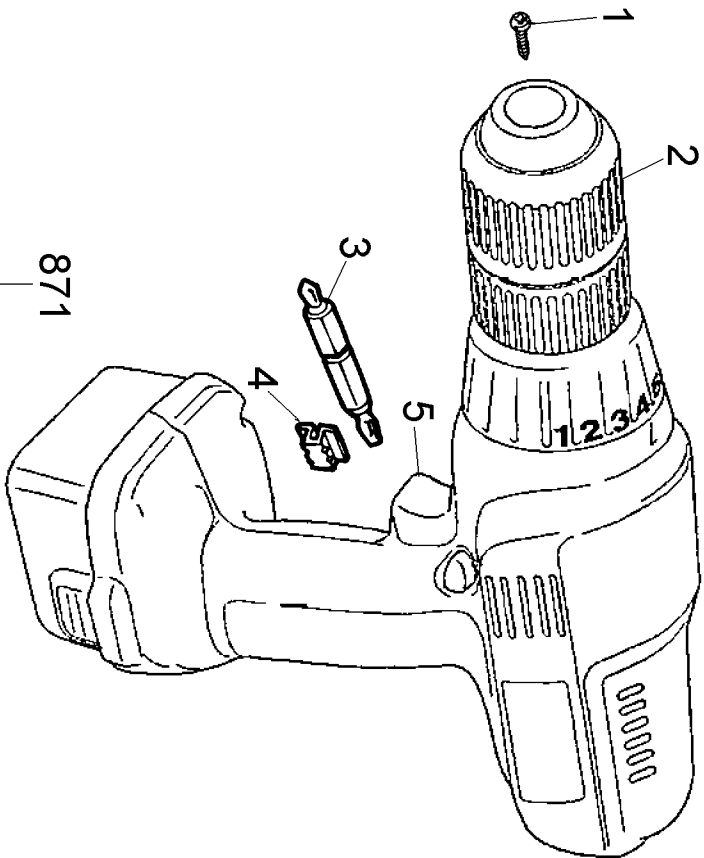 
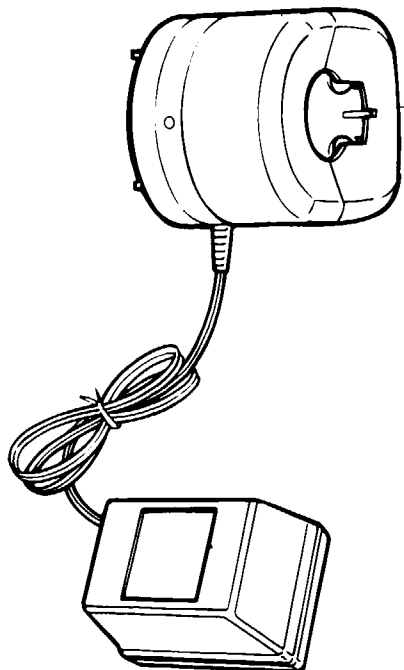 


861

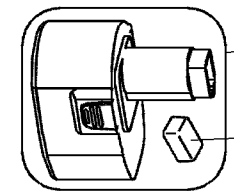

Parts List for PS3750K-2 Type 1

Item Number	Part Number	Description	Qty Required
1	149518-01	SCREW	1
2	498796-00	KEYLESS CHUCK	1
3	607918-41	SCREWDRIVER BIT	1
4	148354-03	BIT CLIP	1
5	497030-04	VSR DC SWITCH	1
861	499125-00	KIT BOX	1
866	PS145	18V BATTERY	1
867	645221-00	BATTERY CAP	2
871	90500930-01	PS185 18V CHARGER	1
875	497641-05	LATCH	2