



Parts List for DCD130T1 Type 1

Item Number	Part Number	Description	Qty Required
1	N578131	HOUSINGS	1
2	N607817	GEAR CASE	1
3	N607818	GEAR CASE COVER	1
4	N607816	MODULE & STATOR ASSY	1
5	N556028	FAN BAFFLE	1
6	N607815	ROTOR ASSY	1
7	N582867	FWD/REV BUTTON	1
8	330033-42	CHUCK	1
9	N660686	GEAR ASSEMBLY	1
10	N660685	GEAR ASSEMBLY	1
11	N660687	OUTPUT SPINDLE	1
12	605040-20	BALL BEARING	1
13	605040-26	BALL BEARING	1
14	N550807	BEARING PLATE	1
15	N660748	LENS	1
16	N581365	LENS	1
17	N592879	LED ASSY	1
18	N592880	LED ASSY	1
19	330034-16	CHUCK KEY	1
20	N657938	CHUCK KEY HOLDER	1
21	N688737	SIDE HANDLE	1
22	330019-19	SCREW	4
23	330019-04	SCREW,PLASTITE	11
24	N582612	END CAP	1
25	N670771	GASKET	1
26	99371-06	NUT	1
27	N091479	MOUNT- SPRING	1

Parts List for DCD130T1 Type 1

Item Number	Part Number	Description	Qty Required
28	N461735	SPRING	1
29	N599066	SPACER	1
30	N576469	MACHINE SCREW	1
31	N645276	SCREW, TAPTITE	4
32	622484-00	FLAT HD SCREW	2
33	330019-05	SCREW, PLASTITE	4
50	N584544	RATING LABEL	1
51	N657854	LABEL WARNING FR/SP	1
800	N017298	GREASE	1
836	000000-00	No Longer Available	1
836	000000-00	No Longer Available	1
836	000000-00	No Longer Available	1
836	000000-00	No Longer Available	1
856	628037-00	SPADE HANDLE	1
856	382531-00	KNOB	1
862	N381993	TOOL BAG	1
866	DCB606	FLEXVOLT BATTERY	1
867	N475920	BATTERY CAP	1
871	DCB118	CHARGER	1