








871

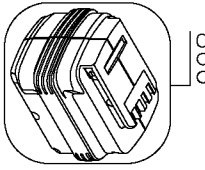

866

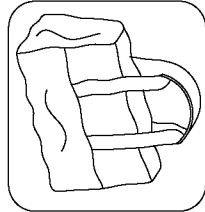

862

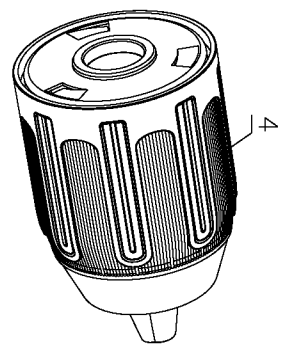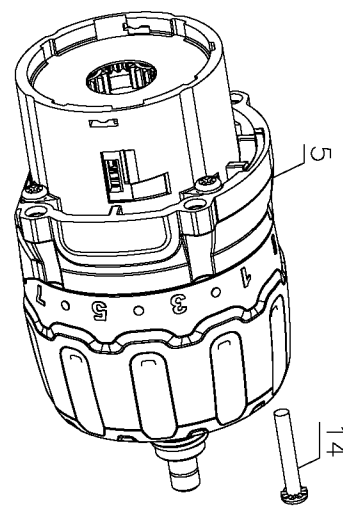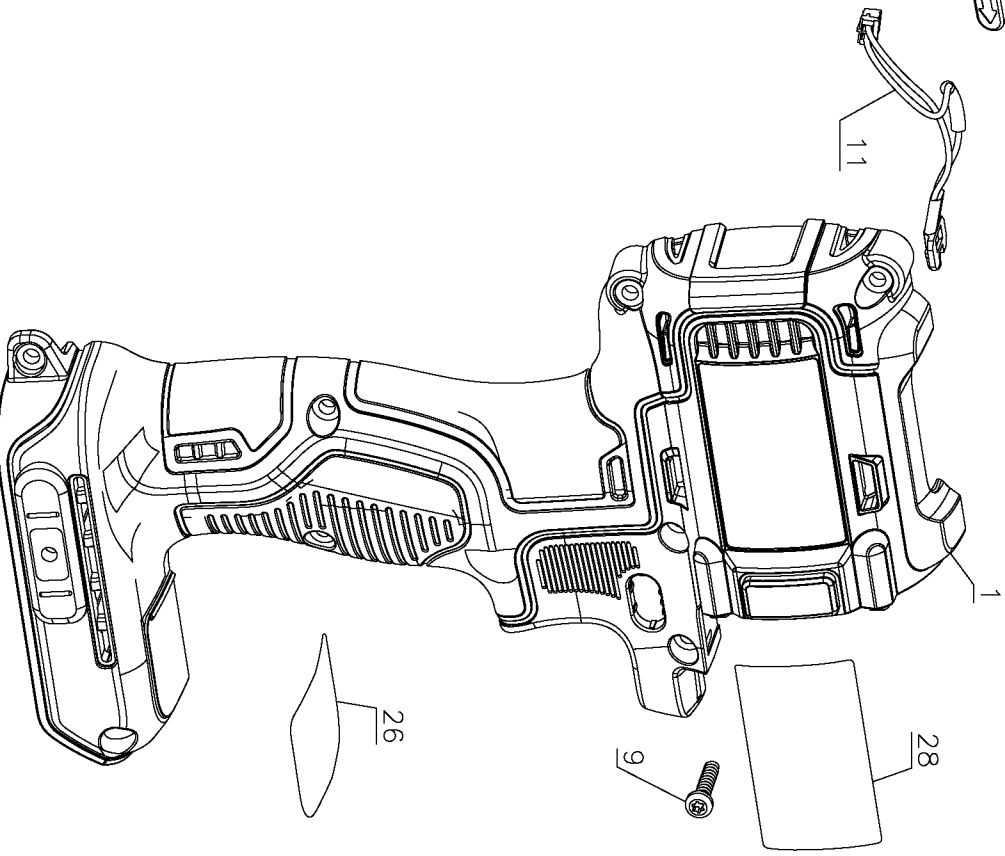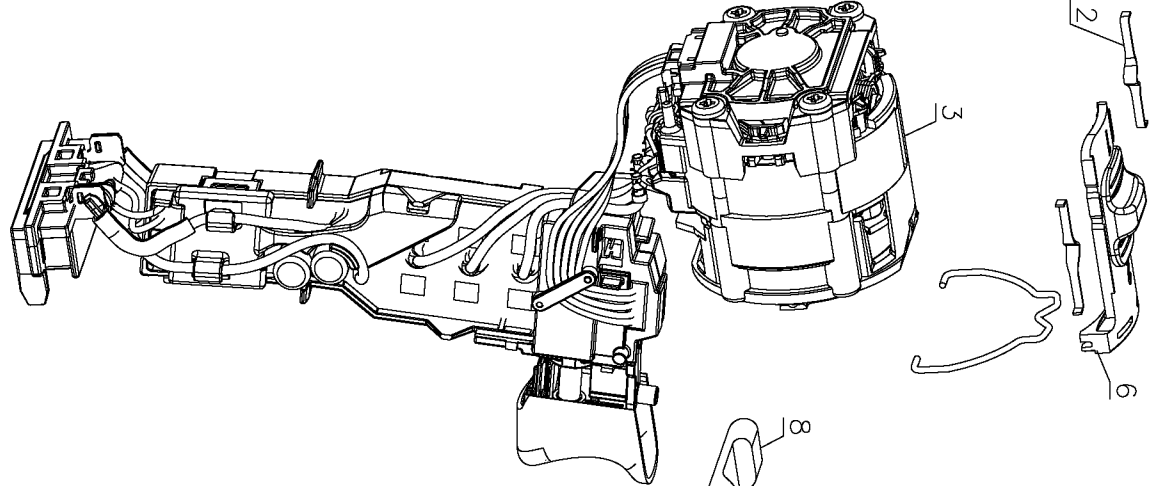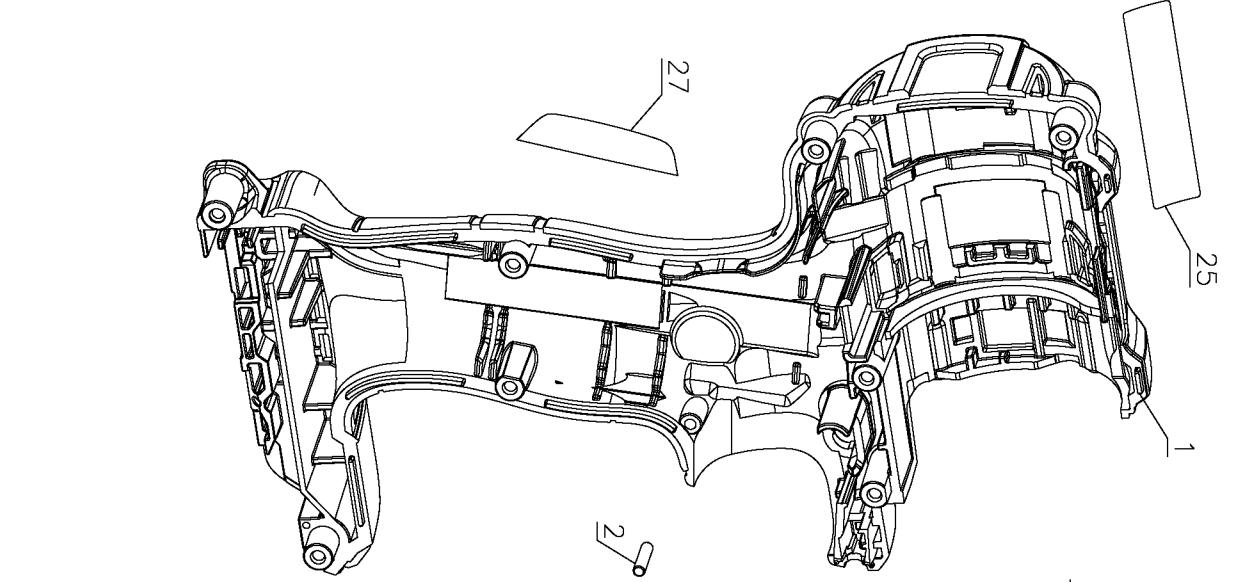


25

27

2

 12



6

8

11

14

26

28

9

Parts List for DCD778L1 Type 1

Item Number	Part Number	Description	Qty Required
1	N489298	HOUSINGS	1
2	N071836	ROLL PIN	1
3	N472974	MOTOR & SWITCH ASSY.	1
4	N472497	CHUCK	1
5	N510737	TRANSMISSION ASSY	1
6	N459102	SPEED SELECT	1
8	N399342	FWD/REV BUTTON	1
9	N463678	SCREW,PLASTITE	8
11	N459095	LED ASSY	1
12	N014681	DETENT SPRING	2
14	N039795	SCREW	4
25	N498650	RATING LABEL	1
26	N463910	ID LABEL	1
27	N298039	LABEL	1
28	N238179	WARNING LABEL	1
862	N294699	SOFT BAG	1
866	DCB230	BATTERY	1
871	DCB113	CHARGER	1