



## Parts List for DW476-AR Type 1

Item Number	Part Number	Description	Qty Required
1	000000-00	No Longer Available	1
2	940480-49	FIELD	1
3	949825-04	SWITCH,LOCK-ON	1
4	940160-03	CUT-OFF BRUSH	1
5	330080-52	CABLE	1
6	931771-00	FLANGE	1
7	933058-00	SCREW	3
8	932369-00	WASHER	1
9	930927-00	FLANGE	3
10	860083-03	NUT	1
11	930925-00	WASHER	1
12	930929-00	FLANGE,GUARD	1
13	949892-07	SCREW	1
14	932525-02	7IN GUARD	1
15	330024-14	SCREW,PLASTIC	4
16	947962-00	COVER,GEARCASE	1
17	578243-00	SPINDLE	1
18	861721-12	BEARING	1
19	930924-00	FLANGE	1
20	930923-00	RING,-V-	1
21	930922-00	SPACER	1
22	932576-00	GEAR & PINION	1
23	930930-00	SCREW	4
24	401048-00	GEARCASE ASSY	1
25	937098-49	CLIP,RETAINING	1
26	930909-00	WASHER,FELT	1
27	574853-09	BEARING	1

## Parts List for DW476-AR Type 1

Item Number	Part Number	Description	Qty Required
28	931067-00	WASHER,FELT	1
29	931062-00	SPACER	1
30	930028-00	RING, O	1
31	931066-00	FLANGE	1
32	938331-00	SPACER	1
33	330003-36	BEARING,BALL	1
34	938332-00	COVER,BEARING	1
35	933499-00	HANDLE,SIDE	2
36	000000-00	No Longer Available	1
37	931073-00	BAFFLE	1
38	935747-00	BRUSH PLATE	1
39	931076-00	SPRING,BAFFLE	2
40	948162-09	FIELD CASE ASM	1
41	N097875	HANDLE & COVER	1
42	933364-02	COVER,BRUSH	4
43	930934-00	ABSORBER,SHOCK	4
44	947964-01	PROTECTOR,CORD	1
45	931297-00	SCREW	2
46	931469-02	SCREW	4
47	930284-01	SCREW	2
48	931477-00	CLAMP,CORD	1
49	938733-00	WRENCH	1
50	807043-00	WRENCH	1
51	000000-00	No Longer Available	2