



## Parts List for DW562K-AR Type 1

Item Number	Part Number	Description	Qty Required
101	000000-00	No Longer Available	1
102	328961-17	FIELD	1
103	176830-13	ON/OFF SWITCH	1
104	576980-02	BRUSH	1
105	576980-04	BRUSH	1
106	401878-00	BRUSH HLDR.ASSY	1
107	401877-00	BRUSH HLDR.ASSY	1
108	327293-00	BAFFLE,FAN	1
109	949638-01	PLUG,RUBBER	2
110	5103541-00	SCREW	2
113	327290-05	HOUSING	1
114	949877-01	CAPACITOR	1
115	330065-06	SCREW	2
116	330003-19	BEARING,BALL	1
117	949876-25	WASHER	1
118	870052-00	BEARING COVER	1
119	329794-00	SCREW	1
120	327296-00	GUIDE,CABLE	1
121	327298-01	COVER,SWITCH	1
122	330065-07	SCREW	2
123	930026-01	BUMPER	1
124	402649-00	CORD CLAMP	1
125	403395-00	CORD PROTECTOR	1
126	573379-12	CORDSET	1
127	949801-70	LEAD,BLUE	1
128	573310-00	LEAD	1
136	327110-00	SPACER	1

## Parts List for DW562K-AR Type 1

Item Number	Part Number	Description	Qty Required
137	324044-02	SCREW	4
138	323489-00	CAP	1
139	576756-00	COLLAR	1
142	578387-00	WASHER	1
143	871690	SPRING	1
144	324432-00	WASHER	1
145	329968-06	GEAR CASE	1
146	329907-00	WASHER	1
147	870953-00	BALL	1
148	325880-05	PIN	1
149	577080-01	SPINDLE ASSY.	1
154	327100-00S	CASTING	1
155	328507-00	SHIELD	1
156	323572-00	SEAL	1
161	327093-00	FILTER	1
162	N032136	RAM	1
163	577168-00	O RING	1
164	487143-00	AXLE	1
165	327072-00	SHIM	1
166	323762-02	CIRCLIP	1
167	487401-00	CLUTCH ASSY.	1
168	327074-00	RING	1
169	487067-00	PISTON	1
170	323395-33	SPRING	1
171	575193-01	INTERSHAFT	1
172	324430-03	BEARING	1
173	324431-03	WASHER	1

## Parts List for DW562K-AR Type 1

Item Number	Part Number	Description	Qty Required
174	939794-02	HANDLE,SIDE	1
175	580787-00	DEPTH STOP	1
800	870889-02	GREASE	1
816	395047-00	ID LABEL	1