



Parts drawing for pump 040-0354 (755H)

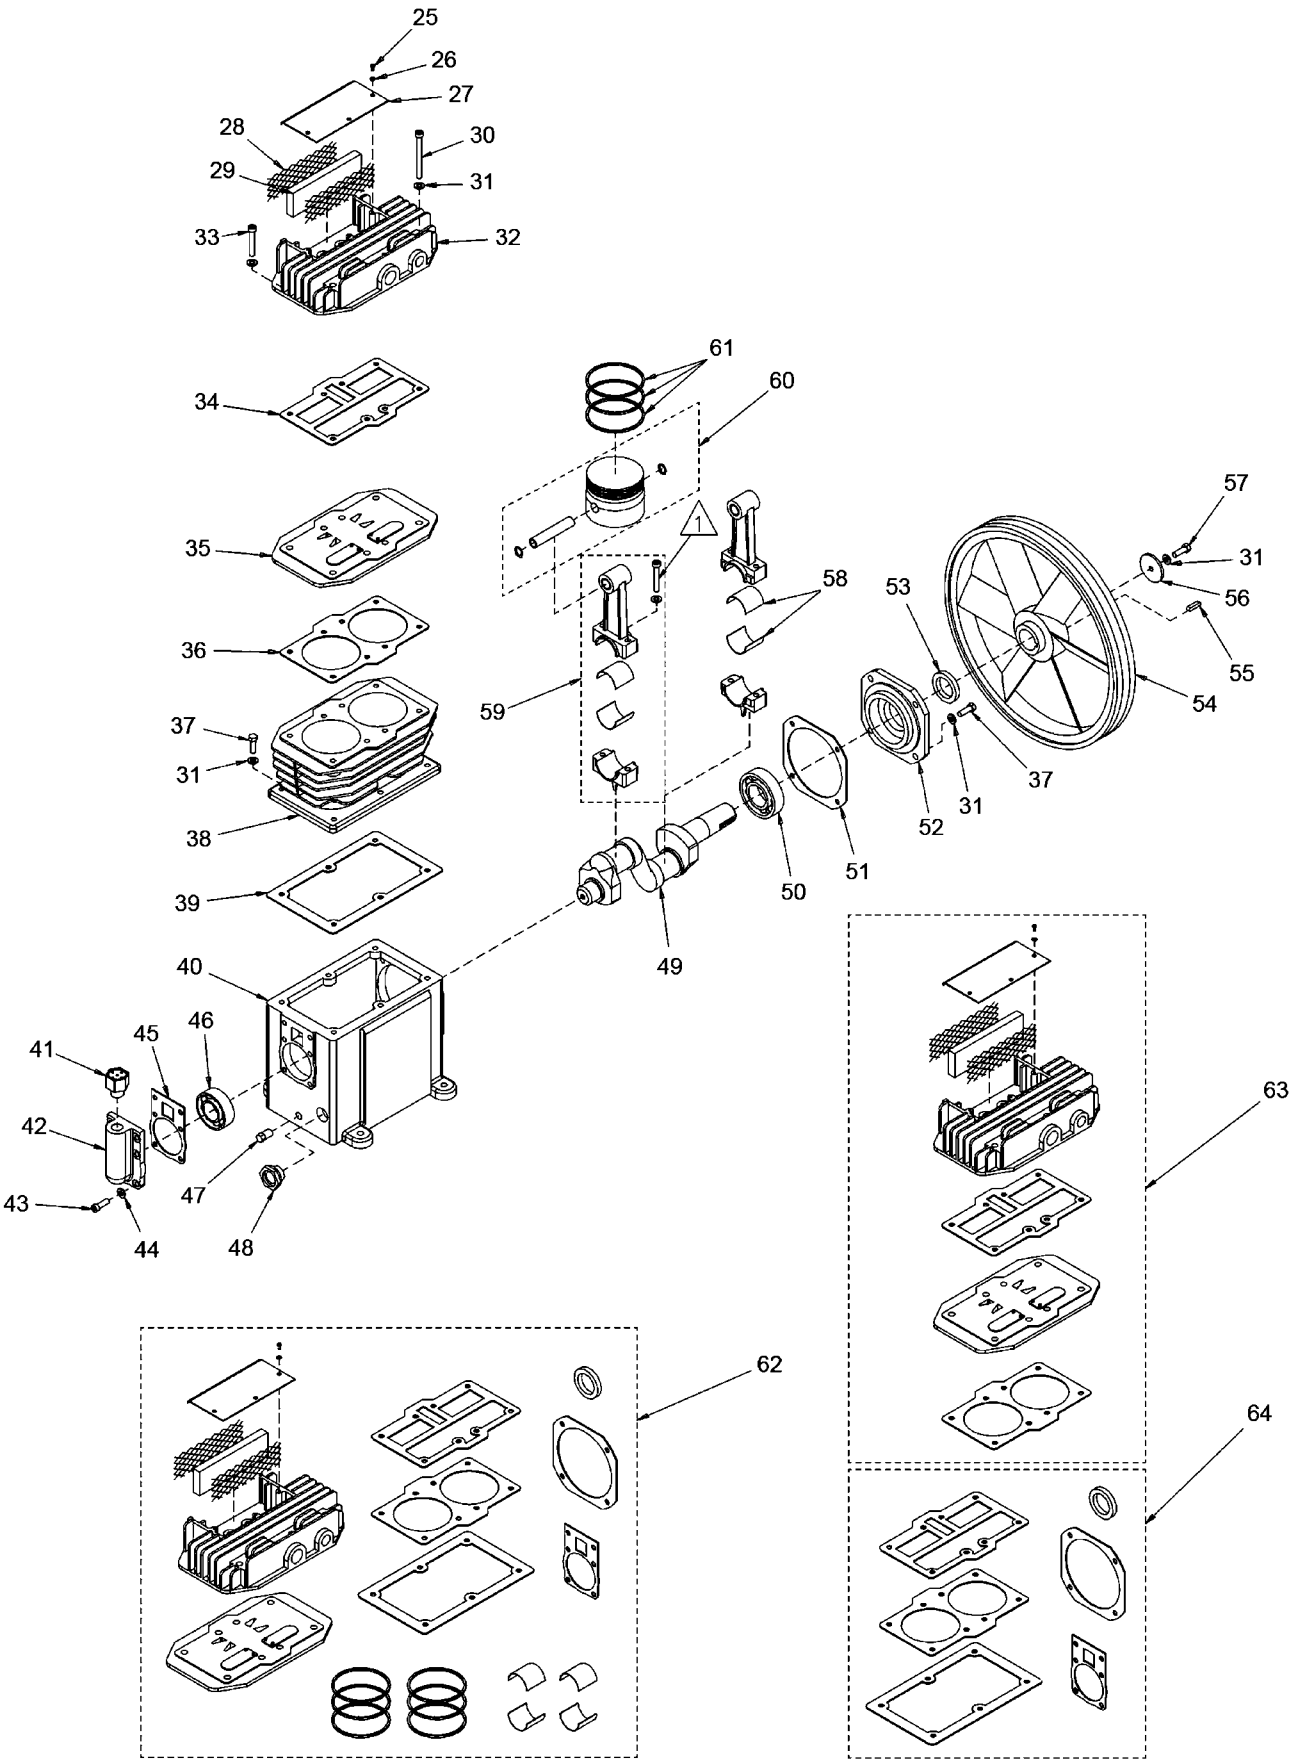

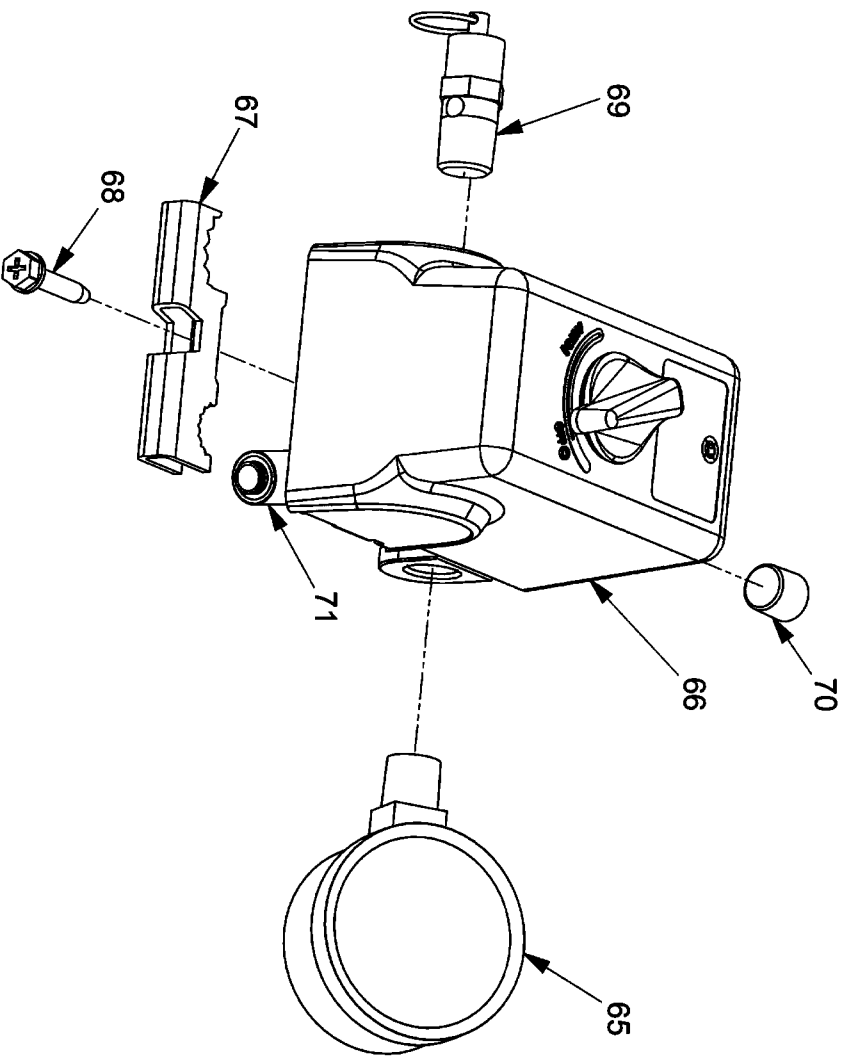

Parts drawing for manifold assembly 141-0291

Parts List for DXCMLA3706056 Type 1

Item Number	Part Number	Description	Qty Required
1	5140118-97	BELT GUARD	1
2	5140118-98	SCREW	5
4	5140118-99	BELT GUARD	1
6	5140119-00	KEY	1
7	5140121-02	V-BELT	1
8	5140121-03	PULLEY	1
9	5140121-04	INTERCONNECTING CORD	1
11	5140119-71	BUSHING	1
11	5140119-72	O-RING	2
11	5140119-09	PET COCK	1
11	5140120-64	BUSHING	1
12	5140119-13	WARNING LABEL	1
13	5140119-14	WARNING LABEL	1
15	5140121-17	PUMP ASSEMBLY	1
16	5140119-16	ADAPTER	1
17	5140119-17	NUT	2
18	5140119-18	TUBE	1
19	5140121-05	BLEEDER TUBE	1
20	5140121-06	CONNECTOR	1
21	5140121-07	CHECK VALVE	1
24	5140121-78	MOTOR	1
24	5140121-09	START CAPACITOR	1
24	5140121-10	COVER	1
24	5140121-11	RUN CAPACITOR	1
24	5140121-12	COVER	1
24	5140121-13	START CAPACITOR	1
24	5140121-14	COVER	1

Parts List for DXCMLA3706056 Type 1

Item Number	Part Number	Description	Qty Required
24	5140121-15	RUN CAPACITOR	1
27	5140119-24	COVER	1
28	5140119-25	SCREEN	2
29	5140119-26	FILTER	1
32	5140121-18	HEAD ASSEMBLY	1
34	5140119-28	HEAD GASKET	1
35	5140119-29	VALVE PLATE ASSEMBLY	1
36	5140119-30	GASKET	1
38	5140119-31	CYLINDER	1
39	5140119-32	GASKET	1
40	5140119-33	CRANK CASE	1
41	5140119-34	BREATHER	1
42	5140150-56	CAP ASSEMBLY	1
45	5140119-36	GASKET	1
46	5140119-37	BEARING	1
48	5140119-38	OIL SIGHT GLASS	1
49	5140121-19	CRANKSHAFT	1
50	5140119-40	BEARING	1
51	5140119-41	GASKET	1
52	5140119-42	CARRIER	1
53	5140119-43	OIL SEAL	1
54	5140119-44	FLYWHEEL	1
55	5140119-45	KEY	1
58	000000-00	No Longer Available	2
59	5140121-20	ROD	2
60	5140119-48	PISTON ASSY.	2
61	5140119-49	RING SET	1

Parts List for DXCMLA3706056 Type 1

Item Number	Part Number	Description	Qty Required
62	5140121-21	OVERHAUL KIT	1
63	5140121-22	HEAD/VALVE ASSY.	1
64	5140119-52	GASKET SET	1
65	5140119-55	GAUGE	1
66	5140119-56	PRESSURE SWITCH	1
67	5140119-58	STRAIN RELIEF	1
68	5140119-57	SCREW	1
69	5140119-54	VALVE	1
71	5140119-60	VALVE, BLEEDER	1