


## Parts Breakdown for SLT-1650 Scissor Lift Table

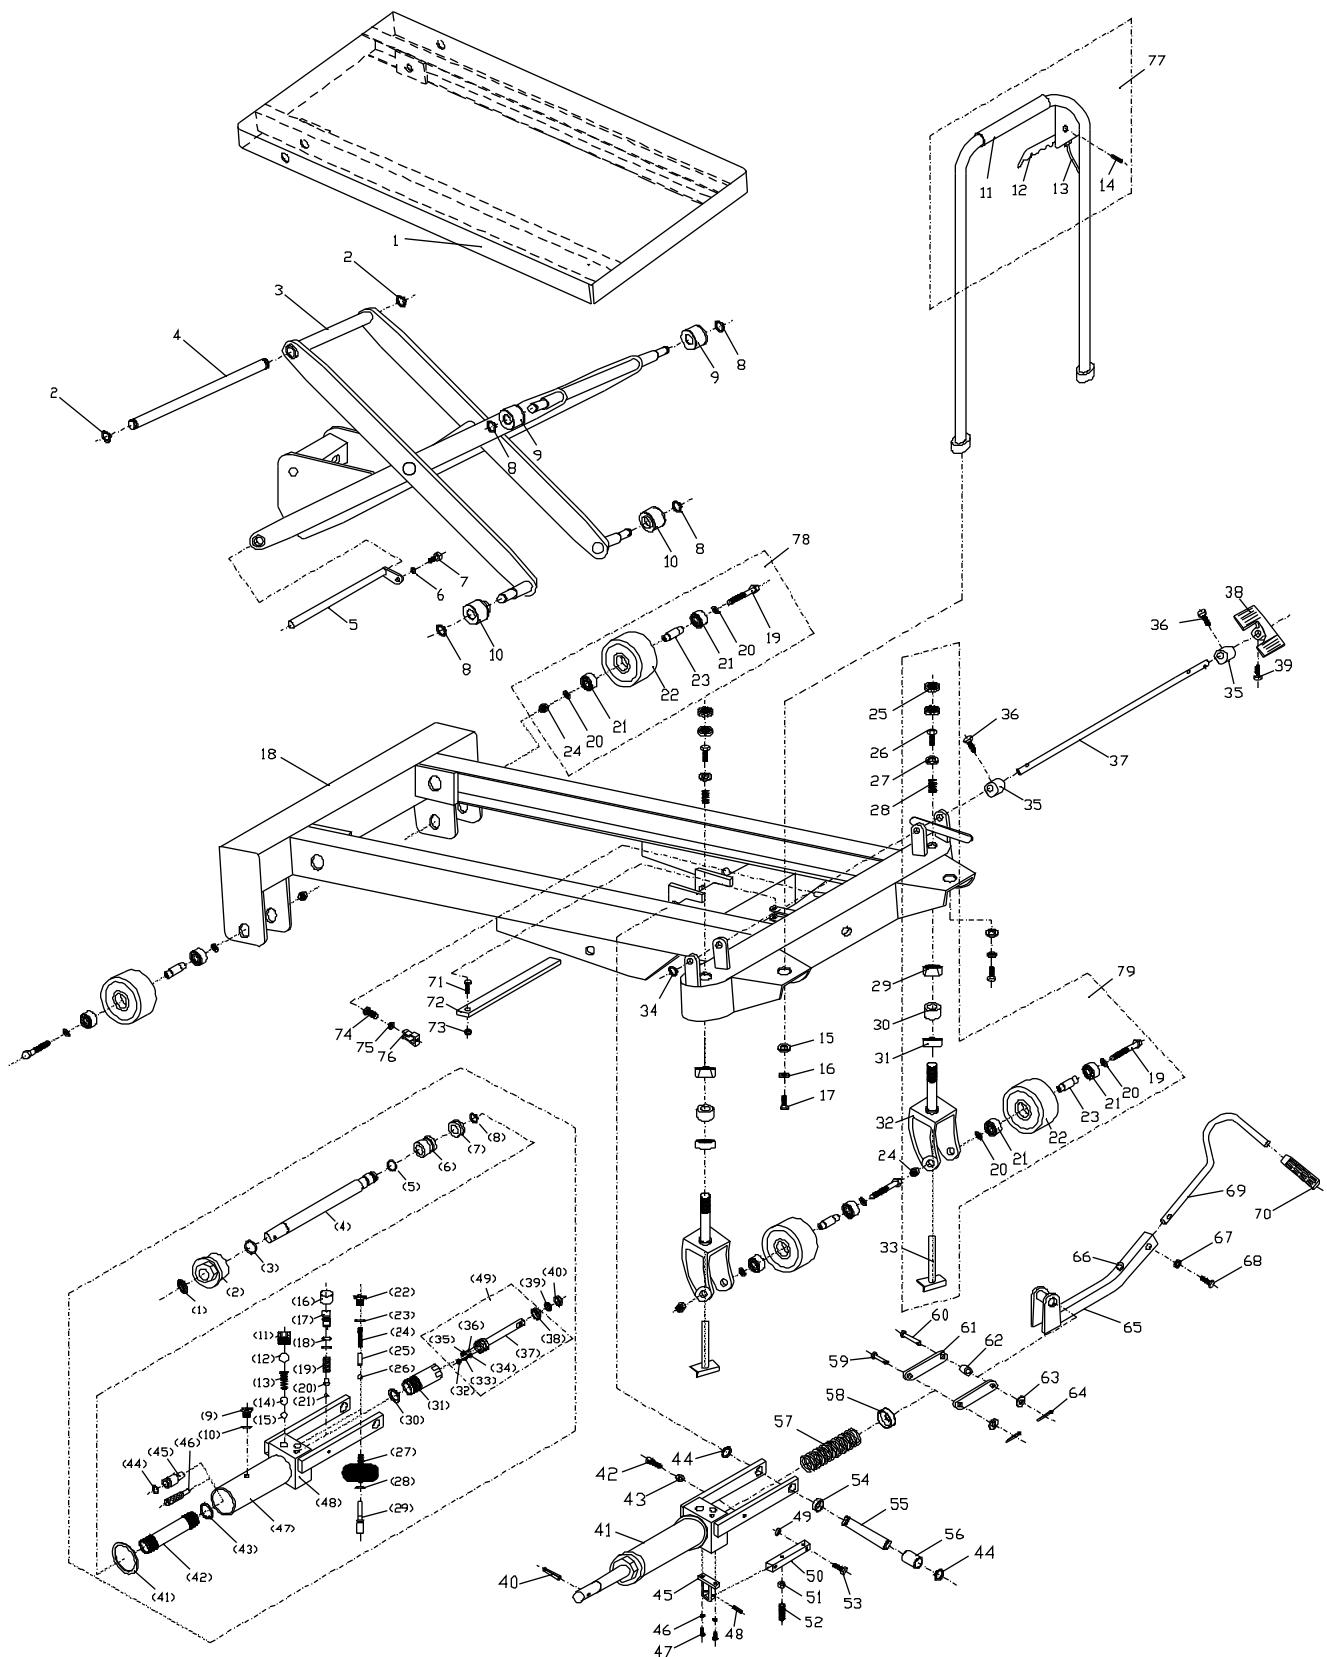

## Parts List for SLT-1650 Scissor Lift Table

Index No.	Part No.	Description	Size	Qty
1.....	SLC1650-1 .....	Table .....		1
2.....	SLC660F-38 .....	C-Ring .....	Ø 20 mm.....	2
3.....	SLC1650-2 .....	Link Assembly .....		1
4.....	SLC1650-3 .....	Link Shaft.....		1
5.....	SLC1650-6 .....	Link Shaft.....		1
6.....	SLT660FH-22 .....	Spring Washer.....	Ø 8 mm.....	1
7.....	SLT660FH-20 .....	Hex Cap Screw .....	M8 x 20.....	1
8.....	SLC1650-4 .....	C-Ring .....	Ø 22 mm.....	4
9.....	SLT1650H-09 .....	Roller Guide .....		2
10.....	SLT1650H-10 .....	Roller Guide .....		2
11.....	SLT1650H-11 .....	Handle .....		1
12.....	SLT660FH-09 .....	Release Lever .....		1
13.....	SLT660FH-10 .....	Cable .....		1
14.....	SLT660FH-11 .....	Spring Pin .....	Ø 6 x 28 mm.....	1
15.....	SLT1650-29 .....	Flat Washer.....	Ø 12 mm.....	2
16.....	SLT1650-61 .....	Spring Washer.....	Ø 12 mm.....	2
17.....	SLT1650H-17 .....	Hex Cap Screw .....	M12 x 25.....	2
18.....	SLT1650H-18 .....	Frame .....		1
19.....	SLT660FH-25 .....	Hex Cap Screw .....	M12 x 95.....	4
20.....	SLT660FH-26 .....	Washer .....	Ø 12 mm.....	8
21.....	BB-6203ZZ .....	Bearing .....	6203Z .....	8
22.....	SLT1650H-22 .....	Wheel .....	Ø 6" .....	4
23.....	SLT1650H-29 .....	Bushing .....		4
24.....	SLT660FH-30 .....	Lock Nut .....	M12 .....	4
25.....	SLT1650H-25 .....	Nut .....	M24 x 1.5 .....	4
26.....	SLC1650-19 .....	Hex Cap Screw .....	M10 x 25 .....	2
27.....	SLC1650-21 .....	Flat Washer .....	Ø 10 mm .....	2
28.....	SLC1650-22 .....	Spring .....		2
29.....	BB-30205 .....	Tapered Roller Bearing .....	30205 .....	2
30.....	SLT1650H-30 .....	Bushing .....		2
31.....	BB-6205 .....	Ball Bearing .....		2
32.....	SLT1650H-32 .....	Wheel Holder .....		2
33.....	SLT1650H-33 .....	Wheel Shaft Holder .....		2
34.....	SLC660F-3 .....	C-Ring .....	Ø 16 mm .....	2
35.....	SLT1650H-35 .....	Block .....		2
36.....	SLT1650H-36 .....	Hex Cap Screw .....	M8 x 25 .....	2
37.....	SLT1650H-37 .....	Brake Shaft .....		1
38.....	SLT1650H-38 .....	Brake Pedal .....		1
39.....	SLT1650H-36 .....	Hex Cap Screw .....	M8 x 25 .....	1
40.....	SLC1650-41 .....	Spring Pin .....	Ø 6 x 45 mm .....	1
41.....	SLT1650H-41 .....	Hydraulic Pump Assembly .....		1
[1].....	SLT660F-36-1 .....	Oil Seal*	DHS30 .....	1
[2].....	SLT1650H-41-2 .....	Top Nut .....		1
[3].....	SLT660F-36-3 .....	O-Ring*	Ø 36x3.5 mm .....	1
[4].....	SLT1650H-41-4 .....	Lift Piston .....		1
[5].....	SLT1650H-41-5 .....	O-Ring*	Ø 21 x 2.4 mm .....	1
[6].....	SLT1650H-41-6 .....	Piston .....		1
[7].....	SLT1650H-41-7 .....	U-Packing*	D50 .....	1
[8].....	SLC1650-4 .....	C-Ring .....	Ø 22 mm .....	1
[9].....	SLT660F-36-8 .....	Air Breather .....		1
[10].....	SLT660F-36-9 .....	O-Ring*	Ø 11x1.9 mm .....	1
[11].....	SLT660F-36-16 .....	Valve Plug .....	M16x2 .....	1
[12].....	SB-12MM .....	Steel Ball .....	Ø 12mm .....	1
[13].....	SLT660F-36-18 .....	Spring .....		1
[14].....	SLT660F-36-19 .....	Steel Ball .....	Ø 9.525 mm .....	1
[15].....	SLT660F-36-20 .....	Steel Ball .....	Ø 6.35 mm .....	1
[16].....	SLT660F-36-10 .....	Relief Plug .....		1

<b>Index No.</b>	<b>Part No.</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
[17]	SLT660F-36-11	Relief Adjusting Screw .....		1
[18]	SLT660F-36-9	O-Ring* .....	Ø 11 x 1.9 mm.....	2
[19]	SLT660F-36-13	Spring .....		1
[20]	SLT660F-36-14	Steel Ball Support .....		1
[21]	SB-5MM.....	Steel Ball.....	Ø 5 mm.....	1
[22]	SLT660F-36-21	Screw .....	M10 x 1.....	1
[23]	SLT660F-36-9	O-Ring* .....	Ø 11 x 1.9 mm.....	1
[24]	SLT660F-36-23	Spring .....		1
[25]	SLT660FH-40-24	Steel Ball Support .....		1
[26]	SB-5MM.....	Steel Ball.....	Ø 5 mm.....	1
[27]	SLT660F-36-25	Spring .....		1
[28]	SLT660F-36-26	O-Ring* .....	Ø 10 x 1.9 mm.....	1
[29]	SLT660F-36-27	Adjusting Shaft .....		1
[30]	SLT660FH-40-29	Inner Washer* .....		1
[31]	SLT660F-36-29	Pump Cylinder.....		1
[32]	SLT660F-36-32	Screw .....		1
[33]	SLT660F-36-33	Valve Plug.....		1
[34]	SLT660F-36-34	Spring .....		1
[35]	SLT660F-36-30	Screw .....		1
[36]	SB-5MM.....	Steel Ball.....	Ø 5 mm.....	1
[37]	SLT660F-36-36	Pump Piston.....		1
[38]	SLT660F-36-35	Oil Seal* .....	UHS23.5 .....	1
[39]	SLT660F-36-37	Oil Seal* .....	UHS18 .....	1
[40]	SLT660F-36-38	U-Packing* .....	DHS18 .....	1
[41]	SLT1650H-41-41	Outer Washer* .....		2
[42]	SLT1650H-41-42	Inside Cylinder Tube .....		1
[43]	SLT1650H-41-43	Inside Washer* .....		1
[44]	SLT660FH-40-43	O-Ring* .....	Ø 12 x 1.9mm.....	1
[45]	SLT660FH-40-44	Special Lowering Valve .....		1
[46]	SLT660FH-40-45	Filter .....		1
[47]	SLT1650H-41-47	Outer Cylinder Tube .....		1
[48]	SLT1650H-41-48	Pump Body .....		1
[49]	SLT1650H-41-49	Pump Piston Assembly (index # [32] thru [38]) .....		1
42	SLT660FH-41	Adjusting Screw .....	M8 x 25.....	1
43	SLT660F-70	Hex Nut.....	M8.....	1
44	SLC660F-38	C-Ring .....	Ø 20 mm.....	2
45	SLT660F-67	Fixed Seat .....		1
46	SLT660F-68	Spring Washer.....	Ø 5 mm.....	2
47	SLT660F-74	Hex Cap Screw .....	M5 x 14.....	2
48	SLT660F-69	Spring Pin .....	Ø 6 x 22 mm.....	1
49	SLT660F-70	Hex Nut.....	M8.....	1
50	SLT660F-73	Fixed Board.....		1
51	SLT660F-70	Hex Nut.....	M8.....	1
52	SLT660F-71	Socket Set Screw .....	M8 x 30.....	1
53	SLT660F-72	Hex Cap Screw .....	M8 x 25.....	1
54	SLT660FH-44	Bushing .....		1
55	SLC660F-39	Shaft .....		1
56	SLT660FH-46	Bushing .....		1
57	SLT1650H-57	Spring .....		1
58	SLC660F-41	Spring Cover .....		1
59	SLT660FH-58	Pin .....		1
60	SLT660FH-59	Pin .....		1
61	SLT1650H-61	Slide Plate .....		1
62	SLT1650H-62	Bushing .....		1
63	SLT660FH-62	Washer .....	Ø 10 mm .....	2
64	SLT660FH-63	Split Pin .....	Ø 3 x 30 mm.....	2
65	SLT1650H-65	Lever .....		1

<b>Index No.</b>	<b>Part No.</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
66 .....	SLC660F-45A.....	Rubber Bumper .....		1
67 .....	SLT660FH-22.....	Spring Washer.....	Ø 8 mm.....	1
68 .....	SLT660FH-67 .....	Hex Cap Screw .....	M8 x 30.....	1
69 .....	SLT1650H-69 .....	Foot Lever.....		1
70 .....	SLC660F-47 .....	Foot Lever Pad.....		1
71 .....	SLT660FH-70 .....	Hex Cap Screw .....	M10 x 30.....	1
72 .....	SLT1650H-72 .....	Safety Bar.....		1
73 .....	SLT660FH-72 .....	Hex Nut.....	M10 .....	1
74 .....	SLT660FH-73 .....	Hex Cap Screw .....	M6 x 10.....	1
75 .....	SLT660FH-74 .....	Spring Washer.....	Ø 6mm.....	1
76 .....	SLT660FH-75 .....	Spring Clip .....		1
77 .....	SLT1650H-77 .....	Handle Assembly (index # 1 thru 14).....		1
78 .....	SLT1650H-78 .....	Front Wheel Assembly (index # 25 thru 30) .....		1
79 .....	SLT1650H-79 .....	Swivel Wheel Assembly (index # 19-33).....		1
	SLT1650-RK .....	Repair Kit .....		1

Index numbers with brackets [ ] are part of the hydraulic pump assembly #41.

Parts included in the SLT1650-RK Repair Kit are indicated by an asterisk \*.