


JLP-75A through JLP-600A – Parts Breakdown

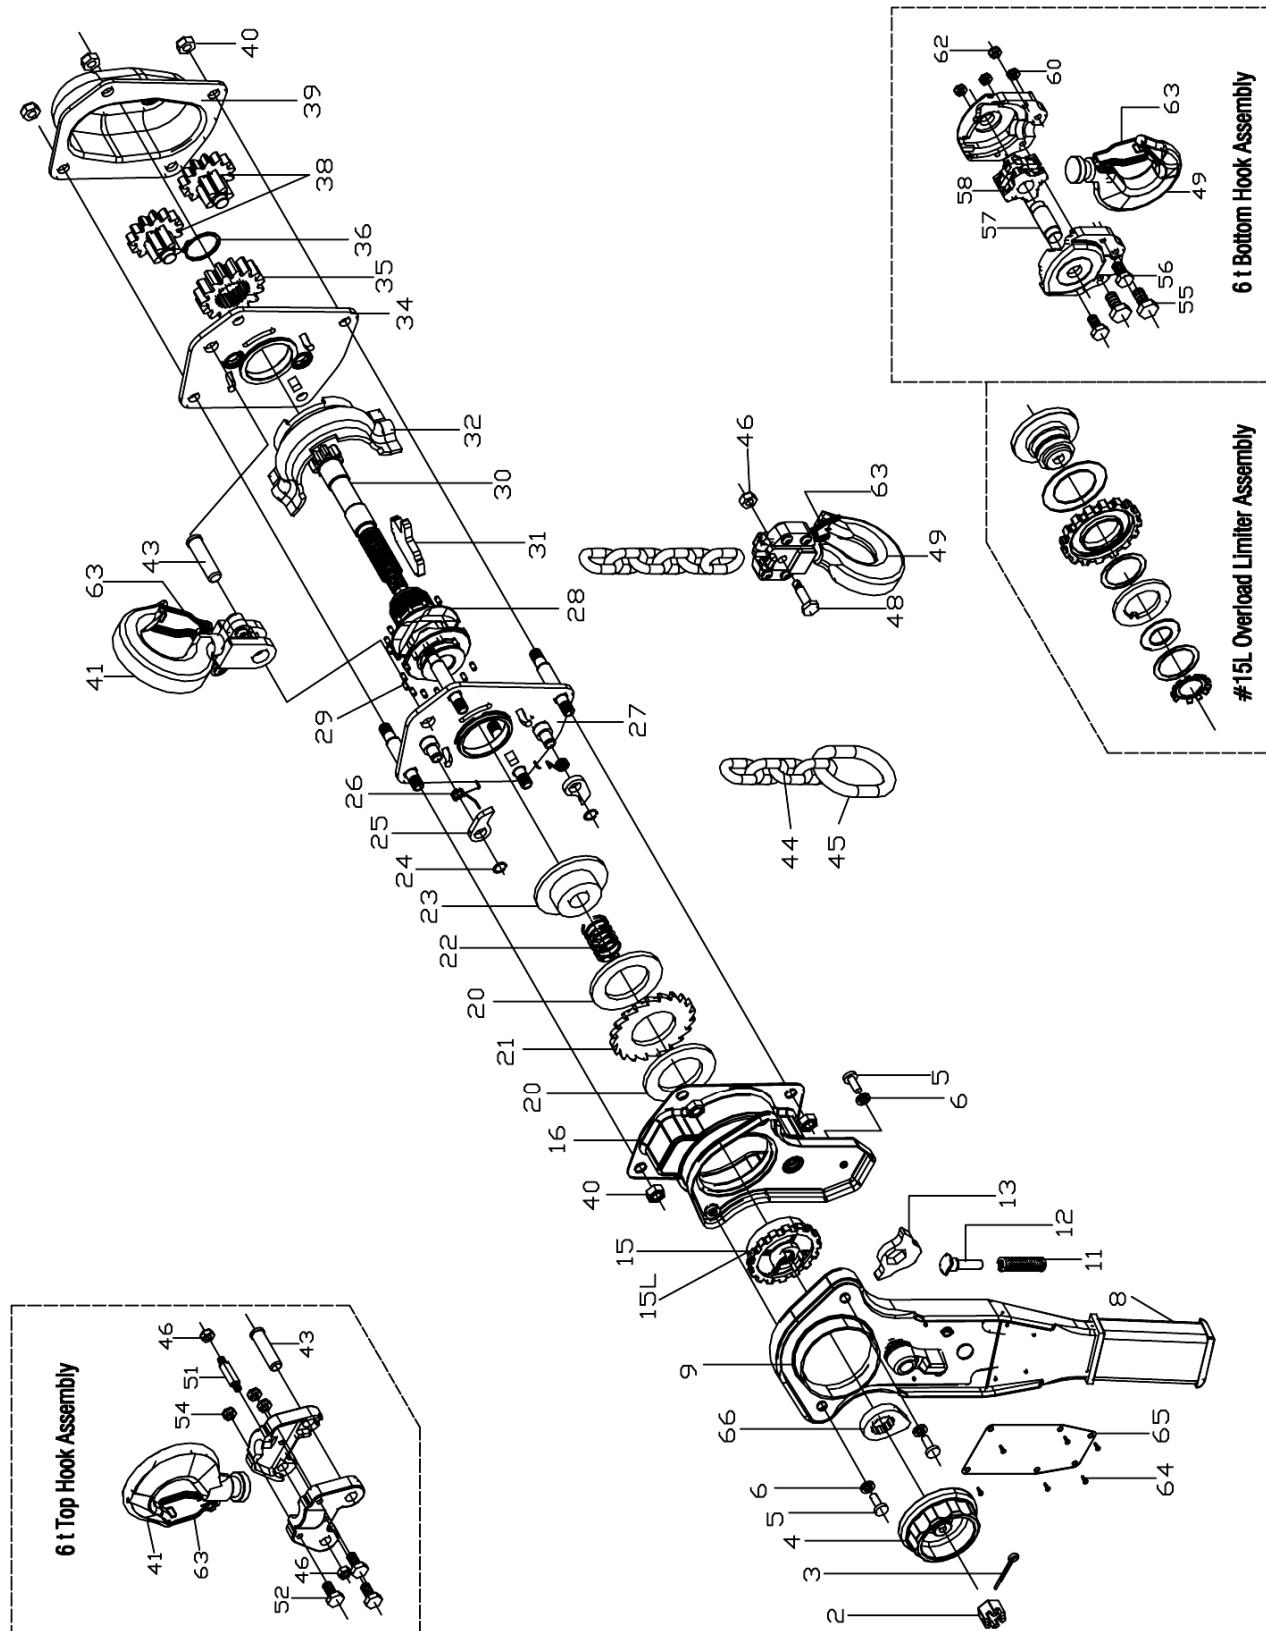

JLP-150A – Parts List

Index No.	Part No.	Description	Size	Qty
2.....	JLP150A-02	Castle Nut (1.5T, 3T, 6T).....	M10	1
3.....	JLP150A-03	Split Pin (1.5T, 3T, 6T).....	2.5x25 mm	1
4.....	JLP150A-04	Handwheel (1.5T, 3T, 6T).....	1
5.....	JLP150A-05	Hex Head Screw (1.5T, 3T, 6T)	M8	3
6.....	JLP150A-06	Spring Washer (1.5T, 3T, 6T)	Ø8 mm	3
8.....	JLP150A-08	Rubber Grip (1.5T, 3T, 6T)	1
9.....	JLP150A-09	Lever Handle Assembly (1.5T, 3T, 6T)	1
	 Selector Lever	1
	 Rubber Grip.....	1
	 Change Over Spring Seat.....	1
	 Reinforced Screw Nut.....	1
	 Rivet.....	2
11.....	JLP150A-11	Change Over Spring (1.5T, 3T, 6T).....	1
12.....	JLP150A-12	Spring Shaft (1.5T, 3T, 6T)	1
13.....	JLP150A-13	Change Over Pawl (1.5T, 3T, 6T)	1
15.....	JLP150A-15	Change Over Gear (1.5T, 3T, 6T)	1
*15L.....	JLP150A-15L	Overload Limiter Assembly	1
	 Overload Limiter Plate	1
	 Friction Disc A	1
	 Change Over Gear	1
	 Friction Disc B	1
	 Pressure Plate.....	1
	 Dish Spring.....	1
	 Disc.....	1
	 Disc Spring Stopper.....	1
	 Adjusting Nut.....	M30	1
16.....	JLP150A-16	Brake Cover Assembly	1
	 Brake Cover	1
	 Handle Case	1
	 Bushing	1
	 Screw Nut.....	2
20.....	JLP150A-20	Friction Disc (1.5T, 3T, 6T).....	2
21.....	JLP150A-21	Ratchet Disc (1.5T, 3T, 6T).....	1
22.....	JLP75A-22	Twisting Spring (0.75T, 1.5T, 3T, 6T).....	1
23.....	JLP150A-23	Brake Seat (1.5T, 3T, 6T)	1
24.....	JLP150A-24	Snap Ring	Ø9 mm	2
25.....	JLP150A-25	Pawl	2
26.....	JLP150A-26	Pawl Spring	2
27.....	JLP150A-27	Lever Side Plate Assembly	1
	 Lever Side Plate	1
	 Stay Bolt.....	4
	 Pawl Pin	2
	 Bearing Race.....	1
28.....	JLP150A-28	Load Sprocket	1
29.....	JLP150A-29	Roller Set (Right and Left)	Ø3x6 mm	74
30.....	JLP150A-30	Driving Pinion	1
31.....	JLP150A-31	Stripper	1
32.....	JLP150A-32	Chain Guide Plate	1
34.....	JLP150A-34	Gear Side Plate Assembly	1
	 Gear Side Plate	1
	 Bearing Race.....	1
	 Bushing	2
35.....	JLP150A-35	Load Gear	1
36.....	JLP150A-36	Snap Ring	Ø30 mm	1
38.....	JLP150A-38	Spur Gear Assembly	2

Index No.	Part No.	Description	Size	Qty
39	JLP150A-39	Gear Cover Assembly		1
		Gear Cover		1
		Bushing		2
		Gear Cover Plate		1
40	JLP75A-40	Lock Nut (0.75T, 1.5T)	M8	8
41	JLP150A-41	Top Hook Assembly		1
		Top Hook		1
		Top Hook Holder		1
		Safety Latch Kit		1
		Top Hook Shaft		1
43	JLP150A-43	Top Hook Shaft		1
44	JLP150A-44	Load Chain – <i>specify length</i>	Ø8x24 mm	1
45	JLP75A-45	Chain Stop (0.75T, 1.5T, 3T, 6T)		1
46	JLP150A-46	Load Pin Nut	M8	1
48	JLP150A-48	Load Pin		1
49	JLP150A-49	Bottom Hook Assembly		1
		Bottom Hook		1
		Bottom Hook Holder		1
		Safety Latch Kit		1
		Rivet		4
		Load Pin		1
		Load Pin Nut	M8	1
63	JLP150A-63	Safety Latch Kit		2
		Safety Latch		2
		Double Spring		2
		Socket Cap Screw	M5x25	2
		Lock Nut	M5	2
64	JLP75A-64	Name Plate Rivet (0.75T, 1.5T, 3T, 6T)	Ø3x6 mm	4
65	JLP150A-65	Name Plate		1
66	JLP150A-66	Stop Knob (1.5T, 3T, 6T)		1

Note: All parts mentioned as assembly are sold as an assembly only.

When ordering replacement chain (#44), specify length.