


JLH Series Lever Hoists (JLH-80/100/160/250/320/630/900)

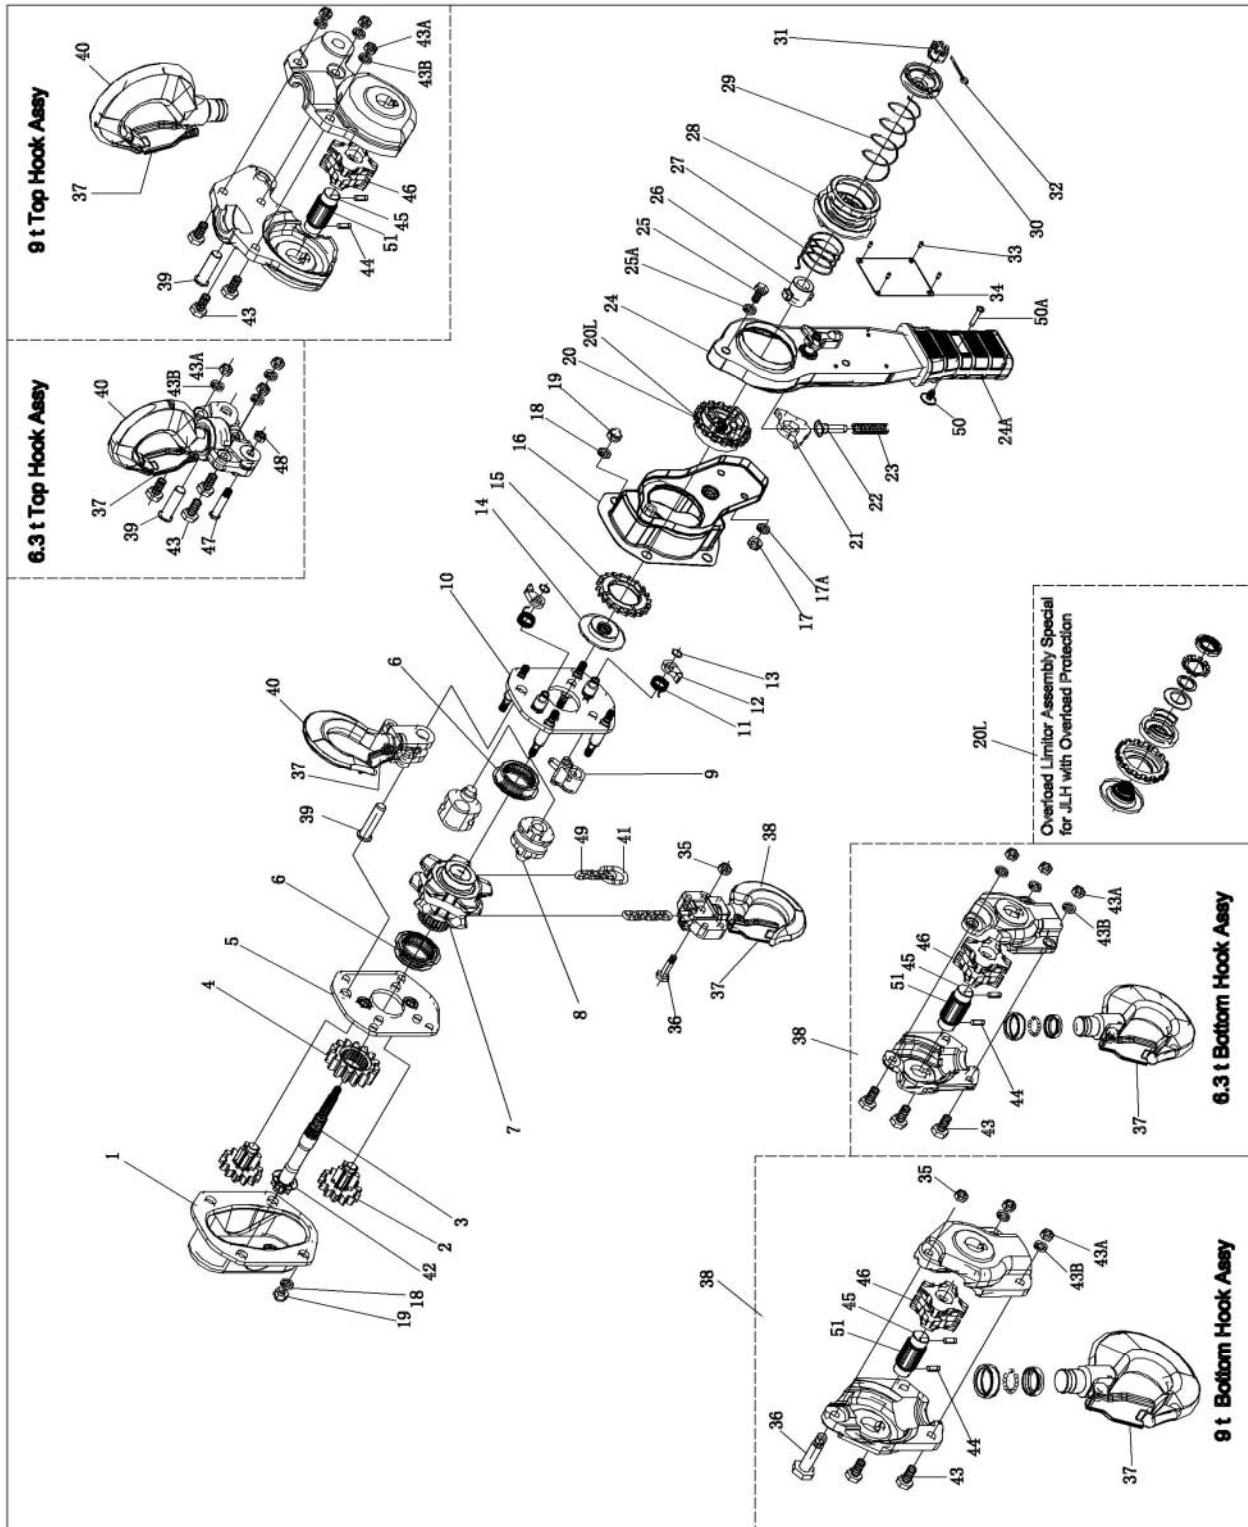

Parts List: JLH-250 (2.5 Ton)

Parts listed under each assembly are parts that make up that assembly.

Index No.	Part No.	Description	Size	Qty
1	JLH250-1	Gear Case Assembly		1
		Gear Case		1
		Bushing		3
		Cover Plate		1
2	JLH250-2	Spur Gear Assembly		2
		Spur Gear		2
		Pinion Gear		2
3	JLH250-3	Driving Shaft		1
	JLH250-3-1	Driving Shaft (<i>models from 02-01-2009 and forward</i>)		1
4	JLH250-4	Load Gear		1
5	JLH250-5	Gear Side Plate Assembly		1
		Gear Side Plate		1
		Bushing		2
6	JLH250-6	Caged Roller Bearings	Ø35xØ45x14mm	2
7	JLH250-7	Load Sheave		1
8	JLH250-8	Guide Roller		2
9	JLH250-9	Stripper		1
10	JLH250-10	Lever Side Plate Assembly		1
		Lever Side Plate		1
		Stay Bolt		4
		Pawl Pin		2
11	JLH250-11	Pawl Spring		2
12	JLH250-12	Pawl		2
13	JLH160-13	Snap Ring (0.8, 1, 1.6, 2.5 Ton)	Ø 9mm	2
14	JLH160-14	Disc Hub (0.8, 1, 1.6, 2.5 Ton)		1
15	JLH160-15	Ratchet Disc (0.8, 1, 1.6, 2.5 Ton)		1
16	JLH250-16	Brake Cover Assembly		1
		Brake Cover		1
		Handle Case		1
		Bushing		1
		Thread Housing		1
17	JLH160-17	Hex Nut (0.8, 1, 1.6, 2.5 Ton)	M6	2
17A	JLH160-17A	Lock Washer (0.8, 1, 1.6, 2.5 Ton)	6mm	2
18	JLH80-18	Lock Washer (0.8 to 9 Ton)	8mm	8
19	JLH80-19	Acorn Nut (0.8 to 9 Ton)	M8	8
20	JLH160-20	Change Over Gear (0.8, 1, 1.6, 2.5 Ton)		1
	JLH160-20-1	Change Over Gear (0.8, 1, 1.6, 2.5 Ton) (<i>models from 02-01-2009 and forward</i>)		1
20L	JLH250-20L	Overload Limiter Assembly (For JLH-250WO-10 only)		1
	JLH250-20L-1	Overload Limiter Assembly (For JLH-250WO-10 only) (<i>models from 02-01-2009 and forward</i>)		1
		Overload Limiting Plate		1
		Change Over Gear		1
		Pressure Plate		1
		Dish Spring		1
		Adjusting Nut	M22x1.25-7H	1
21	JLH160-21	Change Over Pawl (0.8, 1, 1.6, 2.5 Ton)		1
22	JLH160-22	Spring Shaft (0.8, 1, 1.6, 2.5 Ton)		1
23	JLH160-23	Spring (0.8, 1, 1.6, 2.5 Ton)		1
24	JLH160-24	Lever Handle Assembly		1
		Lever Handle		1
		Selector Lever		1
		Change Over Shaft		1
		Bolt		2
		Spring Seat		1
		Bushing		1

24A	JLH160-24A	Rubber Grip (1.6, 2.5 Ton)		1
25	JLH320-25	Hex Cap Screw (2.5, 3.2, 6.3 Ton)	M8 x 14	1
25A	JLH320-25A	Lock Washer (2.5, 3.2, 6.3 Ton)	8mm	1
26	JLH160-26	Cam (0.8, 1, 1.6, 2.5 Ton)		1
	JLH160-26-1	Cam (0.8, 1, 1.6, 2.5 Ton) (<i>models from 05-01-2008 to 01-31-2009</i>)		1
	JLH160-26-2	Cam (0.8, 1, 1.6, 2.5 Ton) (<i>models from 02-01-2009 and forward</i>)		1
27	JLH160-27	Twisting Spring I (0.8, 1, 1.6, 2.5 Ton)		1
28	JLH160-28	Hand Wheel (0.8, 1, 1.6, 2.5 Ton)		1
	JLH160-28-1	Hand Wheel (0.8, 1, 1.6, 2.5 Ton) (<i>models from 02-01-2009 and forward</i>)		1
29	JLH160-29	Twisting Spring II (0.8, 1, 1.6, 2.5 Ton)		1
30	JLH160-30	Twisting Spring Housing (0.8, 1, 1.6, 2.5 Ton)		1
31	JLH160-31	Castle Nut (0.8, 1, 1.6, 2.5 Ton)	M8	1
32	JLH80-32	Split Pin (0.8 to 9 Ton)	2 x 18mm	1
33	JLH80-33	Rivet (0.8 to 9 Ton)	3 x 6mm	4
34	JLH250-34	Name Plate		1
35	JLH160-35	Lock Nut (0.8, 1, 1.6, 2.5 Ton)	M6	1
36	JLH250-36	Bottom Hook Shaft		1
37	JLH250-37	Safety Latch Kit		2
		Safety Latch		2
		Double Spring		2
		Socket Cap Screw	M6 x 33	2
		Lock Nut	M6	2
38	JLH250-38	Bottom Hook Holder Assembly (incls. 35 & 36)		1
	JLH250-38-1	Bottom Hook Holder Assembly (incls. 35 & 36) with Thrust Bearing		1
		<i>(models from 09-15-2009 and forward)</i>		
		Bottom Hook		1
		Safety Latch		1
		Double Spring		1
		Socket Cap Screw	M6 x 33	1
		Lock Nut	M6	1
		Bottom Hook Holder		1
		Rivet	7 x 25mm	4
39	JLH250-39	Top Hook Shaft		1
40	JLH250-40	Top Hook Holder Assembly		1
		Top Hook		1
		Safety Latch		1
		Double Spring		1
		Socket Cap Screw	M6 x 33	1
		Lock Nut	M6	1
		Top Hook Holder		1
		Rivet	7 x 25mm	2
41	JLH250-41	Chain Stop		1
42	JLH250-42	Drive Shaft Washer		1
49	JLH250-49	Load Chain – <i>specify length</i>	Ø8.8 x 24.6mm	1
50	JLH160-50	Rubber Grip Fastening (0.8, 1, 1.6, 2.5 Ton)		1
50A	JLH160-50A	Fastening Screw (0.8, 1, 1.6, 2.5 Ton)		1

Note: Top and bottom hooks are sold as an assembly only.

When ordering replacement chain (#49), specify length.