


JLH Series Lever Hoists (JLH-80/100/160/250/320/630/900)

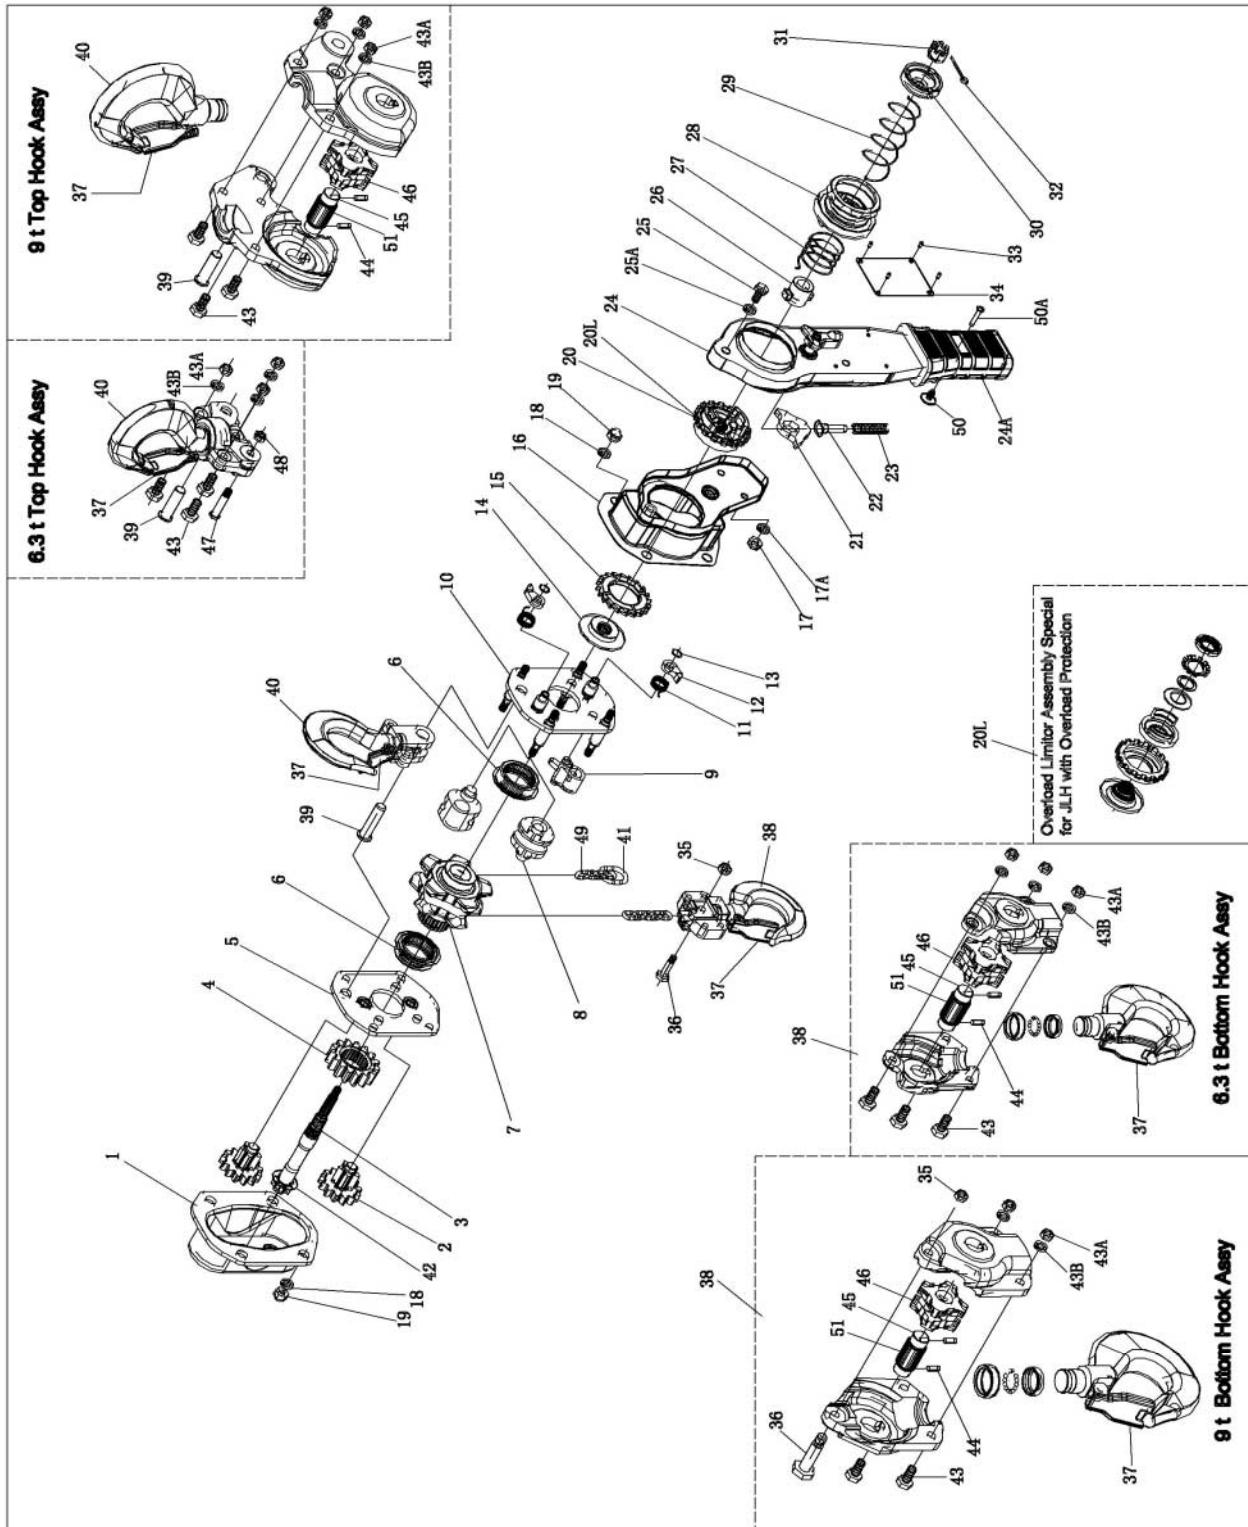

Parts List: JLH-630 (6.3 Ton)

Parts listed under each assembly are parts that make up that assembly.

Index No.	Part No.	Description	Size	Qty
1	JLH320-1	Gear Case Assembly (3.2, 6.3, 9 Ton)		1
	Gear Case		1
	Bushing		3
	Cover Plate		1
2	JLH320-2	Spur Gear Assembly (3.2, 6.3, 9 Ton)		2
	Spur Gear		2
	Pinion Gear		2
3	JLH320-3	Driving Shaft (3.2, 6.3, 9 Ton)		1
	JLH320-3-1	Driving Shaft (3.2, 6.3, 9 Ton) (<i>models from 02-01-2009 and forward</i>)		1
4	JLH320-4	Load Gear (3.2, 6.3, 9 Ton)		1
5	JLH320-5	Gear Side Plate Assembly (3.2, 6.3, 9 Ton)		1
	Gear Side Plate		1
	Bushing		2
6	JLH320-6	Caged Roller Bearings (3.2, 6.3, 9 Ton) $\varnothing 40 \times \varnothing 50 \times 15\text{mm}$		2
7	JLH320-7	Load Sheave (3.2, 6.3, 9 Ton)		1
8	JLH320-8	Guide Roller (3.2, 6.3, 9 Ton)		2
9	JLH320-9	Stripper (3.2, 6.3, 9 Ton)		1
10	JLH320-10	Lever Side Plate Assembly (3.2, 6.3, 9 Ton)		1
	Lever Side Plate		1
	Stay Bolt		4
	Pawl Pin		2
11	JLH320-11	Pawl Spring (3.2, 6.3, 9 Ton)		2
12	JLH320-12	Pawl (3.2, 6.3, 9 Ton)		2
13	JLH320-13	Snap Ring (3.2, 6.3, 9 Ton)	$\varnothing 10\text{mm}$	2
14	JLH320-14	Disc Hub (3.2, 6.3, 9 Ton)		1
15	JLH320-15	Ratchet Disc (3.2, 6.3, 9 Ton)		1
16	JLH320-16	Brake Cover Assembly (3.2, 6.3, 9 Ton)		1
	Brake Cover		1
	Handle Case		1
	Bushing		1
	Thread Housing		1
17	JLH320-17	Hex Nut (3.2, 6.3, 9 Ton)	M8	2
17A	JLH320-17A	Lock Washer (3.2, 6.3, 9 Ton)	8mm	2
18	JLH80-18	Lock Washer (0.8 to 9 Ton)	8mm	8
19	JLH80-19	Acorn Nut (0.8 to 9 Ton)	M8	8
20	JLH320-20	Change Over Gear (3.2, 6.3, 9 Ton)		1
	JLH320-20-1	Change Over Gear (3.2, 6.3, 9 Ton) (<i>models from 02-01-2009 and forward</i>)		1
20L	JLH630-20L	Overload Limiter Assembly (For JLH-630WO-10 only)		1
	JLH630-20L-1	Overload Limiter Assembly (For JLH-630WO-10 only) (<i>models from 02-01-2009 and forward</i>)		1
	Overload Limiting Plate		1
	Change Over Gear		1
	Pressure Plate		1
	Dish Spring		1
	Adjusting Nut	$M22 \times 1.25 - 7H$	1
21	JLH320-21	Change Over Pawl (3.2, 6.3, 9 Ton)		1
22	JLH320-22	Spring Shaft (3.2, 6.3, 9 Ton)		1
23	JLH320-23	Spring (3.2, 6.3, 9 Ton)		1
24	JLH320-24	Lever Handle Assembly (3.2, 6.3, 9 Ton)		1
	Lever Handle		1
	Selector Lever		1
	Change Over Shaft		1
	Bolt		2
	Spring Seat		1
	Bushing		1

24A	JLH320-24A	Rubber Grip (3.2, 6.3, 9 Ton).....	1
25	JLH320-25	Hex Cap Screw (2.5, 3.2, 6.3, 9 Ton).....	1
25A	JLH320-25A	Lock Washer (2.5, 3.2, 6.3, 9 Ton).....	1
26	JLH320-26	Cam (3.2, 6.3, 9 Ton).....	1
	JLH320-26-1	Cam (3.2, 6.3, 9 Ton) (<i>models from 05-01-2008 to 01-31-2009</i>)	1
	JLH320-26-2	Cam (3.2, 6.3, 9 Ton) (<i>models from 02-01-2009 and forward</i>)	1
27	JLH320-27	Twisting Spring I (3.2, 6.3 , 9Ton)	1
28	JLH320-28	Hand Wheel (3.2, 6.3, 9 Ton).....	1
	JLH320-28-1	Hand Wheel (3.2, 6.3, 9 Ton) (<i>models from 02-01-2009 and forward</i>)	1
28L	JLH320-28L	Hand Wheel (3.2, 6.3, 9 Ton).....	1
29	JLH320-29	Twisting Spring II (3.2, 6.3, 9 Ton)	1
30	JLH320-30	Twisting Spring Housing (3.2, 6.3, 9 Ton)	1
31	JLH320-31	Castle Nut (3.2, 6.3, 9 Ton).....	1
32	JLH80-32	Split Pin (0.8 to 9 Ton).....	1
33	JLH80-33	Rivet (0.8 to 9 Ton).....	4
34	JLH630-34	Name Plate	1
37	JLH630-37	Safety Latch Kit	2
		Safety Latch	2
		Double Spring.....	2
		Socket Cap Screw	2
		Lock Nut.....	2
38	JLH630-38	Bottom Hook Holder Assembly (incls.35 & 36)	1
	JLH630-38-1	Bottom Hook Holder Assembly (incls. 35 & 36) with Thrust Bearing	1
		(<i>models from 09-15-2009 and forward</i>)	
		Bottom Hook	1
		Safety Latch	1
		Double Spring.....	1
		Socket Cap Screw	1
		Lock Nut.....	1
		Bottom Hook Holder	2
		Socket Cap Screw	3
		Lock Nut.....	3
		Straight Pin.....	2
		Idle Shaft.....	1
		Idle Sheave	1
		Needle Bearing.....	29
39	JLH320-39	Top Hook Shaft (3.2, 6.3, 9 Ton).....	1
40	JLH630-40	Top Hook Holder Assembly	1
		Top Hook	1
		Safety Latch	1
		Double Spring.....	1
		Socket Cap Screw	1
		Lock Nut.....	1
		Top Hook Holder	1
		Rivet.....	3
41	JLH320-41	Chain Stop (3.2, 6.3, 9 Ton).....	1
42	JLH320-42	Drive Shaft Washer (3.2, 6.3, 9 Ton).....	1
43	JLH630-43	Socket Cap Screw (<i>includes 43A nut, 43B washer</i>).M10 x 32	3
44	JLH630-44	Straight Pin.....	2
45	JLH630-45	Idle Shaft (6.3, 9T).....	1
46	JLH630-46	Idle Sheave (6.3, 9T)	1
47	JLH630-47	Chain Pin	1
48	JLH630-48	Lock Nut.....	4
49	JLH320-49	Load Chain (3.2, 6.3, 9 Ton) – <i>specify length</i>	2
50	JLH320-50	Rubber Grip Fastening (3.2, 6.3, 9 Ton)	1
50A	JLH320-50A	Fastening Screw (3.2, 6.3, 9 Ton)	1
51	JLH900-51	Needle Bearing.....	29

Note: Top and bottom hooks are sold as an assembly only.

When ordering replacement chain (#49), specify length.