

Parts List - Head Model J-A3816


Item	Part No.	Description	Size	Qty.
1.....	5507580.....	Chuck (with Key)		1
2A.....	5507495.....	Arbor	#2 MT x JT3	1
3A.....	5507496A.....	Spindle Assembly		1
4.....	J-5053070.....	Quill Band		1
5.....	9010541.....	O-Ring		1
6.....	9054511.....	Set Screw5/16-18 x 3/8	2
6-1.....	9054511A.....	Flat Head ScrewM6 x 16.....	1
7.....	5032611.....	Bearing Retainer		1
8.....	9100331.....	Bearing6203ZZ	1
8-1.....	9100331A.....	Bearing6204ZZ	1
9.....	5041010.....	Quill		1
10.....	9058561.....	Wavy Spring Washer		1
11.....	9074081.....	Truarc Retainer		1
13.....	9056981.....	Hex Jam Nut1/4-20	3
16.....	9052711.....	Self Tapping Screw.....	.8-32 x 3/8.....	4
17.....	5518157.....	Power Cord (Single Phase)		1
17A.....	5517463.....	Power Cord (3-Phase)		1
18A.....	5507500.....	Switch (Single Phase)		1
	5507497.....	Switch (3-Phase)		1
19A.....	5507501.....	Slotted Machine Screw		4
21.....	5518158.....	Wiring Harness (1-Phase)		1
	5517457.....	Wiring Harness (3-Phase)		1
24A.....	5507502.....	Socket Head Cap Screw		3
25A.....	5507503.....	Return Spring Assemly.....		1
26A.....	5507504.....	Nylon Nut		1
27.....	5518159.....	Phillips Screw1/4-20 x 5/16	2
28.....	5518160.....	Cover Plate		1
29.....	9127731.....	Socket Set Screw5/16-18 x 5/16	1
30.....	5024541.....	Head Lock (Plain Side)		1
31.....	1000771.....	Lock Nut Assembly		1
33.....	9053661.....	Retainer		1
34.....	5041201.....	Bearing Spacer.....		1
35.....	9100321.....	Bearing		2
36.....	9070291.....	Knob		3
37.....	J-5053000.....	Spoke		3
38.....	J-5507827.....	Feed Shaft Assembly		1
40.....	5053100A.....	Rod, Graduated.....		1
41.....	9056381.....	Jam Nut5/8-11	3
41-1.....	9056381A.....	NutM10xP1.5/Spring Washer	M10	1
42.....	9128611.....	Hex Head Cap Screw.....	.1/2-13 x 4	1
44.....	9052191.....	Socket Set Screw5/16-18 x 1/2	4
45-1.....	5032781-1.....	Motor Plate Bar (Serial no: 11110696 and higher).		4
46.....	9057111.....	Whiz Flange Locknut		4
48.....	9056171.....	Carriage Bolt5/16-18 x 1-1/2	4
49-1.....	9058051-1.....	Set Screw (Serial no: 11110696 and higher).5/16"	4
51.....	5518161.....	Step Pulley (Motor)		1
52.....	5518162.....	Socket Set Screw1/4-20 x 5/16	2
53.....	5042011.....	Key (Motor)		1
54.....	5518163.....	Drive Belt		1
55.....	5518164.....	Step Pulley (Spindle)		1
55A.....	5518165.....	Spindle Pulley Shaft.....		1
55B.....	5518166.....	Key5 x 45.....	1
57.....	9058571.....	Spring Washer		2
61.....	9057461.....	Washer1/4	3
62.....	9052101.....	Hex Head Cap Screw.....	.1/4-20 x 1	4
63.....	J-5518167.....	Mounting Plate		1

Parts List - Head Model J-A3816

Item	Part No.	Description	Size	Qty.
64	9138011	Self Tapping Screw.....	#10 x 3/4 Type A	4
69	J-5518168	Pulley Cover (w/door & latch)		1
70	J-5518169	Face Plate.....		1
75	J-5041000	Head Casting		1
76	J-5518167L	Left Mounting Plate.....		1
86	9129051	Hex Nut.....	7/16-14	1
87	J-5041470	Collar.....		1
88	9128071	Hex Head Cap Screw	7/16-14 x 3-1/2	1
89-1	J-5032560-1	Motor Mounting Bracket (<i>Serial no: 11110696 and higher</i>)		1
94	9055281	Rubber Washer		4
96	5507505	Return Spring Bracket.....		1
97	5507507	Drift Pin.....		1
98	5507506	Switch Mounting Plate.....		1
99	5507527A	Quill Assembly (see Note)		1
100	J-5507812	Motor, 1 PH 115/220.....	1725 RPM 60 Hz	1
	J-5514604	Motor, 1PH 115/220.....	1725 RPM 50 Hz	1
	J-5507813	Motor, 3 PH 220/440.....	1725 RPM 50/60 Hz ...	1

Note: Quill assembly includes items 5, 7, 8, 8-1, 9, 10 and 11.

Exploded View — Head Model J-A3816

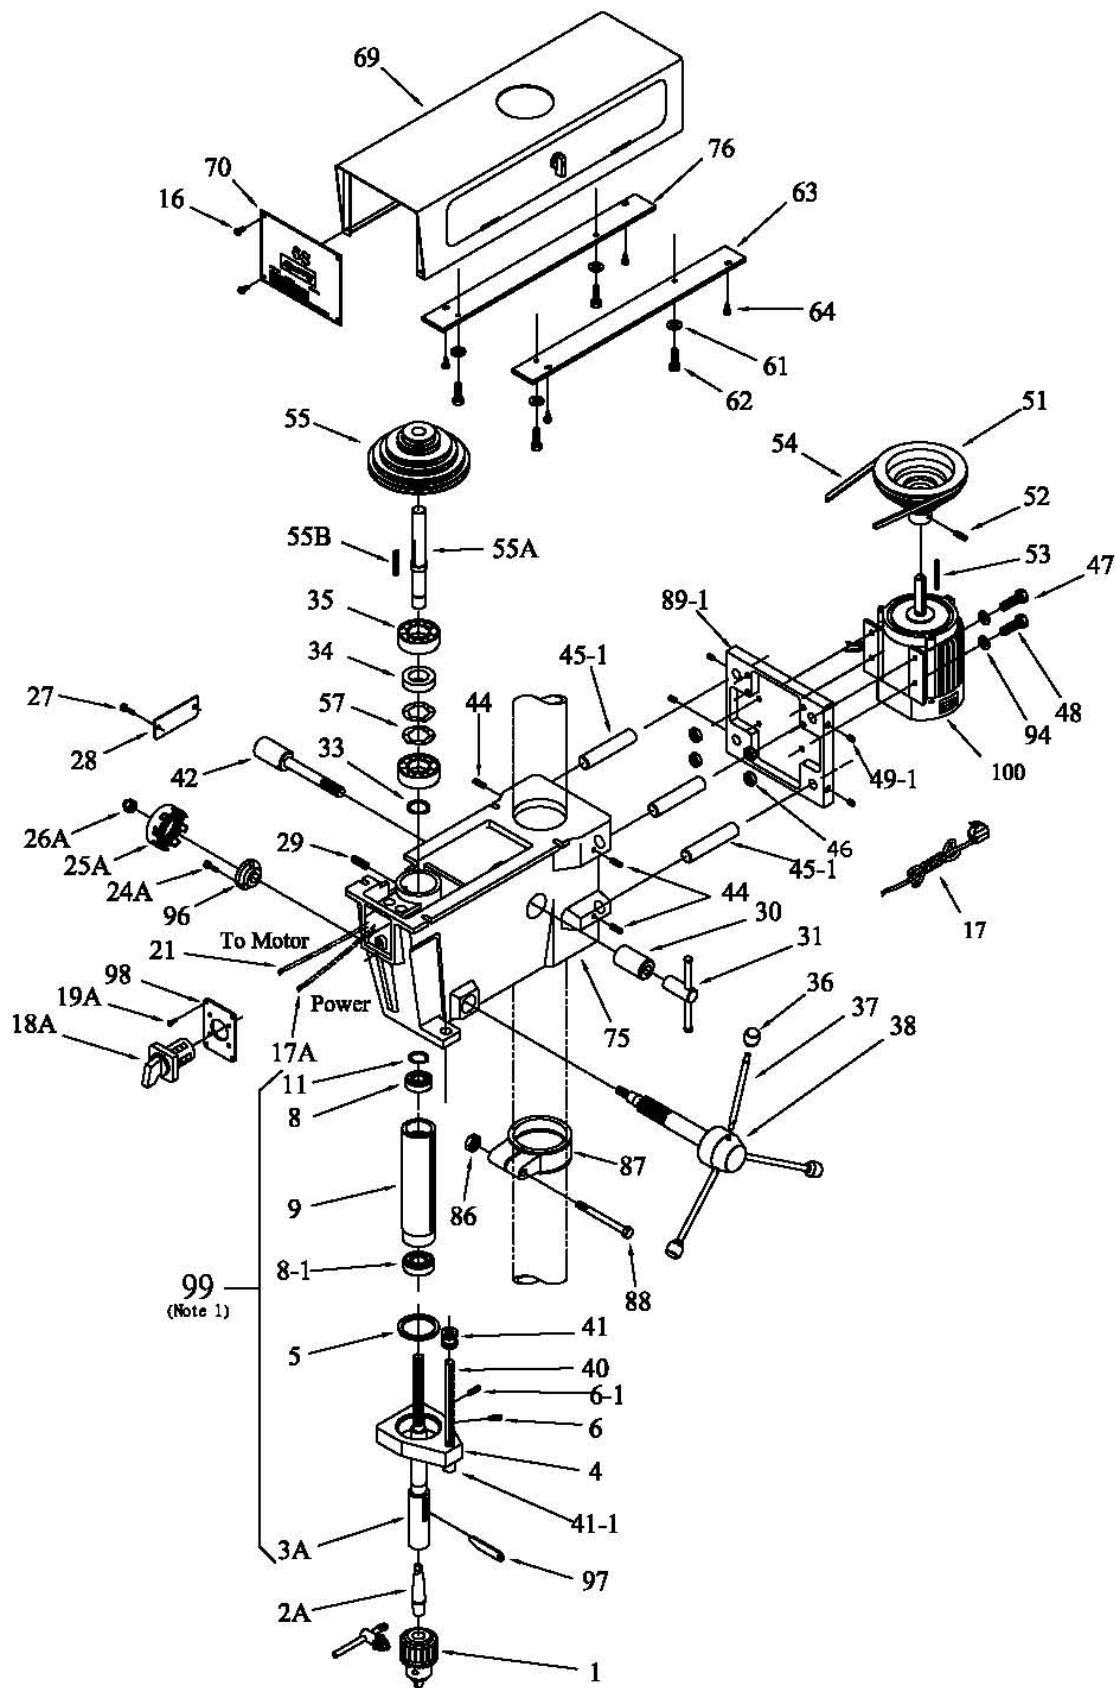

Parts List – Base Floor Models J-A3816, J-A5816 and J-A5818

Item	Part No.	Description	Size	Qty.
1.....	1000771.....	Locknut		1
2.....	5003751.....	Table Lock (Plain Side)		1
3.....	J-5507508.....	Table		1
4.....	5507509.....	Hex Head Cap Screw.....		1
5.....	TS-0061091.....	Cap Screw	7/16-14 x 3-1/2.....	1
6.....	J-5041470.....	Collar		1
7.....	9129051.....	Hex Nut.....	7/16-14	1
8.....	J-5507528.....	Base		1
9.....	5507510.....	Standard Column.....		1
	5511850.....	Short Column		1
10.....	J-5507511.....	Flange (Base/Column)		1
11.....	5630771.....	HHCS	1/2-12 x 1-1/2.....	4
12.....	J-5507571.....	Cover Plate		1
13.....	5507570.....	Bushing.....		1
14.....	5507513.....	Worm, Table Raiser		1
15.....	5507514.....	Gear, Table Raiser		1
16.....	5507515.....	Shaft, Table Raiser		1
17.....	5507516.....	C-Ring, Table Raiser		2
18.....	TS-0050051.....	SHCS	1/4 x 1.....	4
19.....	5507518.....	Socket Head Set Screw	5/16-18 x 3/8	1
20.....	J-5507519.....	Crank, Table Raiser		1
21.....	5507520.....	Handle, Table Raiser		1
22.....	5507521.....	Rack		1
23.....	J-5507522.....	Rack Ring		1
25.....	5507816.....	Table Raiser Assembly (includes index# 12 thru 17)		1

Exploded View – Base Floor Models J-A3816, J-A5816 and J-A5818

