


### 12.1.1 Variable Speed Head – Exploded View

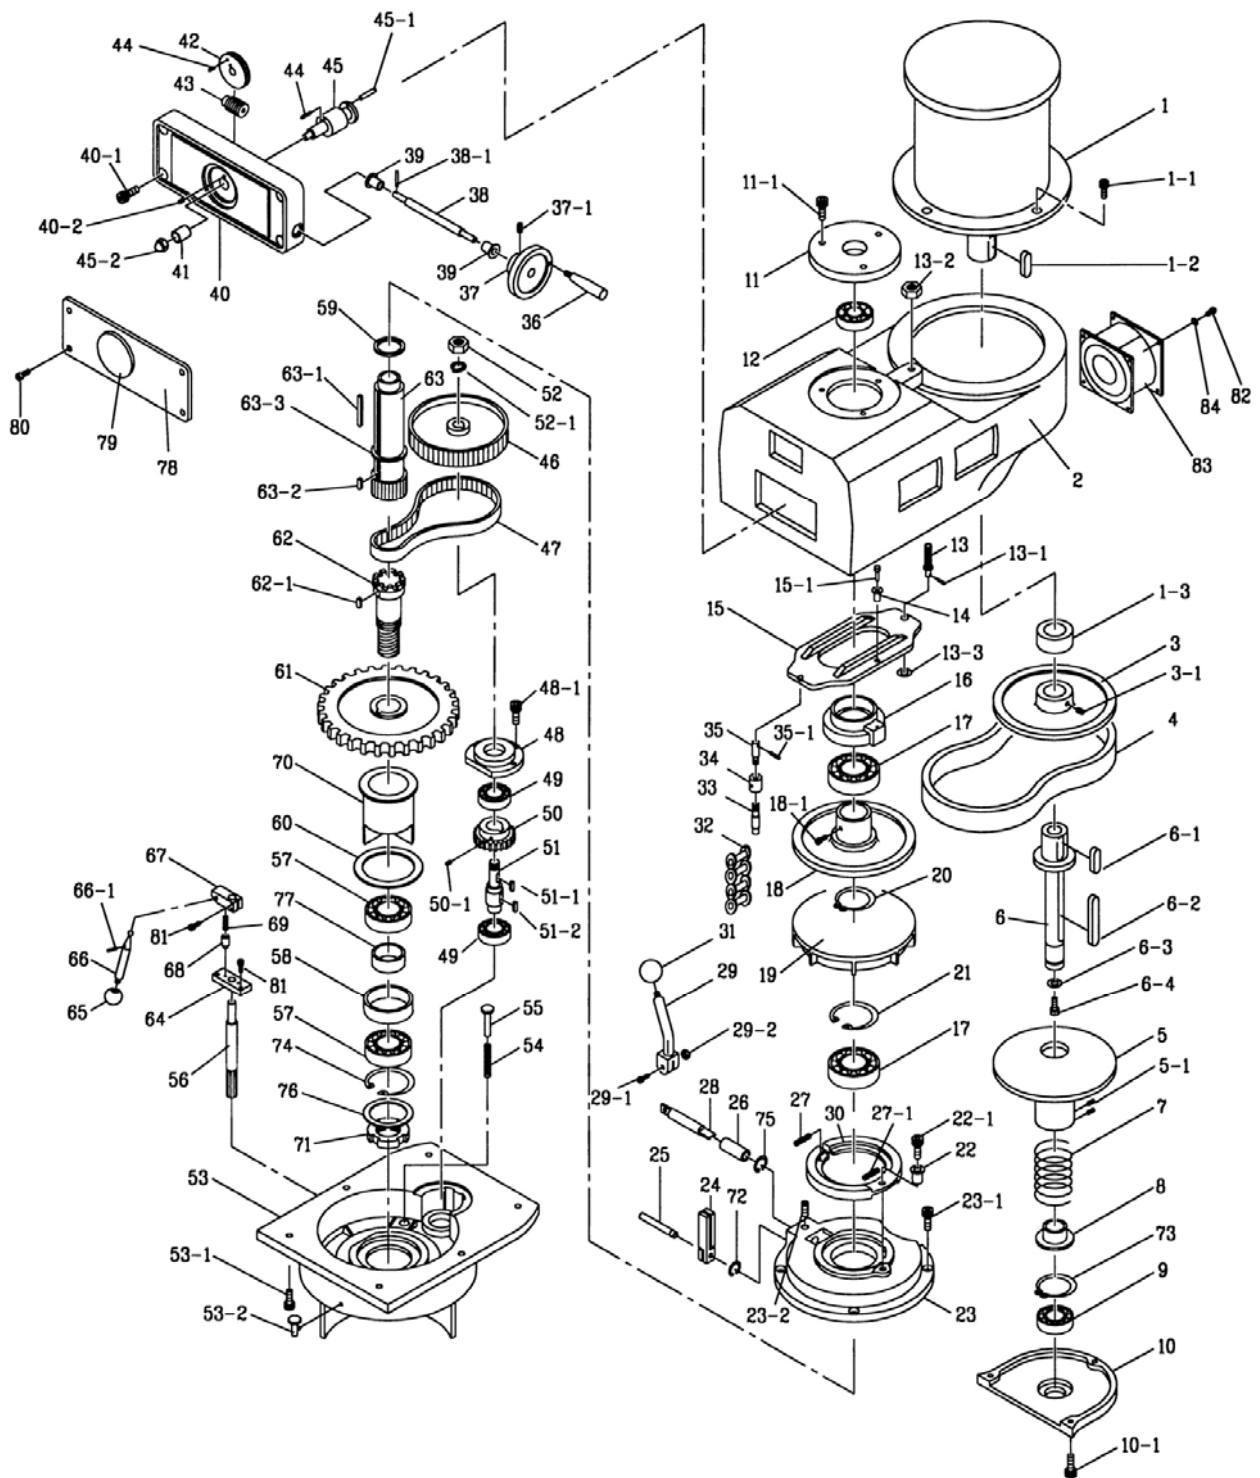


## 12.1.2 Variable Speed Head – Parts List

Index No	Part No	Description	Size	Qty
1.....	JTM1055-V01 .....	Motor .....		1
1-1.....	TS-0209051 .....	Hex Socket Cap Screw .....	3/8"x1"	3
1-2.....	JTM1055-V01-2 .....	Key .....	6x7x30	1
1-3.....	JTM1055-V01-3 .....	Spacer .....		1
2.....	JTM1055-V02 .....	Housing .....		1
3.....	JTM1055-V03 .....	Motor Pulley .....		1
3-1.....	JTM1055-V03-1 .....	Set Screw .....		1
4.....	JTM1055-V04 .....	Belt .....	900VC3830	1
5.....	JTM1055-V05 .....	Motor Pulley .....		1
5-1.....	JTM1055-V05-1 .....	Screw .....		2
6.....	JTM1055-V06 .....	Shaft .....		1
6-1.....	JTM1055-V06-1 .....	Key .....	7x6x30	1
6-2.....	JTM1055-V06-2 .....	Key .....	7x7x55	1
6-3.....	JTM1055-V06-3 .....	Flat Washer .....	M8	1
6-4.....	TS-1504111 .....	Hex Socket Cap Screw .....	M8x55	1
7.....	JTM1055-V07 .....	Spring .....		1
8.....	JTM1055-V08 .....	Bushing .....		1
9.....	BB-6005ZZ .....	Ball Bearing .....	6005ZZ	1
10.....	JTM1055-V10 .....	Motor Pulley Cover .....		1
10-1.....	TS-1502041 .....	Hex Socket Cap Screw .....	M5x16	3
11.....	JTM1055-V11 .....	Bearing Cover .....		1
11-1.....	TS-10503051 .....	Hex Socket Cap Screw .....	M6x20	3
12.....	BB-6009ZZ .....	Ball Bearing .....	6009ZZ	1
13.....	JTM1055-V13 .....	Regulating Screw .....		1
13-1.....	JTM1055-V13-1 .....	Spring Pin .....		1
13-2.....	JTM1055-V13-2 .....	Hex Nut .....		1
13-3.....	JTM1055-V13-3 .....	Washer .....		1
14.....	JTM1055-V14 .....	Bushing .....		2
15.....	JTM1055-V15 .....	Tilter .....		1
15-1.....	JTM1055-V15-1 .....	Screw .....		2
16.....	JTM1055-V16 .....	Support .....		1
17.....	BB-6012ZZ .....	Ball Bearing .....	6012ZZ	2
18.....	JTM1055-V18 .....	Drive Pulley .....		1
18-1.....	JTM1055-V18-1 .....	Drive Pulley Screw .....		1
19.....	JTM1055-V19 .....	Steady Pulley .....		1
20.....	JTM1055-V20 .....	C-Clip .....	S50	1
21.....	JTM1055-V21 .....	C-Clip .....	R95	1
22.....	JTM1055-V22 .....	Bushing .....		1
22-1.....	TS-1052021 .....	Hex Socket Cap Screw .....	M5x6	1
23.....	JTM1055-V23 .....	Lower Housing Cover .....		1
23-1.....	TS-1504051 .....	Hex Socket Cap Screw .....	M8x25	3
23-2.....	JTM1055-V23-2 .....	Set Screw .....	M6x6	1
24.....	JTM1055-V24 .....	Brake Stud .....		2
25.....	JTM1055-V25 .....	Brake Finger Pivot Stud .....		1
26.....	JTM1055-V26 .....	Brake Shaft Sleeve .....		1
27.....	JTM1055-V27 .....	Brake Spring .....		1
27-1.....	JTM1055-V27-1 .....	Brake Spring (short) .....		1
28.....	JTM1055-V28 .....	Brake Lock Shaft .....		1
29.....	JTM1055-V29 .....	Brake Lock Handle .....		1
29-1.....	TS-1503061 .....	Hex Socket Cap Screw .....	M6x25	1
29-2.....	JTM1055-V29-2 .....	Hex Nut .....	M6	1
30.....	JTM1055-V30A .....	Brake Assembly (Includes: #27, 27-1, 22, 22-1)..1		
31.....	JTM1055-V31 .....	Plastic Ball .....		1
32.....	JTM1055-V32 .....	Chain .....		1
33.....	JTM1055-V33 .....	Adjustment Stud .....		1
34.....	JTM1055-V34 .....	Sleeve Nut .....		1

<b>Index No</b>	<b>Part No</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
35	JTM1055-V35	Adjustment Stud .....		1
35-1	JTM1055-V35-1	Pin .....		1
36	JTM1055-V36	Wheel Handle .....		1
37	JTM1055-V37	Wheel .....		1
37-1	TS-1523031	Set Screw .....	M6x8	1
38	JTM1055-V38	Dial Control Shaft .....		1
38-1	JTM1055-V38-1	Spring Pin .....		1
39	JTM1055-V39	Bushing .....		2
40	JTM1055-V40	Dial Housing .....		1
40-1	TS-1502081	Hex Socket Cap Screw .....	M5x35	3
40-2	JTM1055-V40-2	Screw .....		1
41	JTM1055-V41	Bushing .....		1
42	JTM1055-V42	Worm Gear .....		1
43	JTM1055-V43	Worm .....		1
44	JTM1055-V44	Spring Pin .....		2
45	JTM1055-V45	Shaft .....		1
45-1	JTM1055-V45-1	Spring Pin .....		1
45-2	JTM1055-V45-2	Nut .....		1
46	JTM1055-V46	Timing Belt Pulley .....		1
47	JTM1055-V47	Belt .....	8M560	1
48	JTM1055-V48	Bearing Retainer .....		1
48-1	TS-1502051	Hex Socket Cap Screw .....	M5x20	1
49	JTM1055-V49	Ball Bearing .....	6203-2RS	2
50	JTM1055-V50	Bull Gear .....		1
50-1	JTM1055-V50-1	Set Screw .....	M8x6	1
51	JTM1055-V51	Counter Shaft .....		1
51-1	JTM1055-V51-1	Key .....	5x5x15	1
51-2	JTM1055-V51-2	Key .....	5x5x18	1
52	JTM1055-V52	Nut .....	5/8"	1
52-1	TS-0720131	Lock Washer .....	5/8"	1
53	JTM1055-V53	Lower Housing .....		1
53-1	TS-1504041	Hex Socket Cap Screw .....	M8x20	6
53-2	JTM1055-V53-2	Oil Cup .....		1
54	JTM1055-V54	Spring .....		3
55	JTM1055-V55	Spring Shaft .....		3
56	JTM1055-V56	Pinion Gear .....		1
57	JTM1055-V57	Ball Bearing .....	6910ZZ	2
58	JTM1055-V58	Spacer .....		1
59	JTM1055-V59	Spacer .....		1
60	JTM1055-V60	Spacer .....		1
61	JTM1055-V61	Spindle Gear .....		1
62	JTM1055-V62	Spindle Gear Hub .....		1
62-1	JTM1055-V62-1	Key .....	8x7x12	1
63	JTM1055-V63	Spindle Pulley Hub .....		1
63-1	JTM1055-V63-1	Key .....	8x7x60	1
63-2	JTM1055-V63-2	Key .....	8x8x20	1
63-3	JTM1055-V63-3	Spacer .....		1
64	JTM1055-V64	Deter Plate .....		1
65	JTM1055-V65	Plastic Ball .....		1
66	JTM1055-V66	Pinion Crank .....		1
66-1	JTM1055-V66-1	Spring Pin .....		1
67	JTM1055-V67	Pinion Block .....		1
68	JTM1055-V68	Detent .....		1
69	JTM1055-V69	Spring .....		1
70	JTM1055-V70	Rack Cup .....		1
71	JTM1055-V71	Lock Nut .....		1
72	JTM1055-V72	C-Clip .....	S8	1
73	JTM1055-V73	C-Clip .....	S25	1

<b>Index No</b>	<b>Part No</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
74	JTM1055-V74	C-Clip	R72	1
75	JTM1055-V75	C-Clip	S12	1
76	JTM1055-V76	Spacer		1
77	JTM1055-V77	Spacer		1
78	JTM1055-V78	Face Plate		1
79	JTM1055-V79	Dial Plate		1
80	JTM1055-V80	Screw	1/8"x1/4"	4
81	TS-1502041	Hex Socket Cap Screw	M5x16	4
82	JTM1055-V82	Screw	1/8"x1"	4
83	JTM1055-V83	Fan Assembly		1
84	JTM1055-V84	Flat Washer	1/8"	1
	JTM1055-WBC	Wiring Box Cover (not shown)		1
	JTM1055-PSC	Plastic Side Cover (not shown)		2
	JTM1055-JET	JET Plaque (not shown)		1

### **12.2.1 Head Assembly – Exploded View**

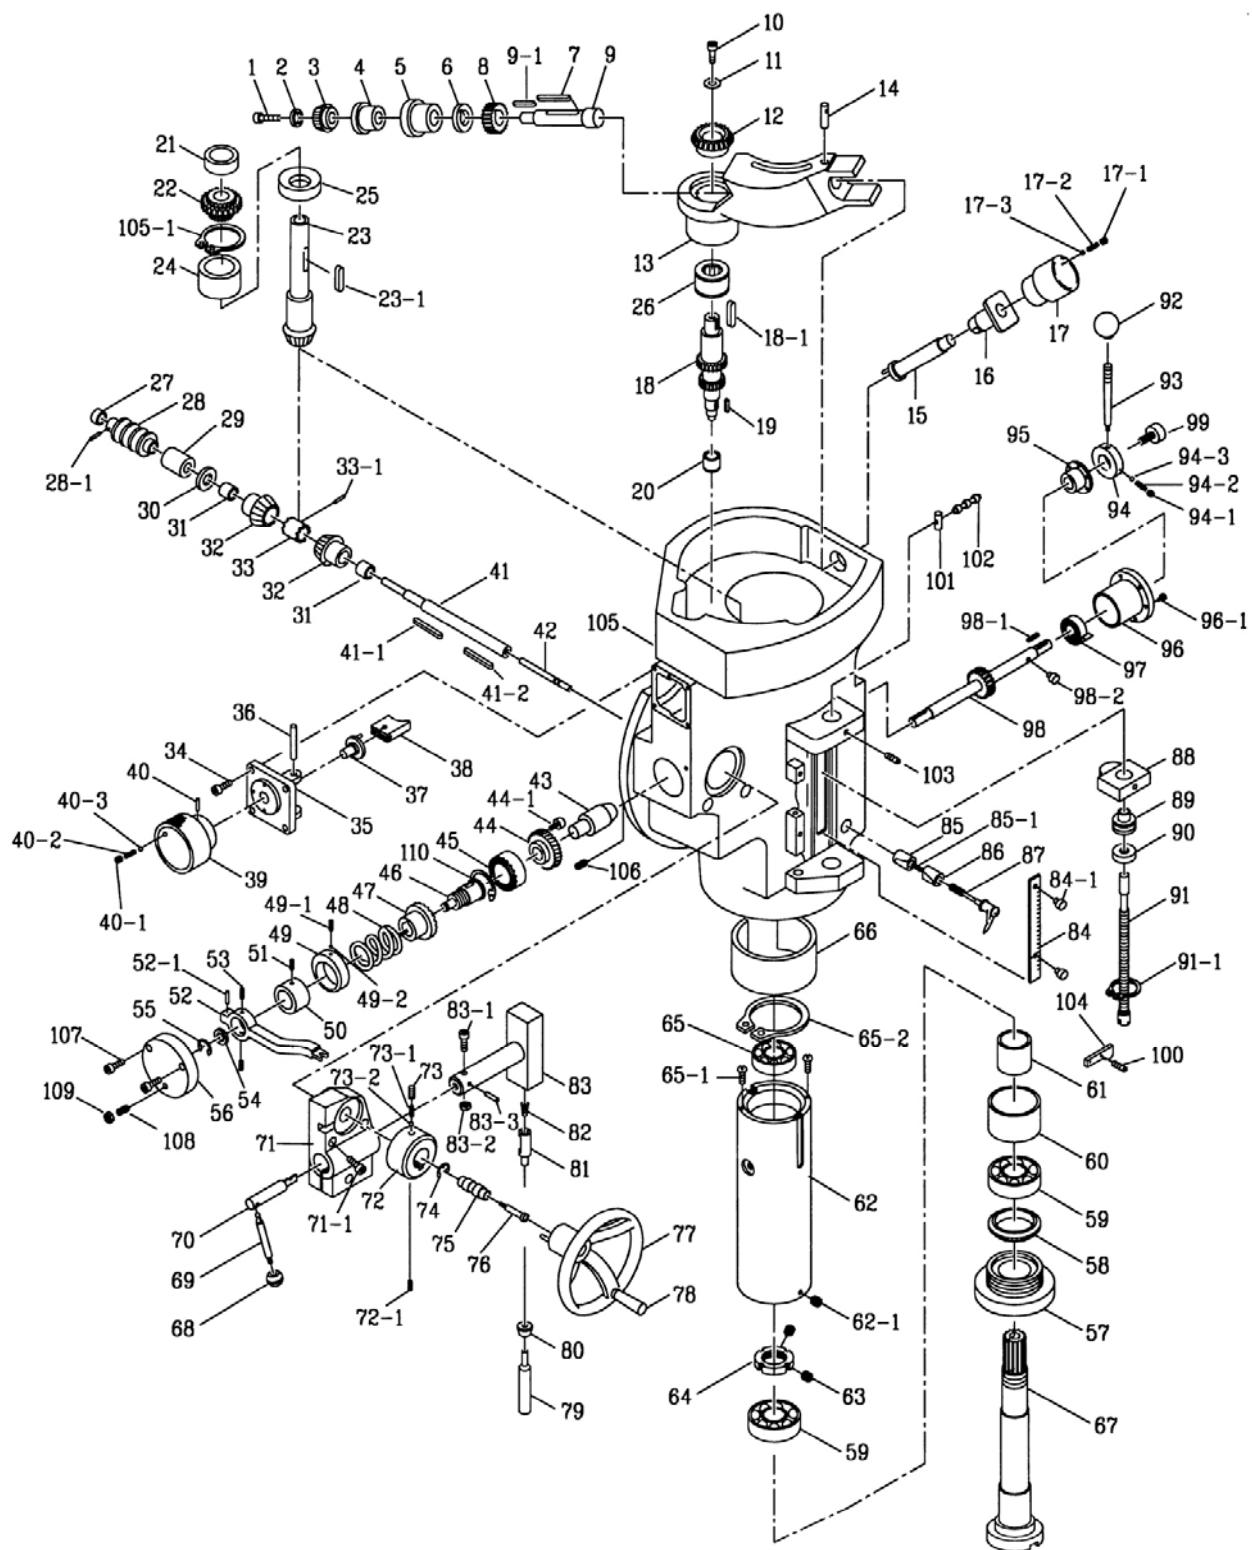


## 12.2.2 Head Assembly – Parts List

Index No	Part No	Description	Size	Qty
1.....	JTM1055-H01.....	Hex Socket Cap Screw .....	M5X12.....	1
2.....	JTM1055-H02.....	Washer .....	.....	1
3.....	JTM1055-H03.....	Bevel Gear .....	.....	1
4.....	JTM1055-H04.....	Shaft Sleeve .....	.....	1
5.....	JTM1055-H05.....	Bushing .....	.....	1
6.....	JTM1055-H06.....	Spacer .....	.....	1
7.....	JTM1055-H07.....	Key .....	3X3X20.....	1
8.....	JTM1055-H08.....	Gear .....	.....	1
9.....	JTM1055-H09.....	Shaft .....	.....	1
9-1.....	JTM1055-H09-1.....	Key .....	3x3x10.....	1
10.....	JTM1055-H10.....	Hex Socket Cap Screw .....	5/16"X1/2" .....	1
11.....	JTM1055-H11.....	Washer .....	.....	1
12.....	JTM1055-H12.....	Bevel Gear .....	.....	1
13.....	JTM1055-H13.....	Worm Gear Cradle .....	.....	1
14.....	JTM1055-H14.....	Feed Engage Pin .....	.....	1
15.....	JTM1055-H15.....	Worm Gear Cradle Shaft .....	.....	1
16.....	JTM1055-H16.....	Shaft Sleeve .....	.....	1
17.....	JTM1055-H17.....	Knob .....	.....	1
17-1.....	JTM1055-H17-1.....	Set Screw .....	M6x8 .....	1
17-2.....	JTM1055-H17-2.....	Spring .....	.....	1
17-3.....	JTM1055-H17-3.....	Steel Ball .....	.....	1
18.....	JTM1055-H18.....	Gear Shaft .....	.....	1
18-1.....	JTM1055-H18-1.....	Key .....	5x5x8.....	1
19.....	JTM1055-H19.....	Key .....	5x5x12.....	1
20.....	JTM1055-H20.....	Needle Bearing .....	BA78Z .....	1
21.....	JTM1055-H21.....	Bushing .....	.....	1
22.....	JTM1055-H22.....	Gear .....	.....	1
23.....	JTM1055-H23.....	Shaft (w/bevel gear) .....	.....	1
23-1.....	JTM1055-H23-1.....	Key .....	4x4x45 .....	1
24.....	JTM1055-H24.....	Bevel Gear Bushing .....	.....	1
25.....	JTM1055-H25.....	Spacer .....	.....	1
26.....	JTM1055-H26.....	Needle Bearing .....	TA2620Z .....	1
27.....	JTM1055-H27.....	Bushing .....	.....	1
28.....	JTM1055-H28.....	Worm Gear .....	.....	1
28-1.....	JTM1055-H28-1.....	Spring Pin .....	.....	1
29.....	JTM1055-H29.....	Bushing .....	.....	1
30.....	JTM1055-H30.....	Washer .....	.....	1
31.....	JTM1055-H31.....	Bushing .....	.....	2
32.....	JTM1055-H32.....	Bevel Gear .....	.....	2
33.....	JTM1055-H33.....	Feed Reverse Clutch .....	.....	1
33-1.....	JTM1055-H33-1.....	Spring Pin .....	.....	1
34.....	TS-1513011 .....	Hex Socket Cap Screw .....	M5X10 .....	4
35.....	JTM1055-H35.....	Cluster Gear Cover .....	.....	1
36.....	JTM1055-H36.....	Shaft .....	.....	1
37.....	JTM1055-H37.....	Gear Shift Crank .....	.....	1
38.....	JTM1055-H38.....	Feed Gear Shift Fork .....	.....	1
39.....	JTM1055-H39.....	Knob .....	.....	1
40.....	JTM1055-H40.....	Set Screw .....	M6x6 .....	1
40-1.....	JTM1055-H40-1.....	Set Screw .....	M6x6 .....	1
40-2.....	JTM1055-H40-2.....	Spring .....	.....	1
40-3.....	JTM1055-H40-3.....	Steel Ball .....	.....	1
41.....	JTM1055-H41.....	Feed Worm Shaft .....	.....	1
41-1.....	JTM1055-H41-1.....	Key .....	5x5x15 .....	1
41-2.....	JTM1055-H41-2.....	Key .....	5x5x10 .....	1
42.....	JTM1055-H42.....	Reverse Clutch Rod .....	.....	1
43.....	JTM1055-H43.....	Brass Shaft .....	.....	1

<b>Index No</b>	<b>Part No</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
44	JTM1055-H44	Worm Gear .....		1
44-1	JTM1055-H44-1	Round Head Screw .....		3
45	JTM1055-H45	Clutch Ring .....		1
46	JTM1055-H46	Overload Clutch Sleeve .....		1
47	JTM1055-H47	Overload Clutch .....		1
48	JTM1055-H48	Spring .....		1
49	JTM1055-H49	Clutch Lockout .....		1
49-1	JTM1055-H49-1	Set Screw .....	M6x8	1
49-2	JTM1055-H49-2	Brass Piece .....		1
50	JTM1055-H50	Brass Bushing .....		1
51	JTM1055-H51	Set Screw .....		1
52	JTM1055-H52	Clutch Trip Lever .....		1
52-1	JTM1055-H52-1	Spring Pin .....		1
53	JTM1055-H53	Flat Head Screw .....		2
54	JTM1055-H54	Clutch Washer .....		1
55	JTM1055-H55	E-Ring .....		1
56	JTM1055-H56	Clutch Arm Cover .....		1
57	JTM1055-H57	Nose Piece .....		1
58	JTM1055-H58	Spindle Dirt Shield .....		1
59	JTM1055-H59	Angular Bearing .....	7010	2
60	JTM1055-H60	Spacer .....		1
61	JTM1055-H61	Spacer .....		1
62	JTM1055-H62	Quill .....		1
62-1	JTM1055-H62-1	Set Screw .....	M5x5	1
63	JTM1055-H63	Set Screw .....	M6x6	2
64	JTM1055-H64	Lock Nut .....		1
65	JTM1055-H65	Ball Bearing .....	6008ZZ	1
65-1	JTM1055-H65-1	Cross Head Screw .....		2
65-2	JTM1055-H65-2	C-Clip .....	S37	1
66	JTM1055-H66	Quill Skirt .....		1
67	JTM1055-H67	Spindle .....		1
68	JTM1055-H68	Black Plastic Ball .....		1
69	JTM1055-H69	Trip Handle .....		1
70	JTM1055-H70	Cam Rod .....		1
71	JTM1055-H71	Feed Trip Bracket .....		1
71-1	TS-1513051	Hex Socket Cap Screw .....	M5x25	2
72	JTM1055-H72	Hand Wheel Clutch .....		1
72-1	JTM1055-H72-1	Set Screw .....	M6x6	1
73	JTM1055-H73	Set Screw .....	M8x6	1
73-1	JTM1055-H73-1	Spring .....		1
73-2	JTM1055-H73-2	Ball .....		1
74	JTM1055-H74	C-Clip .....		1
75	JTM1055-H75	Reverse Knob .....		1
76	JTM1055-H76	Knob Stud .....		1
77	JTM1055-H77	Handle Wheel .....		1
78	JTM1055-H78	Handle .....		1
79	JTM1055-H79	Feed Trip Plunger .....		1
80	JTM1055-H80	Bushing .....		1
81	JTM1055-H81	Trip Plunger .....		1
82	JTM1055-H82	Spring .....		1
83	JTM1055-H83	Cam Rod Sleeve .....		1
83-1	TS-1502051	Hex Socket Cap Screw .....	M5x20	1
83-2	JTM1055-H83-2	Hex Nut .....		1
83-3	JTM1055-H83-3	Spring Pin .....		1
84	JTM1055-H84	Micrometer Scale .....		1
84-1	JTM1055-V84-1	Round Head Screw .....		2
85	JTM1055-H85	Quill Lock Sleeve (threaded) .....		1
85-1	JTM1055-H85-1	Spring .....		1

<b>Index No</b>	<b>Part No</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
86	JTM1055-H86	Quill Lock Sleeve		1
87	JTM1055-H87	Lock Handle		1
88	JTM1055-H88	Quill Stop Knob		1
89	JTM1055-H89	Quill Micro-Stop Nut		1
90	JTM1055-H90	Quill Micro-Jam Nut		1
91	JTM1055-H91	Quill Micro-Screw		1
91-1	JTM1055-H91-1	C-Clip		1
92	JTM1055-H92	Plastic Ball		1
93	JTM1055-H93	Handle		1
94	JTM1055-H94	Hub		1
94-1	JTM1055-H94-1	Set Screw	5/16"x3/8"	1
94-2	JTM1055-H94-2	Spring		1
94-3	JTM1055-H94-3	Steel Ball		1
95	JTM1055-H95	Hub Sleeve		1
96	JTM1055-H96	Spring Cover		1
96-1	TS-1502101	Hex Socket Cap Screw	M5x12	1
97	JTM1055-H97	Clock Spring		1
98	JTM1055-H98	Quill Pinion Shaft		1
98-1	JTM1055-H98-1	Key	5x5x25	1
98-2	JTM1055-H98-2	T-Pin		1
99	JTM1055-H99	Pinion Shaft Hub		1
100	JTM1055-H100	Set Screw		1
101	JTM1055-H101	Plunger		1
102	JTM1055-H102	Lever		1
103	JTM1055-H103	Set Screw		1
104	JTM1055-H104	Feed Trip Lever		1
105	JTM1055-H105	Quill Housing		1
105-1	JTM1055-H105-1	C-Clip		1
106	JTM1055-H106	Set Screw	M6x8	1
107	TS-1502071	Hex Socket Cap Screw	M5x45	2
108	JTM1055-H108	Set Screw	M6x15	1
109	JTM1055-H109	Hex Nut		1
110	JTM1055-H110	C-Clip	S22	1
	JTM1055-FRS	Forward Reverse Switch (not shown)		1
	JTM1055-FRSC	Forward Reverse Switch Cover (not shown)		1
	JTM1055-SC	Short Cable from Switch to Breaker (not shown)		1
	JTM1055-LC	Long Cable from switch to Breaker Box (not shown)		1
	JTM1055-SR	Plastic Strain Relief (not shown)		1

### 12.3.1 Base Assembly – Exploded View

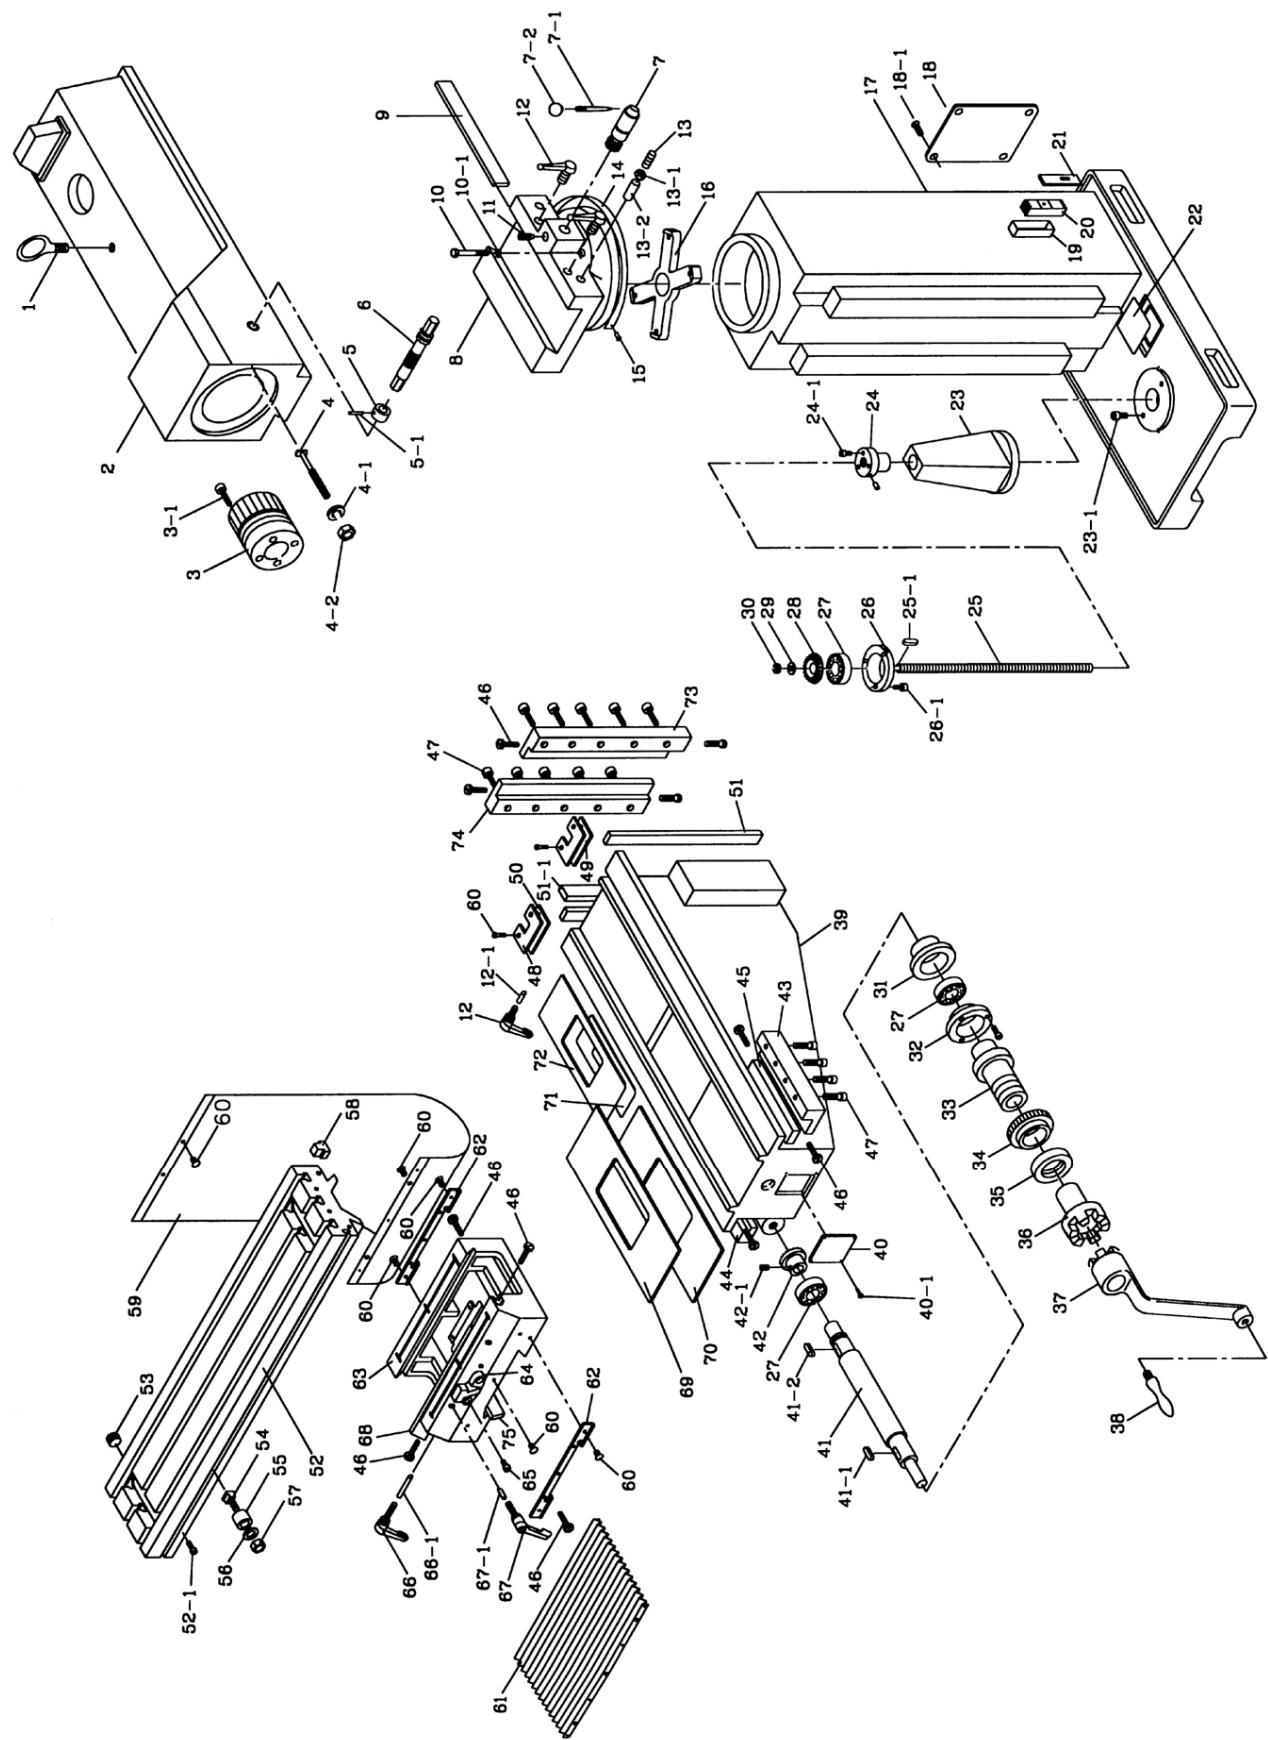


### 12.3.2 Base Assembly – Parts List

Index No	Part No	Description	Size	Qty
1.....	JTM1055-B01 .....	Eye Bolt .....		1
2.....	JTM1055-B02 .....	Ram.....		1
3.....	JTM1055-B03 .....	Head Tilt Block .....		1
3-1.....	JTM1055-B03-1 .....	Hex Socket Cap Screw .....	M10x95.....	4
4.....	JTM1055-B04 .....	Bolt.....		4
4-1.....	JTM1055-B04-1 .....	Lock Washer .....		4
4-2.....	JTM1055-B04-2 .....	Hex Nut.....		4
5.....	JTM1055-B05 .....	Flange .....		1
5-1.....	JTM1055-B05-1 .....	Spring Pin .....		1
6.....	JTM1055-B06 .....	Worm Shaft .....		1
7.....	JTM1055-B07 .....	Ram Pinion .....		1
7-1.....	JTM1055-B07-1 .....	Handle .....		1
7-2.....	JTM1055-B07-2 .....	Plastic Ball .....		1
8.....	JTM1055-B08 .....	Turret.....		1
9.....	JTM1055-B09 .....	Gib .....		1
10.....	JTM1055-B10 .....	Bolt.....		4
10-1.....	JTM1055-B10-1 .....	Washer .....		4
11.....	JTM1055-B11 .....	Set Screw .....		1
12.....	JTM1055-B12 .....	Lock Handle .....		2
12-1.....	JTM1055-B12-1 .....	Brass Block .....		2
13.....	JTM1055-B13 .....	Set Screw .....	M10X60.....	2
13-1.....	JTM1055-B13-1 .....	Hex Nut.....	M10.....	2
13-2.....	JTM1055-B13-2 .....	Block .....		2
14.....	JTM1055-B14 .....	Scale Label .....		1
15.....	JTM1055-B15 .....	Rivet .....		4
16.....	JTM1055-B16 .....	Spider .....		1
17.....	JTM1055-B17N .....	Base ( <i>serial no. 120xxxx and higher</i> ) .....		1
18.....	JTM1055-B18 .....	Cover.....		1
18-1.....	JTM1055-B18-1 .....	Round Head Screw .....	M5x10.....	4
19.....	C-132A .....	Breaker Box (w/ #21) .....		1
20.....	C-133.....	Beaker .....		1
21.....	C-134.....	Breaker Box Cover .....		1
	C-133A .....	Breaker Box Assembly (w/ #19-21) .....		1
22.....	JTM1055-B22 .....	Strainer .....		1
23.....	JTM1055-B23 .....	Lead Screw Housing .....		1
23-1.....	TS-1503041 .....	Hex Socket Cap Screw .....	M6x16.....	3
24.....	JTM1055-B24 .....	Flange .....		1
24-1.....	TS-1503081 .....	Hex Socket Cap Screw .....	M6x35.....	2
25.....	JTM1055-B25 .....	Lead Screw .....		1
25-1.....	JTM1055-B25-1 .....	Key .....	5x5x20.....	1
26.....	JTM1055-B26 .....	Flange .....		1
26-1.....	TS-1503051 .....	Hex Socket Cap Screw .....	M6x20.....	3
27.....	BB-6204ZZ .....	Ball Bearing.....	6204ZZ.....	3
28.....	JTM1055-B28 .....	Bevel Gear .....		1
29.....	JTM1055-B29 .....	Washer .....		1
30.....	JTM1055-B30 .....	Hex Nut.....		1
31.....	JTM1055-B31 .....	Bearing Cover .....		1
32.....	JTM1055-B32 .....	Bearing Stop .....		1
33.....	JTM1055-B33 .....	Dial Holder .....		1
34.....	JTM1055-B34 .....	Dial Ring .....		1
35.....	JTM1055-B35 .....	Dial Lock Nut.....		1
36.....	JTM1055-B36 .....	Gear Shear Clutch .....		1
37.....	JTM1055-B37 .....	Elevating Crank .....		1
38.....	JTM1055-B38 .....	Handle .....		1
39.....	JTM1055-B39N .....	Knee ( <i>serial no. 120xxxx and higher</i> ) .....		1
40.....	JTM1055-B40 .....	Knee Front Cover .....		1

<b>Index No</b>	<b>Part No</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
40-1 .....	JTM1055-B40-1 .....	Cross Head Screw .....	M5x20 .....	4
41 .....	JTM1055-B41 .....	Shaft .....	.....	1
41-1 .....	JTM1055-B41-1 .....	Key .....	3x3x10 .....	1
41-2 .....	JTM1055-B41-2 .....	Key .....	4x4x16 .....	1
42 .....	JTM1055-B42 .....	Bevel Gear .....	.....	1
42-1 .....	JTM1055-B42-1 .....	Set Screw .....	M6x20 .....	1
43 .....	JTM1055-B43 .....	Gib Holder-R .....	.....	1
44 .....	JTM1055-B44 .....	Gib Holder-L .....	.....	1
45 .....	JTM1055-B045 .....	Gib .....	.....	2
46 .....	JTM1055-B46 .....	Adjusting Screw .....	.....	12
47 .....	TS-1506041 .....	Hex Socket Cap Screw .....	M12x35 .....	18
48 .....	JTM1055-B48 .....	Wiper Cover .....	.....	2
49 .....	JTM1055-B49 .....	Wiper-R .....	.....	1
50 .....	JTM1055-B50 .....	Wiper-L .....	.....	1
51 .....	JTM1055-B51N .....	Gib ( <i>serial no. 120xxxx and higher</i> ) .....	.....	1
51-1 .....	JTM1055-B51-1N .....	Gib ( <i>serial no. 120xxxx and higher</i> ) .....	.....	1
52 .....	JTM1055-B52 .....	Table .....	.....	1
52-1 .....	TS-1502061 .....	Hex Socket Cap Screw .....	M5x25 .....	2
53 .....	JTM1055-B53 .....	Plug .....	.....	2
54 .....	JTM1055-B54 .....	T-Bolt .....	.....	2
55 .....	JTM1055-B55 .....	Bushing .....	.....	2
56 .....	JTM1055-B56 .....	Flat Washer .....	.....	2
57 .....	JTM1055-B57 .....	Hex Nut .....	.....	2
58 .....	JTM1055-B58 .....	Rubber T-Nut .....	.....	6
59 .....	JTM1055-B59 .....	Chip Guard .....	.....	1
60 .....	JTM1055-B60 .....	Screw .....	.....	22
61 .....	JTM1055-B61 .....	Dust Protective Cover .....	.....	1
62 .....	JTM1055-B62 .....	Wiper .....	.....	2
63 .....	JTM1055-B62N .....	Saddle ( <i>serial no. 120xxxx and higher</i> ) .....	.....	1
64 .....	JTM1055-B64 .....	Stop Block .....	.....	1
65 .....	JTM1055-B65 .....	Hex Socket Cap Screw .....	.....	2
66 .....	JTM1055-B66 .....	Handle .....	.....	2
66-1 .....	JTM1055-B66-1 .....	Brass Block .....	.....	2
67 .....	JTM1055-B67 .....	Handle .....	.....	2
67-1 .....	JTM1055-B67-1 .....	Brass Block .....	.....	2
68 .....	JTM1055-B68N .....	Gib ( <i>serial no. 120xxxx and higher</i> ) .....	.....	1
69 .....	JTM1055-B69 .....	Chip Guard Assembly (includes: #69-72) .....	.....	1
70 .....	.....	Chip Guard-L .....	.....	1
71 .....	.....	Chip Guard-M .....	.....	1
72 .....	.....	Chip Guard-S .....	.....	1
73 .....	JTM1055-B73 .....	Gib Holder-R .....	.....	1
74 .....	JTM1055-B74 .....	Gib Holder-L .....	.....	1
75 .....	JTM1055-B75N .....	Gib ( <i>serial no. 120xxxx and higher</i> ) .....	.....	1
.....	JTM1055-TBC .....	Toolbox Complete (not shown) .....	.....	1
.....	JTM1055-LP .....	Leveling Pad (not shown) .....	.....	4
.....	JTM1055-LB .....	Leveling Bolt w/Nut (not shown) .....	.....	4
.....	STRIPE-1-3/4 .....	JET Striping (not shown) .....	1-3/4" W .....	per ft.
.....	JTM1055-ID .....	ID & Warning Label (not shown) .....	.....	1


#### 12.4.1 Lead Screw Assembly – Exploded View

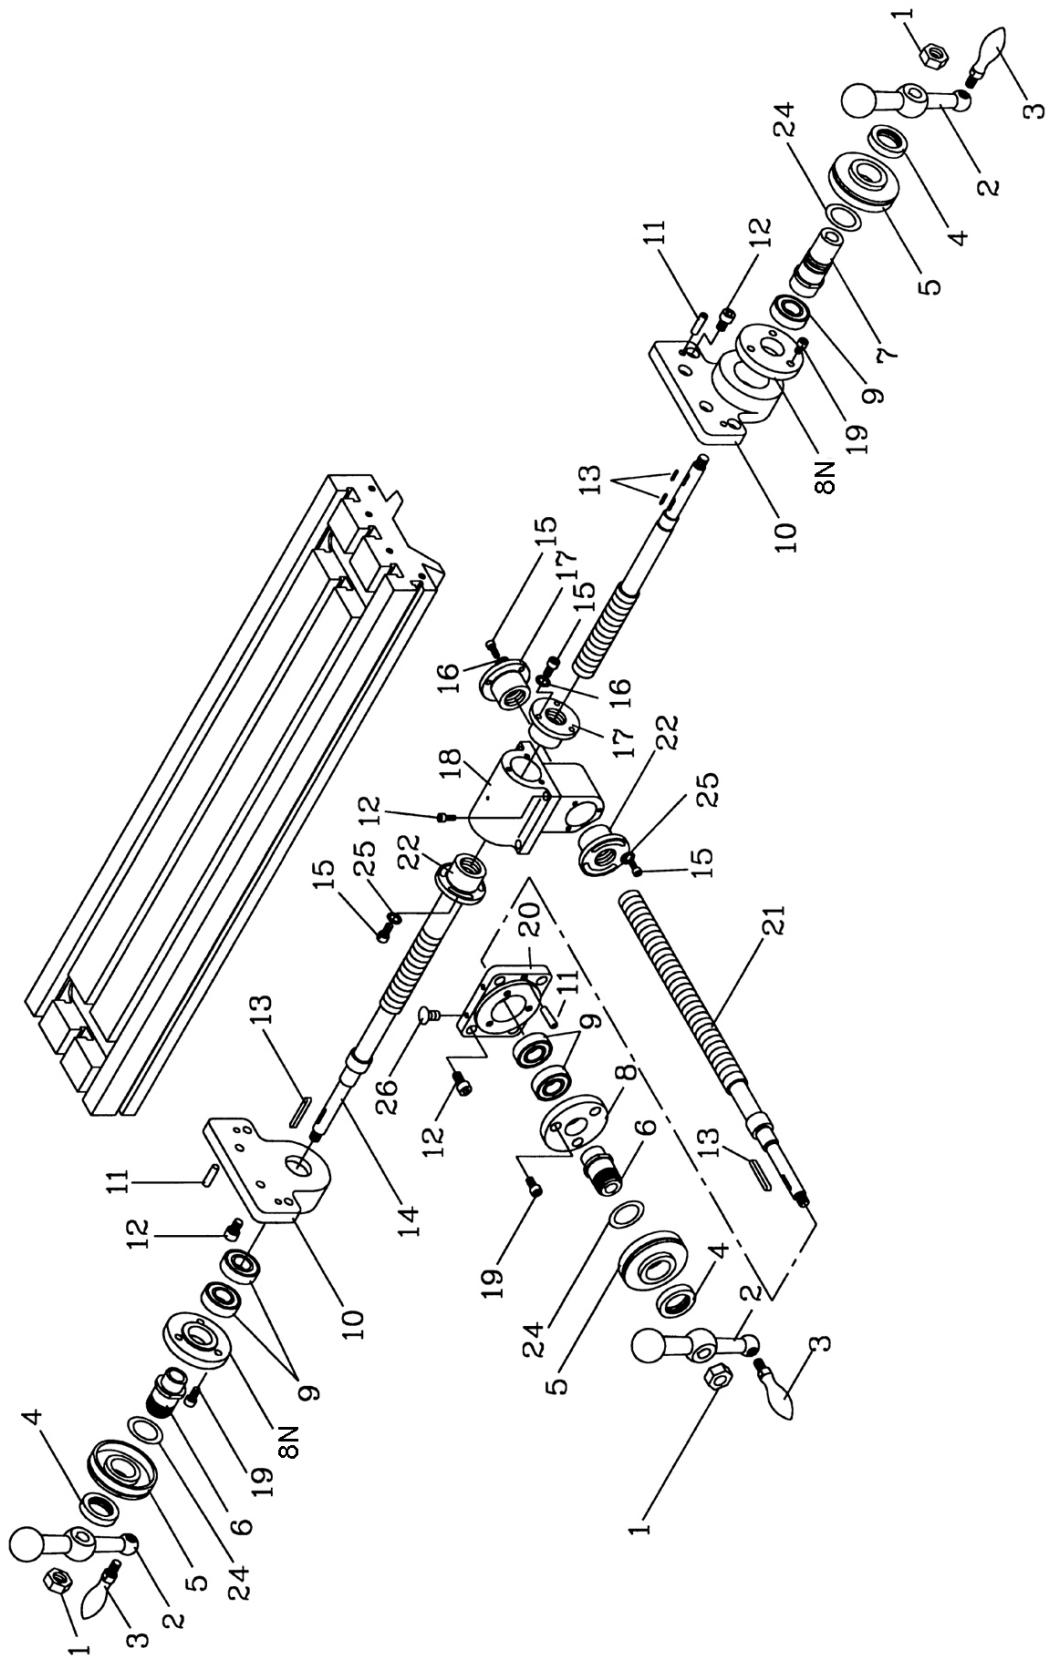

#### 12.4.2 Lead Screw Assembly – Parts List

<b>Index No</b>	<b>Part No</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
1.....	JTM1055-L01 .....	Nut .....	1/2-20UNF .....	3
2.....	JTM1055-L02 .....	Ball Crank .....		3
3.....	JTM1055-L03 .....	Handle .....		3
4.....	JTM1055-L04 .....	Dial Lock Nut .....		3
5.....	JTM1055-L05 .....	Dial .....		3
6.....	JTM1055-L06 .....	Dial Holder .....		2
7.....	JTM1055-L07 .....	Dial Holder-(left) .....		1
8.....	JTM1055-L08 .....	Bearing Stop for Y-Axis .....		1
8N .....	JTM1055-L08N.....	Bearing Stop for X-Axis ( <i>serial no. 120xxxx and higher</i> ) .....		2
9.....	BB-6204ZZ .....	Ball Bearing .....		5
10.....	JTM1055-L10N.....	Extended Bearing Bracket ( <i>serial no. 120xxxx and higher</i> ) .....		2
11.....	JTM1055-L11 .....	Spring Pin .....	M5X20 .....	6
12.....	TS-1505031 .....	Hex Socket Cap Screw .....	M10X25 .....	16
13.....	JTM1055-L13 .....	Key .....	3X3X25 .....	4
14.....	JTM1055-L14N.....	Lead Screw for Ext. Bearing Bracket ( <i>serial no. 120xxxx and higher</i> ) .....	1	1
15.....	TS-1503041 .....	Hex Socket Cap Screw .....	M6X25 .....	8
16.....	TS-1550041 .....	Washer .....	M6 .....	2
17.....	JTM1055-L17 .....	Feed Screw Nut .....		2
18.....	JTM1055-L18 .....	Feed Nut Bracket .....		1
19.....	TS-1514011 .....	Hex Socket Cap Screw .....	M6X12 .....	9
20.....	JTM1055-L20 .....	Cross Feed Bearing Bracket .....		1
21.....	JTM1055-L21 .....	Cross Feed Screw .....		1
22.....	JTM1055-L22 .....	Adjustable Cross Feed Nut .....		2
24.....	JTM1055-L24 .....	Spacer .....		3
25.....	JTM1055-L25 .....	Lock Washer .....	M6 .....	2
26.....	JTM1055-L26 .....	Cross Head Screw .....		2

### 12.5.1 One Shot Lubrication System – Diagram

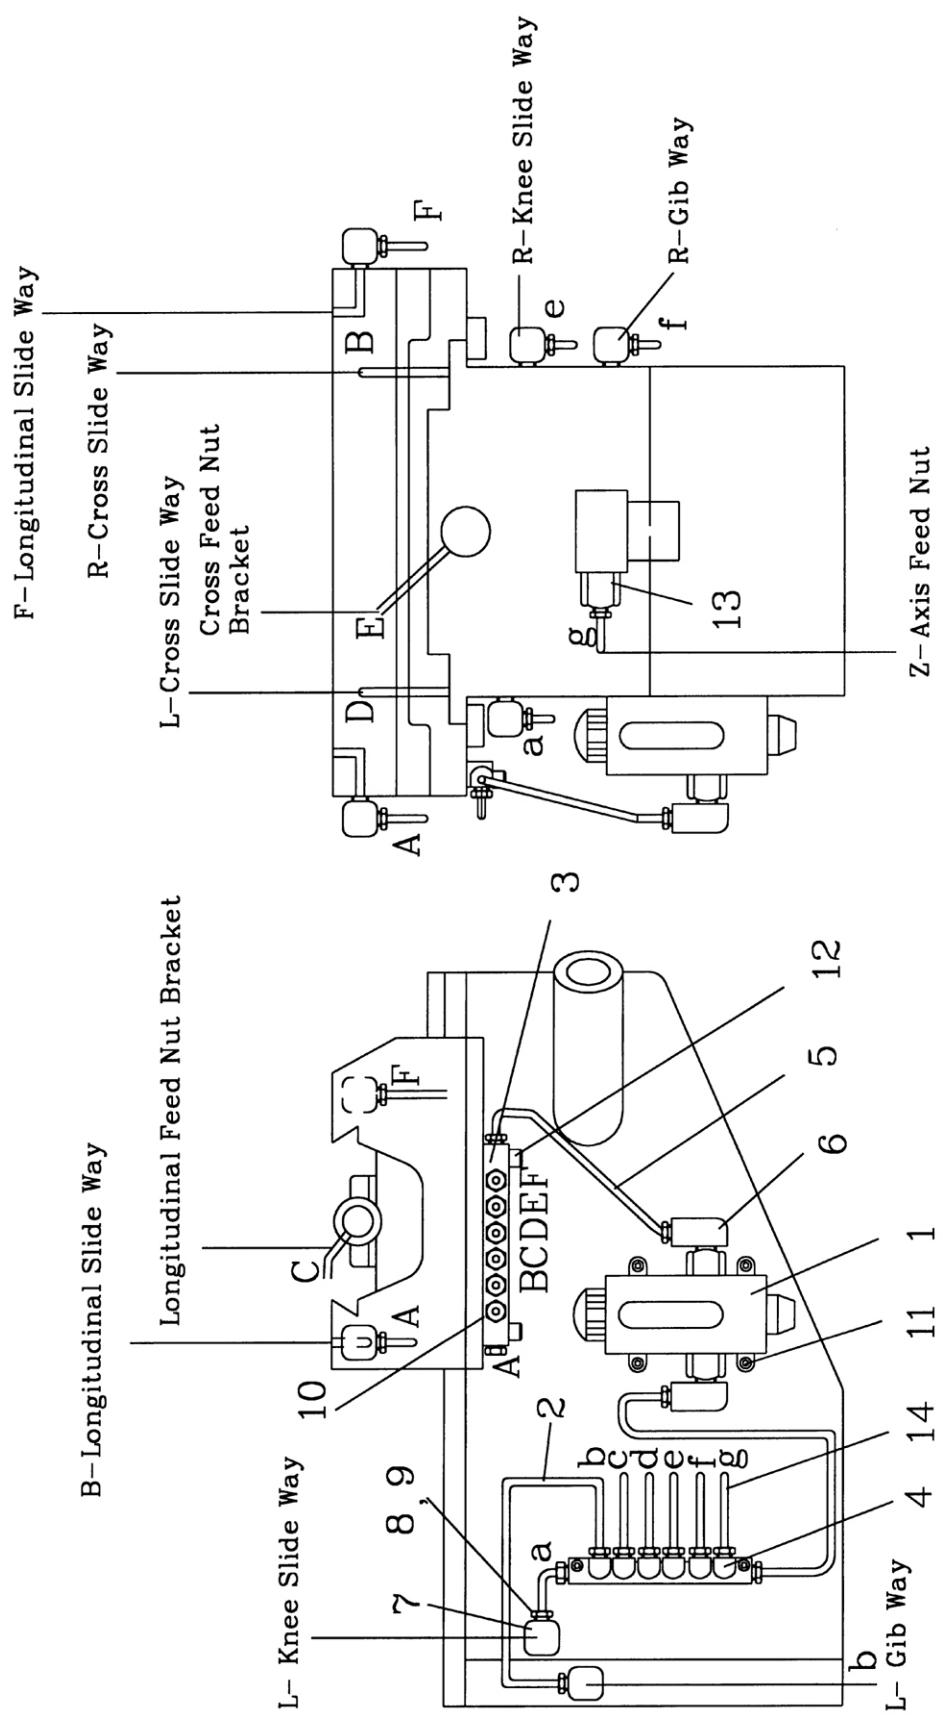


## 12.5.2 One Shot Lubrication System – Parts List


<b>Index No</b>	<b>Part No</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
1.....	JTM1055-CLA .....	Lubricating Pump.....		1
2.....	ALMP-04.....	Aluminum Pipe .....	13.5x450L .....	1
3.....	A-8.....	Oil Regulating Distributor.....		1
4.....	JTM1055-A4.....	Oil Regulating Distributor.....		1
5.....	A-5.....	Flexible Steel Tube .....	4X550 .....	1
6.....	PH-401.....	Elbow joint .....		2
7.....	PI-401.....	Elbow joint .....		8
8.....	PA-4 .....	Thimble Nut.....		26
9.....	PB-4 .....	Thimble.....		26
10.....	PG-004 .....	Union.....		1
11.....	TS-1503031 .....	Hex Socket Cap Screw .....	M6X12 .....	4
12.....	TS-1502061 .....	Hex Socket Cap Screw .....	M5X25 .....	4
13.....	PD-401 .....	Straight Joint .....		1
14.....	A-14.....	Nylon Piece.....	4X700 .....	1

## 13.0 Electrical Connections

### 13.1 Forward/Reverse Switch Wiring

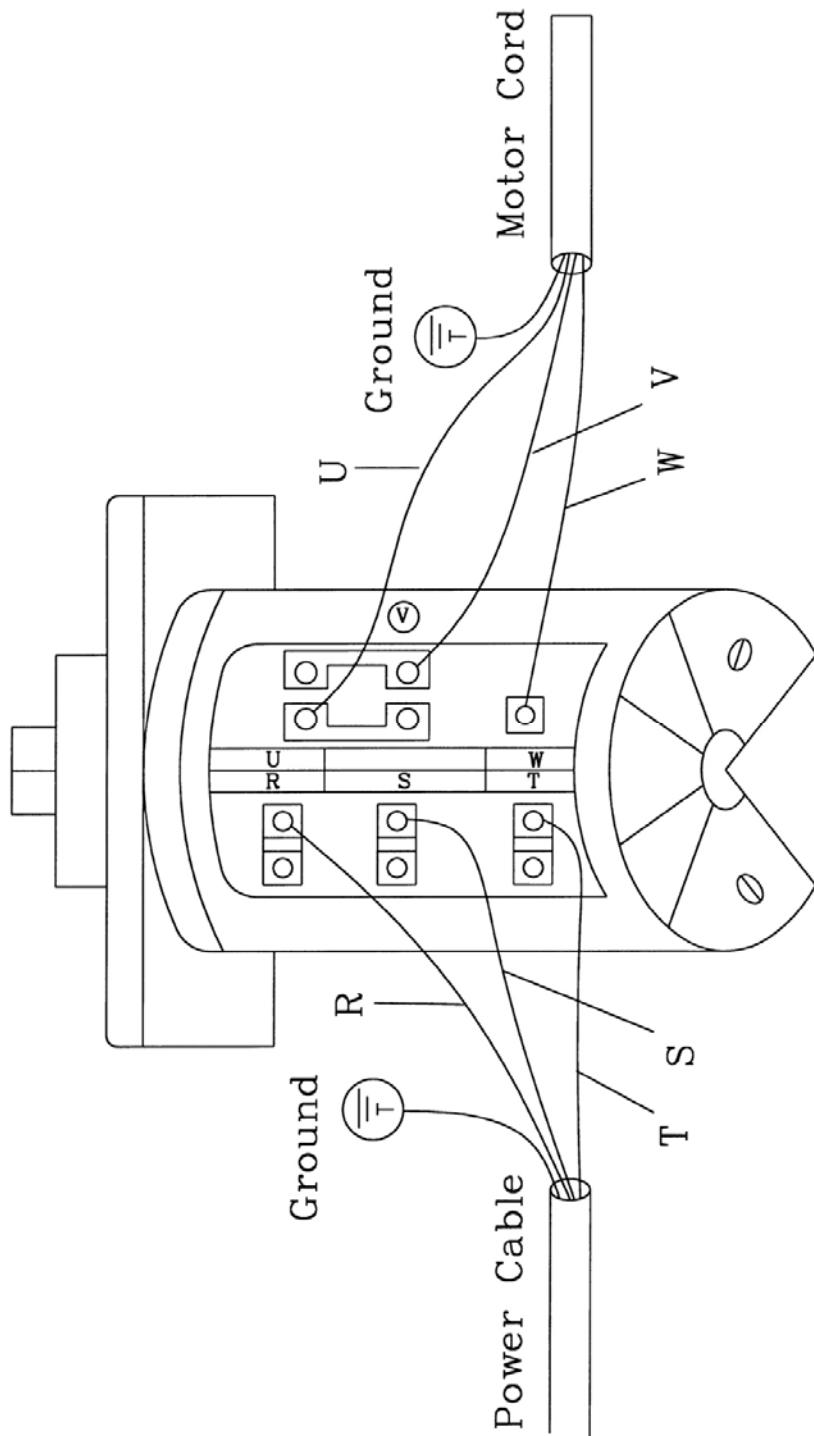

### 13.2 Wiring Diagram

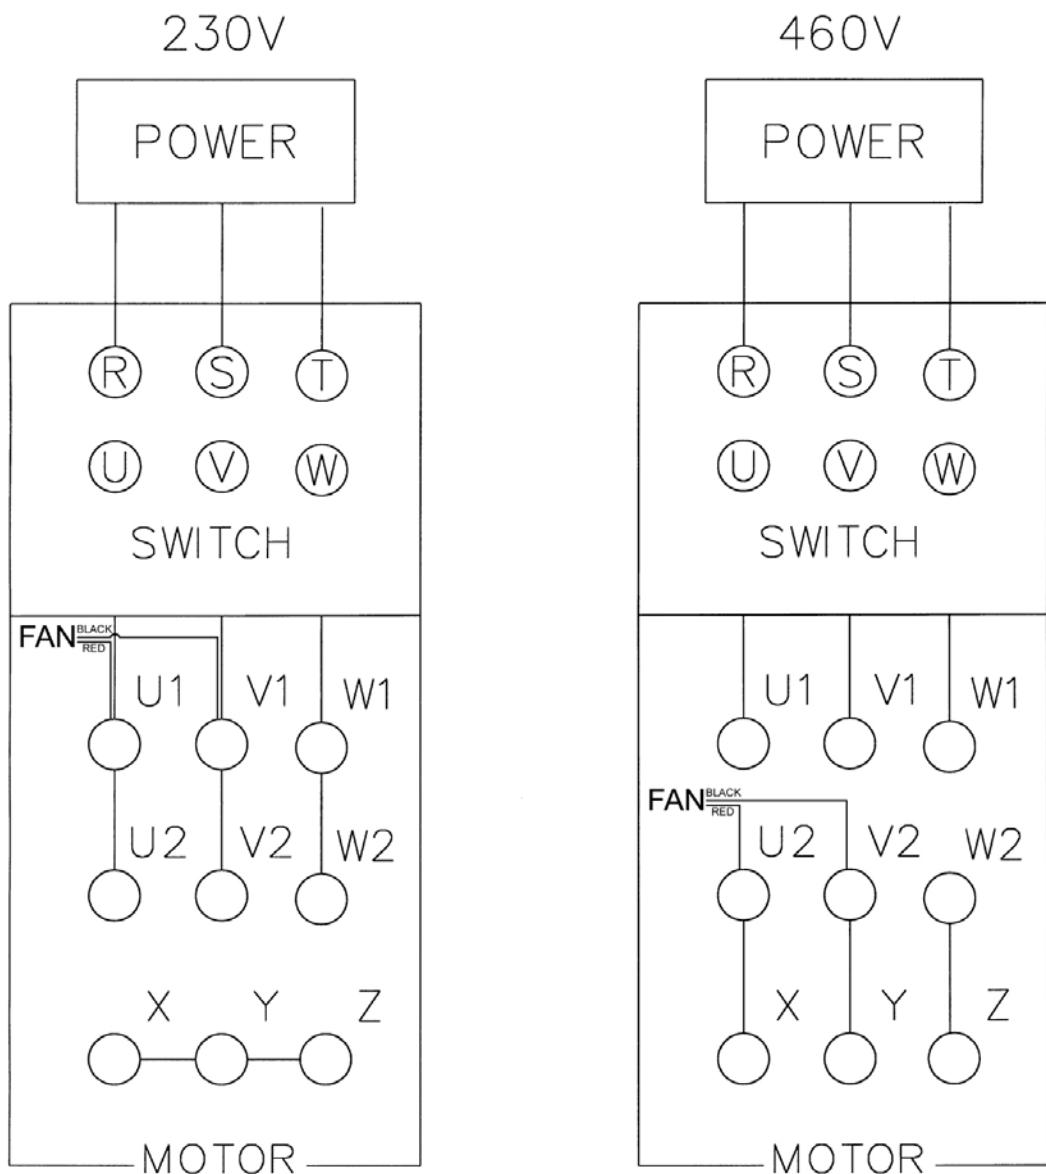

**J E T**<sup>®</sup>

**WALTER MEIER (Manufacturing) Inc.**  
427 New Sanford Road  
LaVergne, Tennessee 37086  
Phone: 800-274-6848  
[www.waltermeier.com](http://www.waltermeier.com)