



# Operating Instructions and Parts Manual Step Pulley Turret Mill

Model JTM-1, JTM-2




*Model JTM-1 shown*

**JET**  
427 New Sanford Road  
LaVergne, Tennessee 37086  
Ph.: 800-274-6848  
[www.jettools.com](http://www.jettools.com)

**Part No. M-690082**  
Revision H1 10/2018  
Copyright © 2014 JET

### 15.1.1 Upper Head Assembly – Exploded View

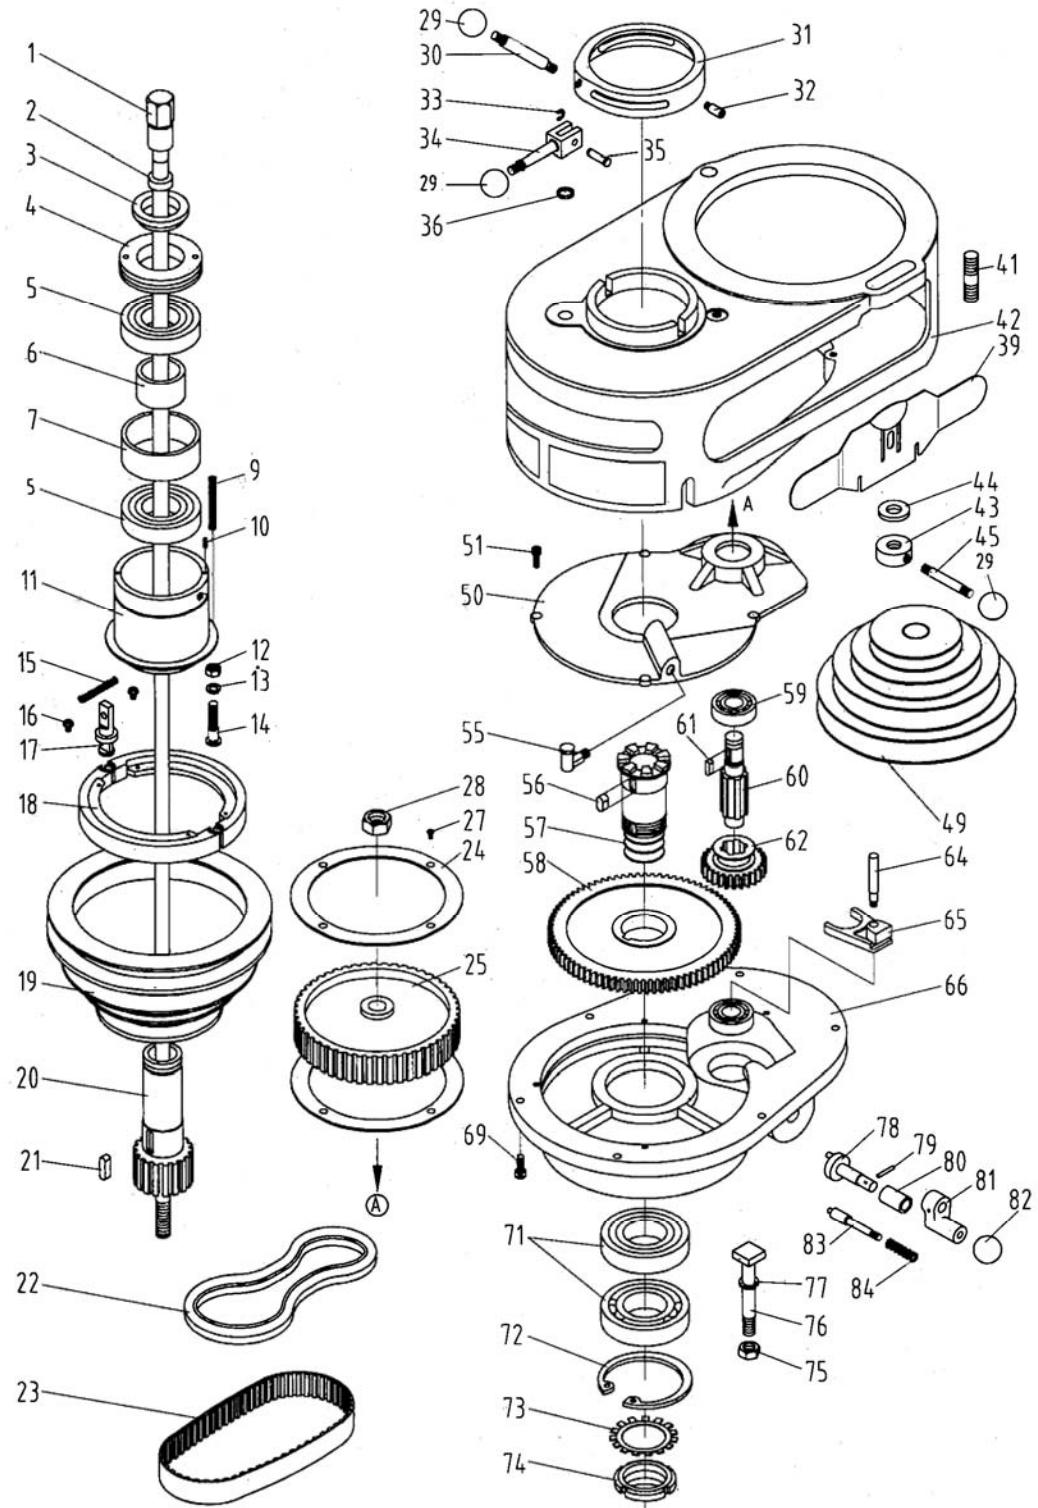


### 15.1.2 Upper Head Assembly – Parts List

Index No	Part No	Description	Size	Qty
1	LA-072	Draw Bar	R8	1
2	JTM4VS-A002B	Draw Bar Washer		1
3	LA-071	Upper Bearing Lock Nut		1
4	LA-070	Bearing Sleeve Lock Nut		1
5	BB-6207ZZ	Ball Bearing	6207-ZZ	2
6	LA-068	Upper Bearing Spacer (small)		1
7	LA-069	Upper Bearing Spacer (large)		1
9	LA-169	Compression Spring		4
10	TS-1520041	Set Screw	M3x10	4
11	LA-066	Spindle Pulley Bearing Sleeve		1
12	TS-0571021	Hex Jam Nut	5/16"	1
13	TS-0720081	Lock Washer	5/16"	1
14	LA-034	Brake Ring Screw		1
15	LA-036	Spring		2
16	BUTW31612	Screw	3/16"x1/2"	4
17	LA-037	Brake Lock Stud		1
18	LA-035	Brake Assembly		1
19	LA-065	Spindle Pulley (four-step)		1
20	LA-064	Spindle Pulley Hub		1
21	JTM1-021	Key	6x6x25mm	1
22	VB-A33	V-belt	A33	1
23	VB225L100	Timing Belt	225L	1
24	LA-027	Timing Belt Flange		2
25	LA-028	Timing Belt Pulley		1
27	JTM1-C27	Flat Head Screw		8
28	TS-0571072	Hex Jam Nut	5/8"-18NF	1
29	LA-006	Plastic Ball		3
30	LA-074	Spindle Clutch Lever		1
31	LA-073	Cam Ring		1
32	JTM1-032	Cam Ring Pin		2
33	JTM1-C33	E-Ring		1
34	LA-039	Brake Lock Handle		1
35	LA-038	Brake Lock Pin		1
36	TS-0680061	Washer	1/2"	1
37	JTM1-037	Spindle Speed Plate (JTM-1)		1
	JTM1-037A	Spindle Speed Plate (JTM-2)		1
39	JTM1-039A	Belt Guard		2
41	LA-012	Motor Mount Studs		2
42	LA-015G	Belt Housing		1
43	LA-007	Motor Lock Nut		2
44	LA-008	Washer		1
45	LA-009	Motor Lock Nut Handle		4
49	LA-011	Motor Pulley (four-step)		1
50	LA-013G	Gear Housing Cover		1
51	JTM1-C51	Hex Socket Cap Screw	M5x14	4
55	JTM1-055	Oil Cup		1
56	JTM1-C56	Key		1
57	LA-062	Spindle Gear Hub		1
58	LA-061	Spindle Bull Gear Assembly		1
59	BB-6203ZZ	Ball Bearing		1
60	LA-026	Shaft		1
61	JTM1-061	Key	5x5x15mm	1
62	LA-025	Gear		1
63	BB-6203ZZ	Ball Bearing		1
64	LA-032	Dowel Pin		1
65	LA-031	Back Gear Shifter Fork		1
66	LA-014G	Gear Housing		1
69	TS-1503041	Hex Socket Cap Screw	M6x16	6
71	BB-6208ZZ	Ball Bearing		2
72	JTM1-C72	Snap Ring		1

<b>Index No</b>	<b>Part No</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
73	JTM1-C73	Lock Washer.....		1
74	LA-059	Bearing Lock Nut .....		1
75	JTM1-C75	Hardened Nut .....	7/16"	1
76	LA-045	T-Bolt .....		3
77	JTM1-C77	Bolt Washer .....		3
78	LA-001	Shift Crank .....		1
79	JTM-C79	Spring Pin .....		1
80	LA-044	Back Gear Shift Bushing .....		1
81	LA-003	Shaft Crank Handle .....		1
82	LA-006	Plastic Ball .....		1
83	LA-004	Gearshift Plunger .....		1
84	LA-005	Compression Spring .....		1
	JTM1-M2	Motor (not shown).....	2HP 3PH 220V	1
	JTM1-598	Fwd/Rev Switch (not shown) .....	for 3PH, 2/4P	1
	JTM1-598A	Switch Speed Plate (not shown) .....		1
	JTM1-598B	Switch Knob (not shown) .....		1
	JTM1-598C	Switch Bracket (not shown) .....		1
	JTM1-598D	Metal Switch Box (not shown) .....		1
	JTM2-M1	Motor (not shown).....	2HP 1PH 115/230V	1
	JTM2-SC	Start Capacitor.....	500MFD, 125AC	1
	JTM2-598CP	Switch Assembly CP (not shown) .....		1
	JTM2-599	Fwd/Rev Switch (not shown) .....	for 1PH	1
	JTM2-599A	Switch Plate (not shown) .....		1
	JTM2-599B	Switch Plate Mounting Screw (not shown) .....		1
	JTM2-599C	Motor – Switch Wiring Harness (not shown) .....		1
	BD1325R-X02	Centrifugal Switch (not shown) .....		1

### 15.2.1 Head Assembly – Exploded View

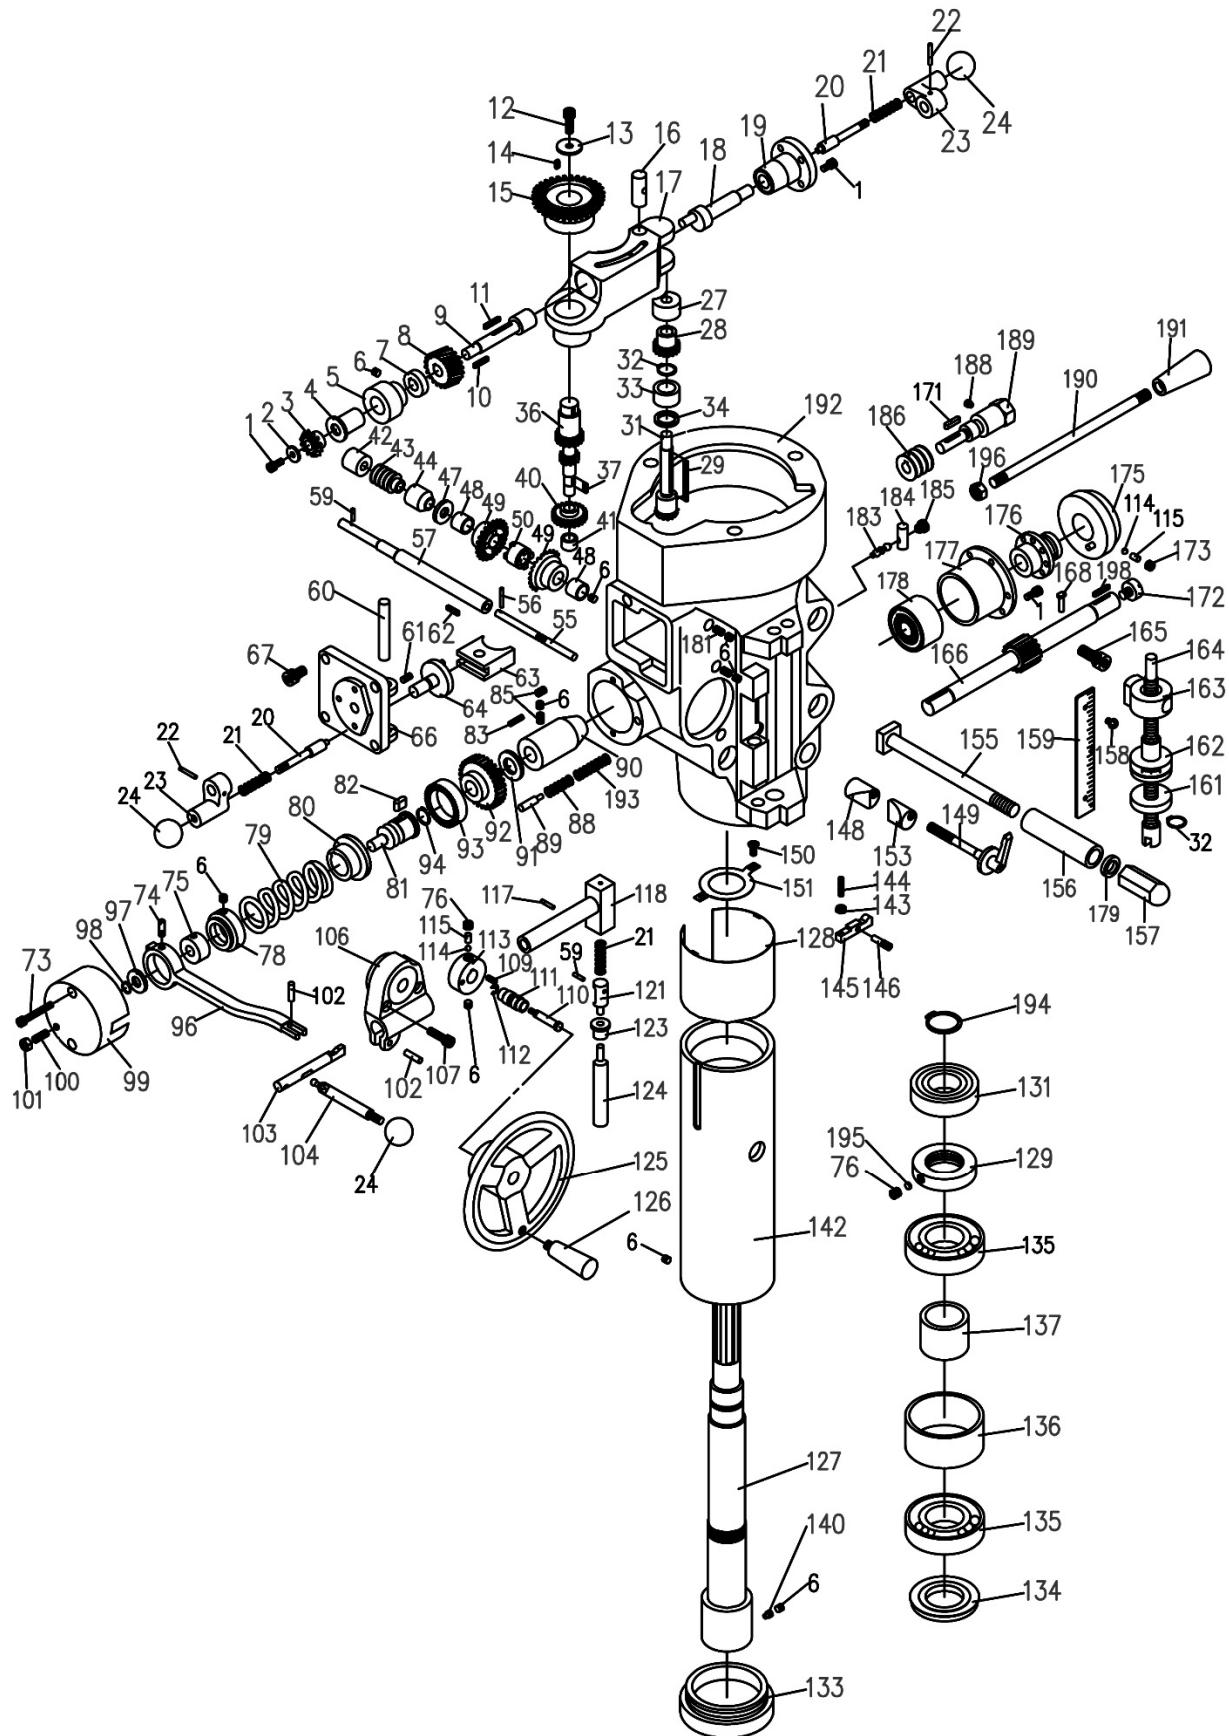


## 15.2.2 Head Assembly – Parts List

<b>Index No</b>	<b>Part No</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
.....	LA-166A .....	Worm Gear Cradle Assembly (includes #1-17,36,37,40) .....		1
1 .....	TS-1533042 .....	Screw.....	M5x10 .....	6
2 .....	HA-002 .....	Bevel Pinion Washer .....		1
3 .....	HA-003 .....	Feed Gear.....		1
4 .....	LA-161 .....	Shaft Sleeve .....		1
5 .....	LA-162 .....	Worm Cradle Bushing.....		1
6 .....	TS-1523011 .....	Set Screw .....	M6x6 .....	9
7 .....	LA-163 .....	Worm Gear Spacer.....		1
8 .....	LA-164 .....	Feed Drive Worm Gear.....		1
9 .....	LA-165 .....	Worm Gear Shaft.....		1
10 .....	HA-010 .....	Worm Shaft Key.....	3x3x8mm .....	1
11 .....	HA-011 .....	Key.....	3x3x20mm .....	1
12 .....	HA-012 .....	Lock Nut.....	M6x16 .....	1
13 .....	HA-013 .....	Washer .....		1
14 .....	HA-014 .....	Cluster Gear key.....	3x3x8.5 .....	1
15 .....	LA-154 .....	Feed Reverse Bevel Gear .....		1
16 .....	LA-167 .....	Feed Engage Pin .....		1
17 .....	LA-166 .....	Worm Gear Cradle .....		1
18 .....	LA-033 .....	Worm Gear Throw-out .....		1
19 .....	LA-002 .....	Shift Sleeve .....		1
20 .....	LA-004 .....	Plunger .....		2
21 .....	LA-005 .....	Spring .....		3
22 .....	HA-022 .....	Spring Pin .....	3x22mm .....	2
23 .....	LA-003 .....	Cam Rod .....		2
24 .....	LA-006 .....	Plastic Ball .....		3
27 .....	LA-147 .....	Upper Bushing .....		1
28 .....	LA-144 .....	Cluster Gear Assembly .....		1
29 .....	HA-029 .....	Cluster Gear Key .....	3x3x45mm .....	1
31 .....	LA-143 .....	Cluster Gear Shaft .....		1
32 .....	HA-032 .....	Snap Ring .....		2
33 .....	LA-142 .....	Bevel Gear Bushing .....		1
34 .....	LA-141 .....	Thrust Spacer .....		1
36 .....	LA-156 .....	Feed Drive Gear .....		1
37 .....	HA-037 .....	Key .....	3x3x10mm .....	1
40 .....	LA-157 .....	Feed Drive Gear .....		1
41 .....	HA-041 .....	Needle Bearing .....		1
42 .....	LA-168 .....	Bushing .....		1
43 .....	LA-139 .....	Worm .....		1
44 .....	LA-138 .....	Feed Worm Shaft Bushing .....		1
47 .....	LA-137 .....	Bevel Gear Thrust Spacer .....		1
48 .....	LA-134 .....	Bushing .....		2
49 .....	LA-135 .....	Feed Reverse Bevel Gear .....		2
50 .....	LA-136 .....	Feed Reverse Clutch .....		1
55 .....	LA-132 .....	Reverse Clutch Rod .....		1
56 .....	HA-056 .....	Spring Pin .....	3x20mm .....	1
57 .....	LA-133 .....	Feed Worm Shaft .....		1
59 .....	HA-059 .....	Spring Pin .....	3x12mm .....	2
60 .....	LA-150 .....	Feed Shift Rod .....		1
61 .....	TS-1522031 .....	Set Screw .....	M5x10 .....	1
62 .....	HA-062 .....	Key .....	3x3x15mm .....	1
63 .....	LA-149 .....	Feed Gear Shift Fork .....		1
64 .....	LA-151 .....	Cluster Gear Shift Crank .....		1
66 .....	LA-148 .....	Cluster Gear Cover .....		1
67 .....	TS-1504011 .....	Hex Socket Cap Screw .....	M8x10 .....	4
73 .....	TS-1502081 .....	Hex Socket Cap Screw .....	M5x35 .....	2
74 .....	LA-081 .....	Clutch Ring Pin .....		2
75 .....	LA-080 .....	Clutch Ring .....		1
76 .....	TS-1524011 .....	Set Screw .....	M8x8 .....	1
78 .....	LA-082 .....	Overload Clutch Lookout .....		1
79 .....	LA-083 .....	Safety Clutch Spring .....		1

<b>Index No</b>	<b>Part No</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
80	LA-084	Overload Clutch .....		1
81	LA-085	Overload Clutch Sleeve .....		1
82	LA-090	Key .....		1
83	TS-1532052	Pan Head Machine Screw .....	M4x16 .....	3
85	TS-1523031	Set Screw .....	M6x10 .....	2
88	LA-169	Spring .....		1
89	LA-089	Spring Plunger .....		1
90	LA-123	Pinion Shaft Bushing .....		1
91	LA-122	Spacer .....		1
92	LA-087	Overload Clutch Worm Gear (Brass) .....		1
93	LA-086	Overload Clutch Ring .....		1
94	HA-094	Snap Ring .....		1
96	LA-079	Trip Lever .....		1
97	LA-078	Washer .....		1
98	HA-098	Snap Ring .....		1
99	LA-076	Clutch Arm Cover .....		1
100	TS-1523051	Set Screw .....	M6x10 .....	1
101	HA-101	Lock Nut .....		1
102	LA-077	Pin .....		3
103	LA-091	Cam Rod .....		1
104	LA-100	Trip Handle .....		1
106	LA-092	Feed trip Bracket .....		1
107	TS-1503051	Hex Socket Cap Screw .....	M6x20 .....	2
109	HA-109	Key .....	3x3x10mm .....	1
110	LA-130	Feed Reverse Knob Stud .....		1
111	LA-131	Reverse Knob .....		1
112	HA-112	Snap Ring .....		1
113	LA-129	Handwheel Clutch .....		1
114	SB-3/16	Steel Ball .....	3/16" .....	2
115	HA-115	Spring .....		2
117	HA-117	Spring Pin .....		1
118	LA-093	Cam Rod Sleeve Assembly .....		1
121	LA-095	Trip Plunger .....		1
123	LA-121A	Bushing .....		1
124	LA-097	Feed Trip Plunger .....		1
125	LA-126	Handwheel (chrome) .....		1
	LA-126-BR	Handwheel (brushed finish) .....		1
126	LA-125	Handle (chrome) .....		1
	LA-125-BR	Handle (brushed finish) .....		1
127	LA-050A	Spindle .....		1
128	LA-060	Quill Skirt .....		1
129	LA-048	Lock Nut .....		1
131	BB-6206ZZ	Ball Bearing .....	6206-ZZ .....	1
133	LA-051	Nose Piece .....		1
134	LA-052	Spindle Shield .....		1
135	BB-7207C	Ball Bearing .....		2
136	LA-054	Bearing Spacer (large) .....		1
137	LA-053	Bearing Spacer (small) .....		1
140	LA-172	Set Screw .....		1
142	LA-058	Quill .....		1
143	TS-154021	Hex Nut .....	M4 .....	1
144	TS-1521071	Set Screw .....	M4x20 .....	1
145	LA-098	Feed Trip Lever .....		1
146	LA-099	Trip Lever Pin .....		1
148	LA-111	Quill Lock Sleeve .....		1
149	LA-109	Lock Handle (chrome) .....		1
	LA-109-BR	Lock Handle (brushed finish) .....		1
150	HA-150	Screw .....	M5x10 .....	2
151	LA-057	Felt Washer .....		1
153	LA-110	Quill Lock Sleeve .....		1
155	LA-043	T-Bolt Assembly .....		4
156	LA-046	Spacer .....		4

<b>Index No</b>	<b>Part No</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
157 .....	LA-040.....	Lock Nut.....		4
158 .....	HA-158.....	Screw.....	M4x5 .....	2
159 .....	LA-118.....	Micrometer Scale.....		1
161 .....	LA-115.....	Quill Micro-Stop Nut.....		1
162 .....	LA-116.....	Micrometer Nut .....		1
163 .....	LA-117.....	Quill Stop Knob.....		1
164 .....	LA-112.....	Quill Micro-Screw.....		1
165 .....	LA-165A .....	Screw.....	3/8-24UNF x 3/4 .....	1
166 .....	LA-101.....	Quill Pinion Shaft .....		1
168 .....	LA-101A .....	Pin.....		1
171 .....	HA-171 .....	Key.....	4x4x18 mm .....	1
172 .....	LA-107.....	Pinion Shaft Hub.....		1
173 .....	TS-0270021 .....	Set Screw .....	5/16"x1/4"	1
175 .....	LA-106.....	Hub .....		1
176 .....	LA-104.....	Hub Sleeve .....		1
	.....LA-102/3.....	Clock Spring Assembly (includes #177,178) .....		1
177 .....	LA-103.....	Spring Cover.....		1
178 .....	LA-102.....	Clock Spring .....		1
179 .....	TS-0680061 .....	Washer .....	1/2"	1
181 .....	TS-1523011 .....	Set Screw .....	M6x6 .....	2
183 .....	LA-113.....	Lever.....		1
184 .....	LA-114.....	Plunger .....		1
185 .....	LA-124.....	Screw.....		1
186 .....	LA-018.....	Worm Gear .....		1
188 .....	LA-173.....	Set Screw .....		1
189 .....	LA-019.....	Worm Shaft.....		1
190 .....	LA-105.....	Handle .....		1
191 .....	LB-017.....	Plastic Ball .....		1
192 .....	LA-016G.....	Quill Housing .....		1
193 .....	HA-193 .....	Spring .....	10x20mm .....	1
194 .....	RINS30.....	Snap Ring .....		1
195 .....	BH1291 .....	Lock Washer.....		1
196 .....	TS-1524011 .....	Set Screw .....	M8x8 .....	1
197 .....	TS-0561031 .....	Hex Nut.....	3/8"	1
198 .....	KF2R3320 .....	Key.....	3x3x20mm .....	1

### 15.3.1 Base Assembly – Exploded View

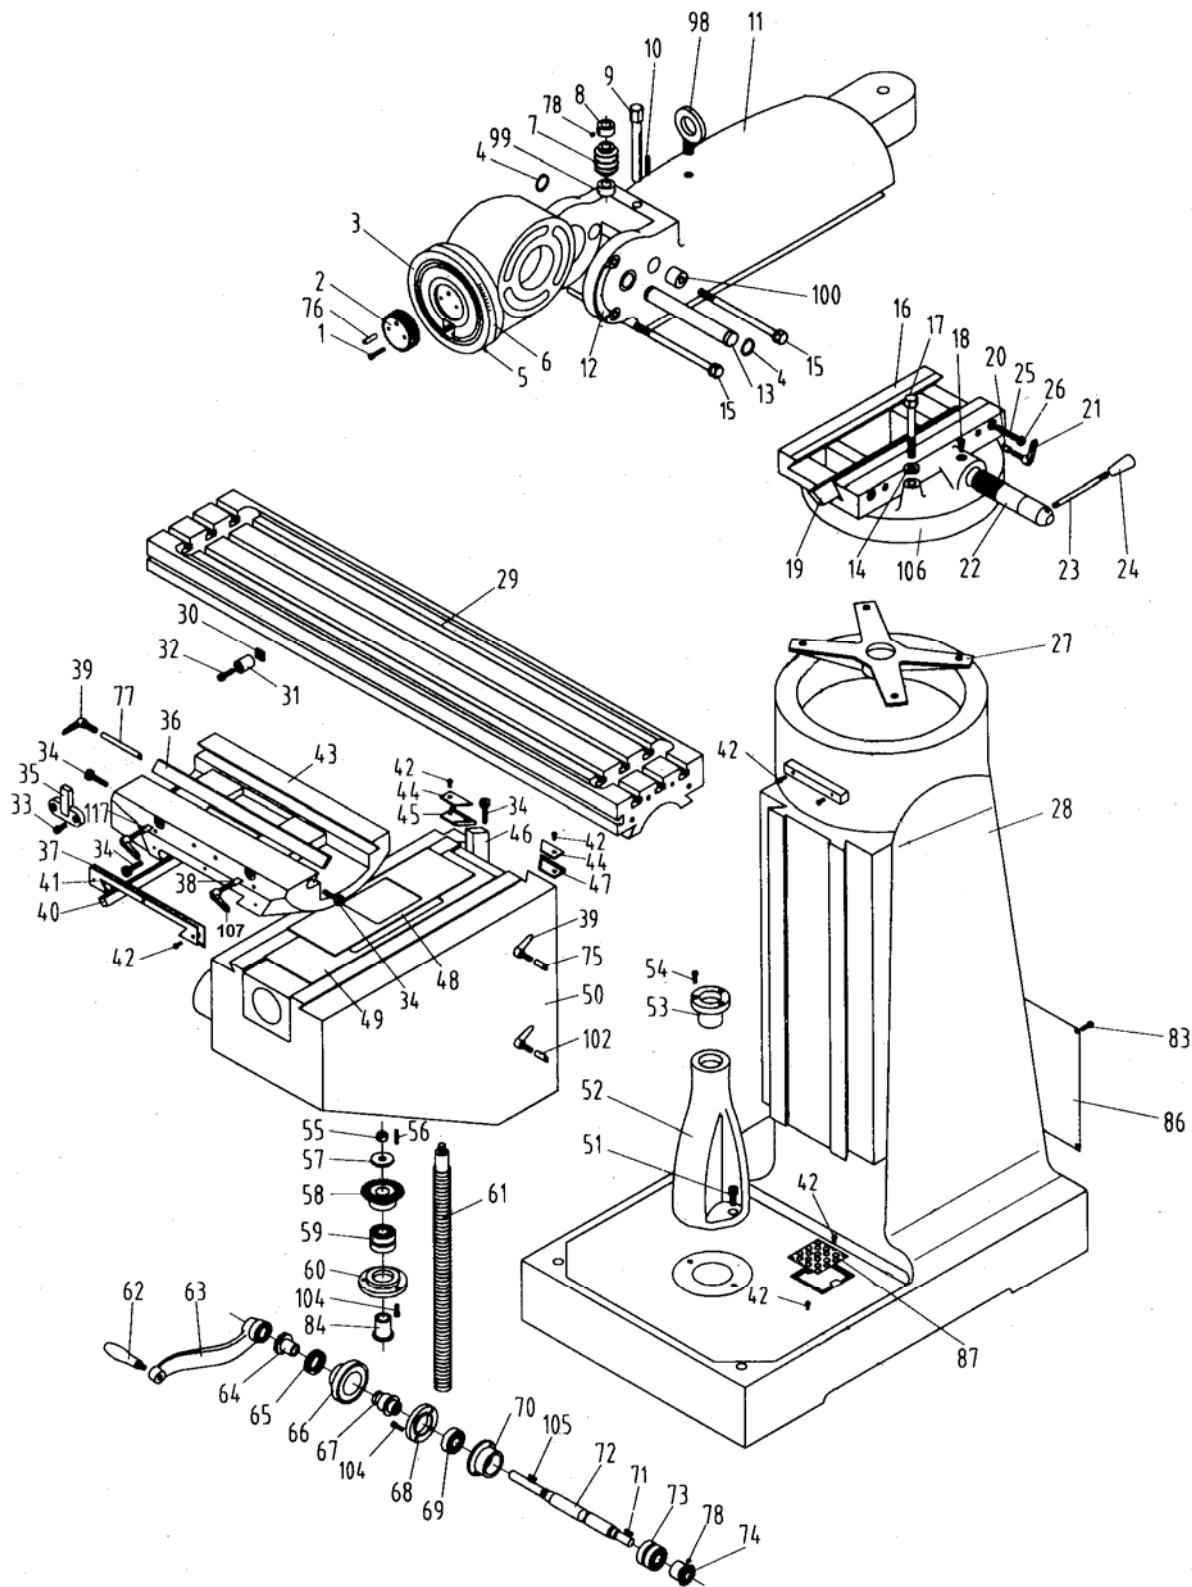


### 15.3.2 Base Assembly – Parts List

<b>Index No</b>	<b>Part No</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
1	LB-001	Hex Socket Cap Screw.....	M6 x30	2
2	LB-023	Gear.....		1
3	LB-020G	Ram Adapter.....		1
4	LB-004	Snap Ring.....	S-28	2
5	LB-005	Rivet.....		15
6	LB-027	Adapter Scale.....		1
7	LB-035	Worm .....		1
8	LB-036	Worm Thrust Washer.....		1
9	LB-034	Shaft .....		1
10	LB-100	Key.....	5 x 5 x 40	1
11	MB-026G	Ram .....		1
12	LB-032	Angle Plate .....		1
13	LB-028	Adapter Pivot Stud.....		1
14	LB-031	Washer .....		4
15	LB-030	Adapter Locking Bolt .....		3
16	MB-009	Turret .....		1
17	LB-030	Lock Bolt.....		4
18	LB-041	Ram Pinion Screw .....		1
19	LB-011	Ram/Turret Gib .....		1
20	LS-005E	Lock Plunger.....		2
21	LB-014	Ram Lock Bolt Handle.....		2
22	LB-015	Ram Pinion .....		1
23	LB-016	Handle .....		1
24	LB-017	Black Plastic Ball .....		1
25	TS-0211131	Set Screw .....	3/8 x 2	2
26	TS-0561031	Hex Nut.....	3/8	2
27	MB-008	Spider .....		1
28	MB-000AG	Column .....		1
29	JTM1-330A	Table.....		1
30	LT-027	Stop Nut.....		2
31	LT-028	Table Stop .....		2
32	TS-1504071	Hex Socket Cap Screw.....	M8 x 35	2
33	TS-1504031	Hex Socket Cap Screw.....	M8 x 16	2
34	LK-002	Gib Adjusting Screw .....		6
35	LS-003	Table Stop Bracket.....		1
36	LS-008	Saddle/Table Gib .....		1
37	LS-013	Felt Wiper .....		2
38	LS-005B	Table Lock Plunger.....	16mm	2
39	LS-011	Saddle Lock Handle .....		5
40	LS-001	Saddle/Knee Gib .....		1
41	LS-014	Wiper Plate .....		2
42	LS-042	Screw.....		16
43	MS-000G	Saddle .....		1
44	LS-017A	Wiper Felt .....		2
45	LS-016A	Felt (left).....		1
46	LK-001	Knee/Column Gib .....		1
47	LS-016	Knee/Wiper Felt (right).....		1
48	LK-007	Upper Chip Guard .....		1
49	LK-006	Lower Chip Guard .....		1
50	MK-000G	Knee .....		1
51	TS-1505031	Hex Socket Cap Screw.....	M10 x 25	2
52	MK-012G	Elevating Screw Housing.....		1
53	MK-014	Elevating Screw Nut .....		1
54	TS-1503041	Hex Socket Cap Screw.....	M6 x 16	8
55	TS-0561052	Hex Nut.....	1/2-20UNF	1
56	LK-058	Key.....	4 x 4 x 30	1
57	LK-022	Washer .....		1
58	MK-021	Bevel Gear .....		1
59	BB-6306ZZ	Ball Bearing .....		2

<b>Index No</b>	<b>Part No</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
60	MK-019.....	Bearing Retainer Ring .....		1
61	MK-016.....	Elevating Screw .....		1
62	LK-037.....	Handle (chrome) .....		1
	.....LK-037-BR .....	Handle (brushed finish) .....		1
63	LK-036.....	Elevating Crank .....		1
64	LK-035.....	Clutch Insert.....		1
65	LK-034.....	Dial Lock Nut .....		1
66	LK-033.....	Dial.....		1
67	LK-032.....	Dial Holder .....		1
68	LK-030.....	Bearing Retainer Ring .....		1
69	BB-6204ZZ .....	Ball Bearing .....		1
70	LK-029.....	Bearing Cap.....		1
71	LK-075.....	Key.....	4 x 4 x 18	2
72	MK-028.....	Elevating Shaft .....		1
73	BB-6204ZZ .....	Ball Bearing .....		2
74	MK-024.....	Bevel Pinion.....		1
75	LK-003.....	Plunger .....		1
76	LK-081.....	Spring Pin .....	8 x 30	1
77	LS-010.....	Saddle Lock Plunger .....		1
83	MB-090.....	Screw.....	1/4 x 3/8	4
84	MK-038.....	Bushing.....		1
86	MB-004.....	Cover .....		1
87	MB-041.....	Strainer Screen.....		2
98	RIBW34.....	Hoisting Ring .....		1
99	LB-036.....	Worm Thrust Washer.....		1
100	LB-033.....	Thrust Washer .....		1
102	LK-003.....	Lock Plunger.....		1
104	TS-1503051 .....	Hex Socket Cap Screw.....	M6 x 20	6
105	KEY3320 .....	Key.....	3x3x20mm	1
106	MB-00BG .....	Turret Scale .....		1
107	LS-006B .....	Saddle Ratcheting Lever (chrome) .....		3
	.....LS-006B-BR .....	Saddle Ratcheting Lever (brushed finish) .....		3
117	LS-005A .....	Table Lock Plunger – L.....		3
	JTM1-WCF .....	Flat Way Cover (not shown) .....		1
	JTM1-WCA.....	Pleated Way Cover (not shown) .....		1
	JTM4VS-TB.....	Tool Box Kit Complete (not shown) .....		1
	STRIPE-1-3/4.....	JET Stripe .....	1-3/4"W	per ft.


#### 15.4.1 Table Leadscrew Assembly – Exploded View

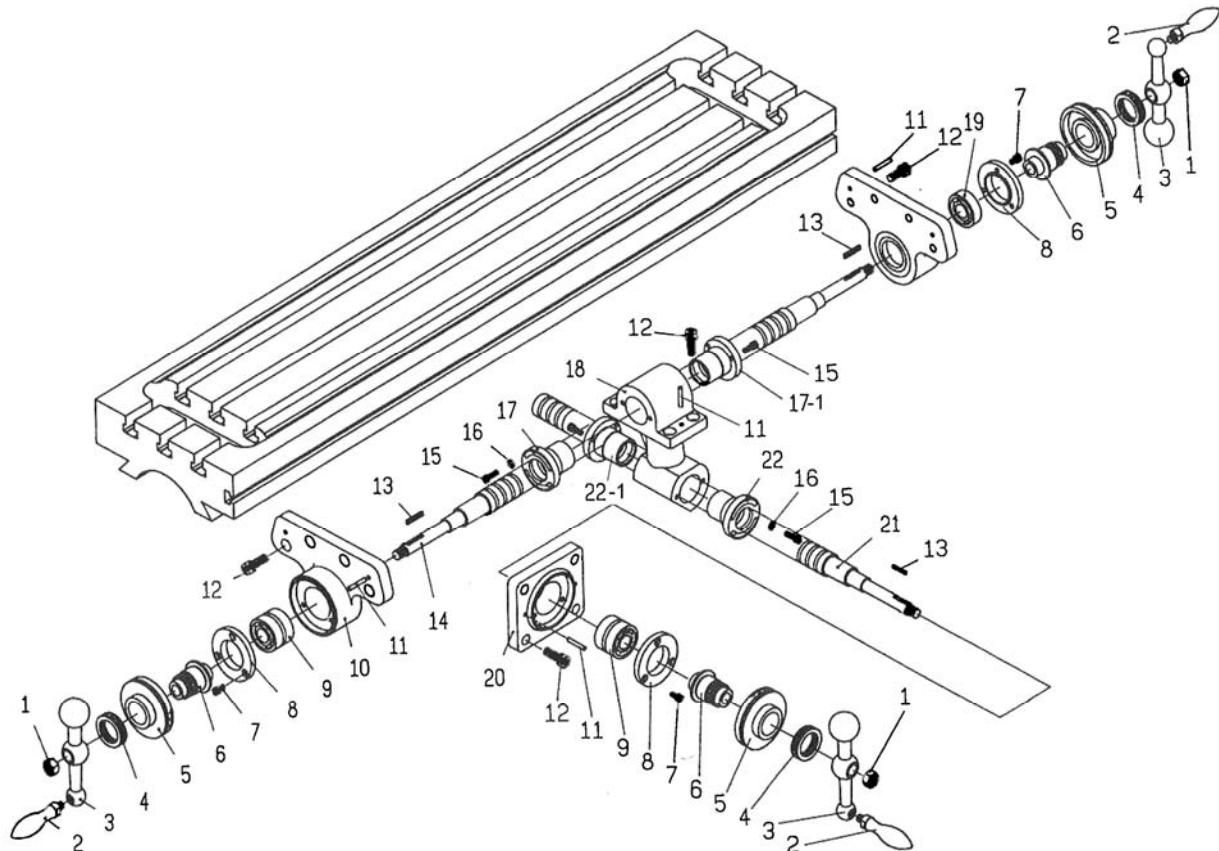

#### 15.4.2 Table Leadscrew Assembly – Parts List

Index No	Part No	Description	Size	Qty
1	TS-0571052	Jam Nut	1/2-20UNF	3
2	LT-010C	Handle		3
	LT-010C-CHR	Chrome Surface Handle		3
3	LT-010B	Ball Crank		3
	LT-010B-CHR	Chrome Surface Ball Crank		3
4	LT-009	Dial Lock Nut		3
5	LT-008	Dial		3
6	LT-007	Dial Holder		3
7	TS-1503021	Hex Socket Cap Screw	M6 x 12	3
8	LT-005	Bearing Retainer Ring		3
9	BB-6204ZZ	Ball Bearing		3
10	LT-002	Bearing Bracket		2
11	LS-009	Spring Pin	5 x 30	8
12	TS-1505031	Hex Socket Cap Screw	M10 x 25	16
13	BD920-A04	Key	3 x 3 x 25	3
14	MT-015B	Longitudinal Feed Screw		1
15	TS-1503041	Hex Socket Cap Screw	M6 x 16	10
16	TS-1550051	Washer	M7	4
17	MT-019B	Feed Screw Nut Set (includes #17-1)		1
18	MT-017	Feed Nut Bracket		2
19	BB-6204ZZ	Ball Bearing		1
20	MT-025	Cross Feed Bearing Bracket		1
21	MT-024	Cross Feed Screw		1
22	MT-022	Cross Feed Nut Set (includes #22-1)		2

### 15.5.1 One-Shot Lubrication System – Exploded View

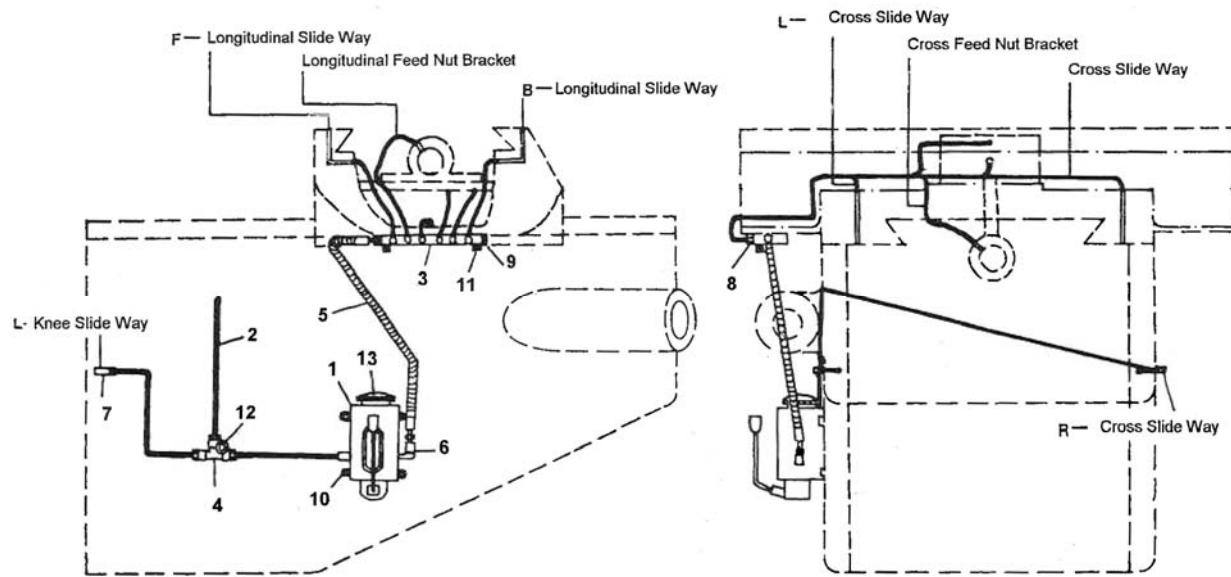

### 15.5.2 One-Shot Lubrication System – Parts List

Index No	Part No	Description	Size	Qty
.....	LT-8-A	Hand Oiler Assembly (includes #1,1A,4,5,9)	.....	1
1	LT-8	Hand Oiler	.....	1
1A	LT-8-SG	Hand Oiler Sight Glass (with gasket)	.....	1
2	ALMP-04	Aluminum Pipe	3.5M	1
.....	ALMP-04-VS	Oil Line Set w/ Fittings	.....	1
3	DB-4	Oil Regulating Distributor	.....	1
4	PKD-4	T-Joint	.....	1
5	FHC-404	Flexible Steel Tube	.....	1
6	PH-1-1/PB-4	Check Joint	.....	2
7	PH-4	Elbow Joint	.....	2
8	PA-4/PB-4	Straight Joint	.....	14
9	PG-004	Union	.....	1
10	JTM4VS-BUTW1458	Screw	.....	4
11	TS-1503061	Hex Socket Cap Screw	M6 x 25	2
12	TS-1502061	Hex Socket Cap Screw	M5 x 25	1
13	LT-8-C	Oil Cap	.....	1