



## Table and Fence Breakdown

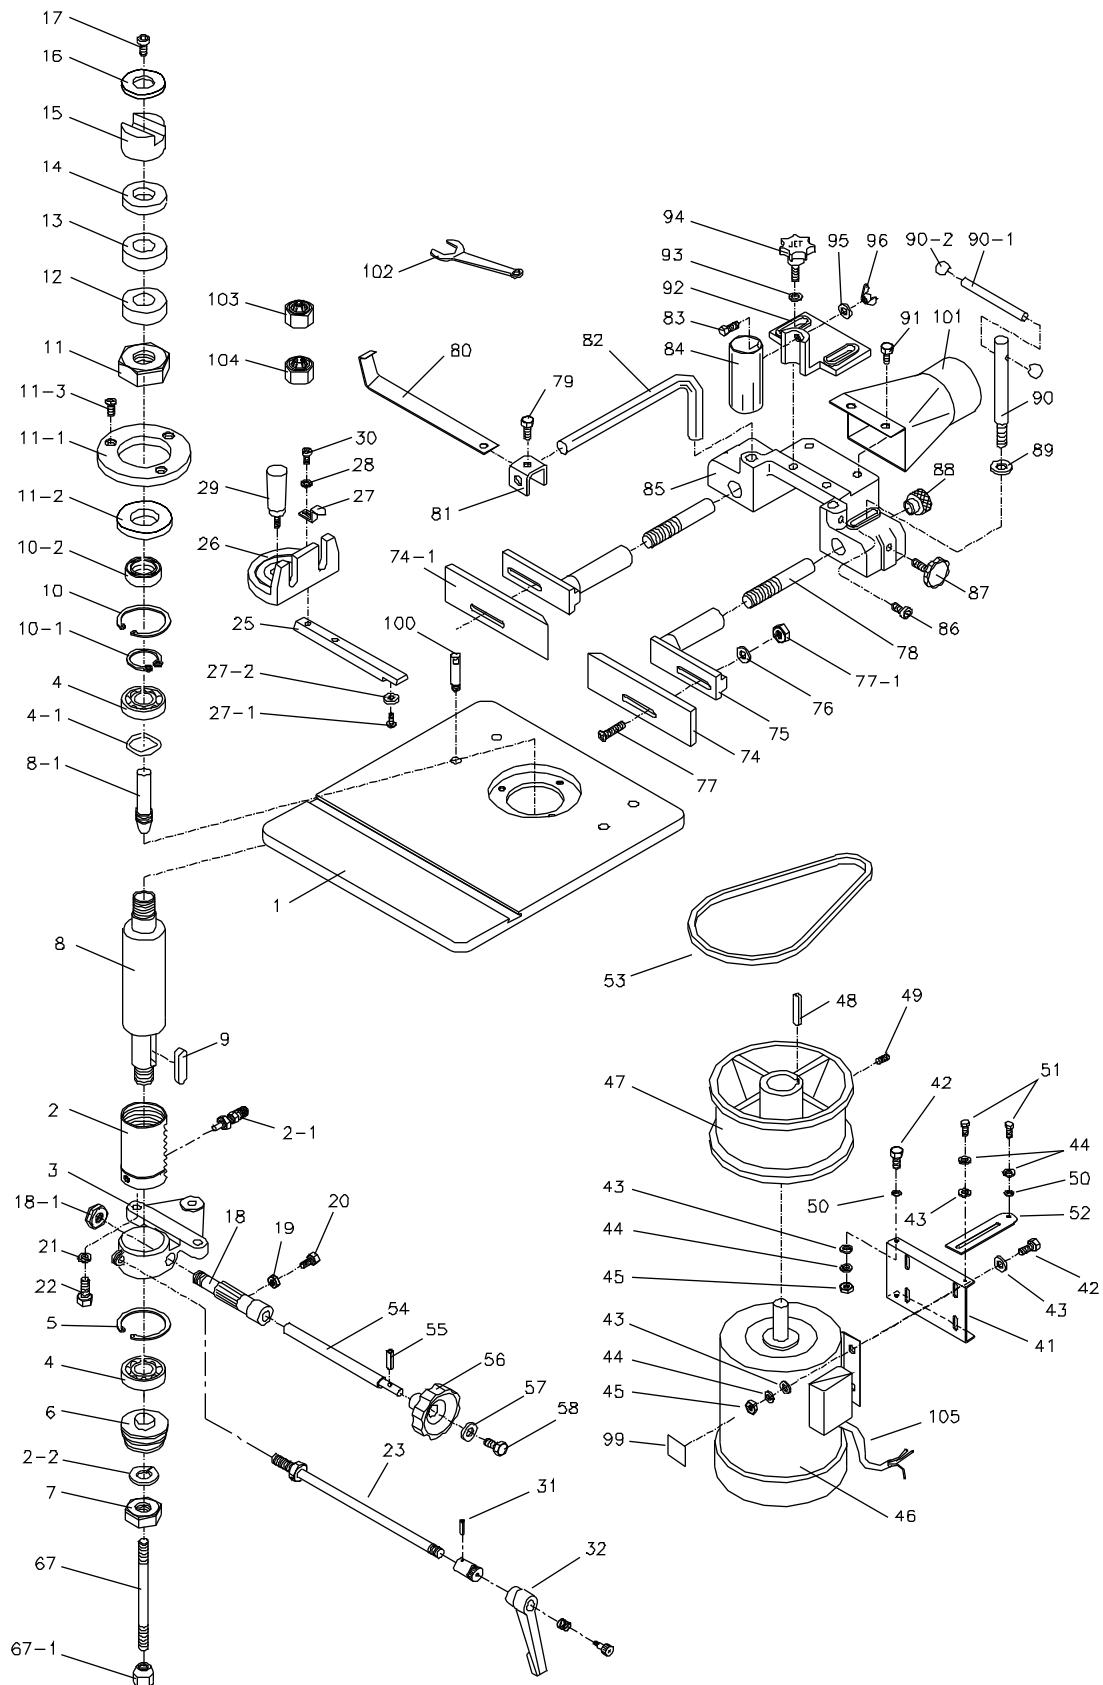

## Cabinet Breakdown

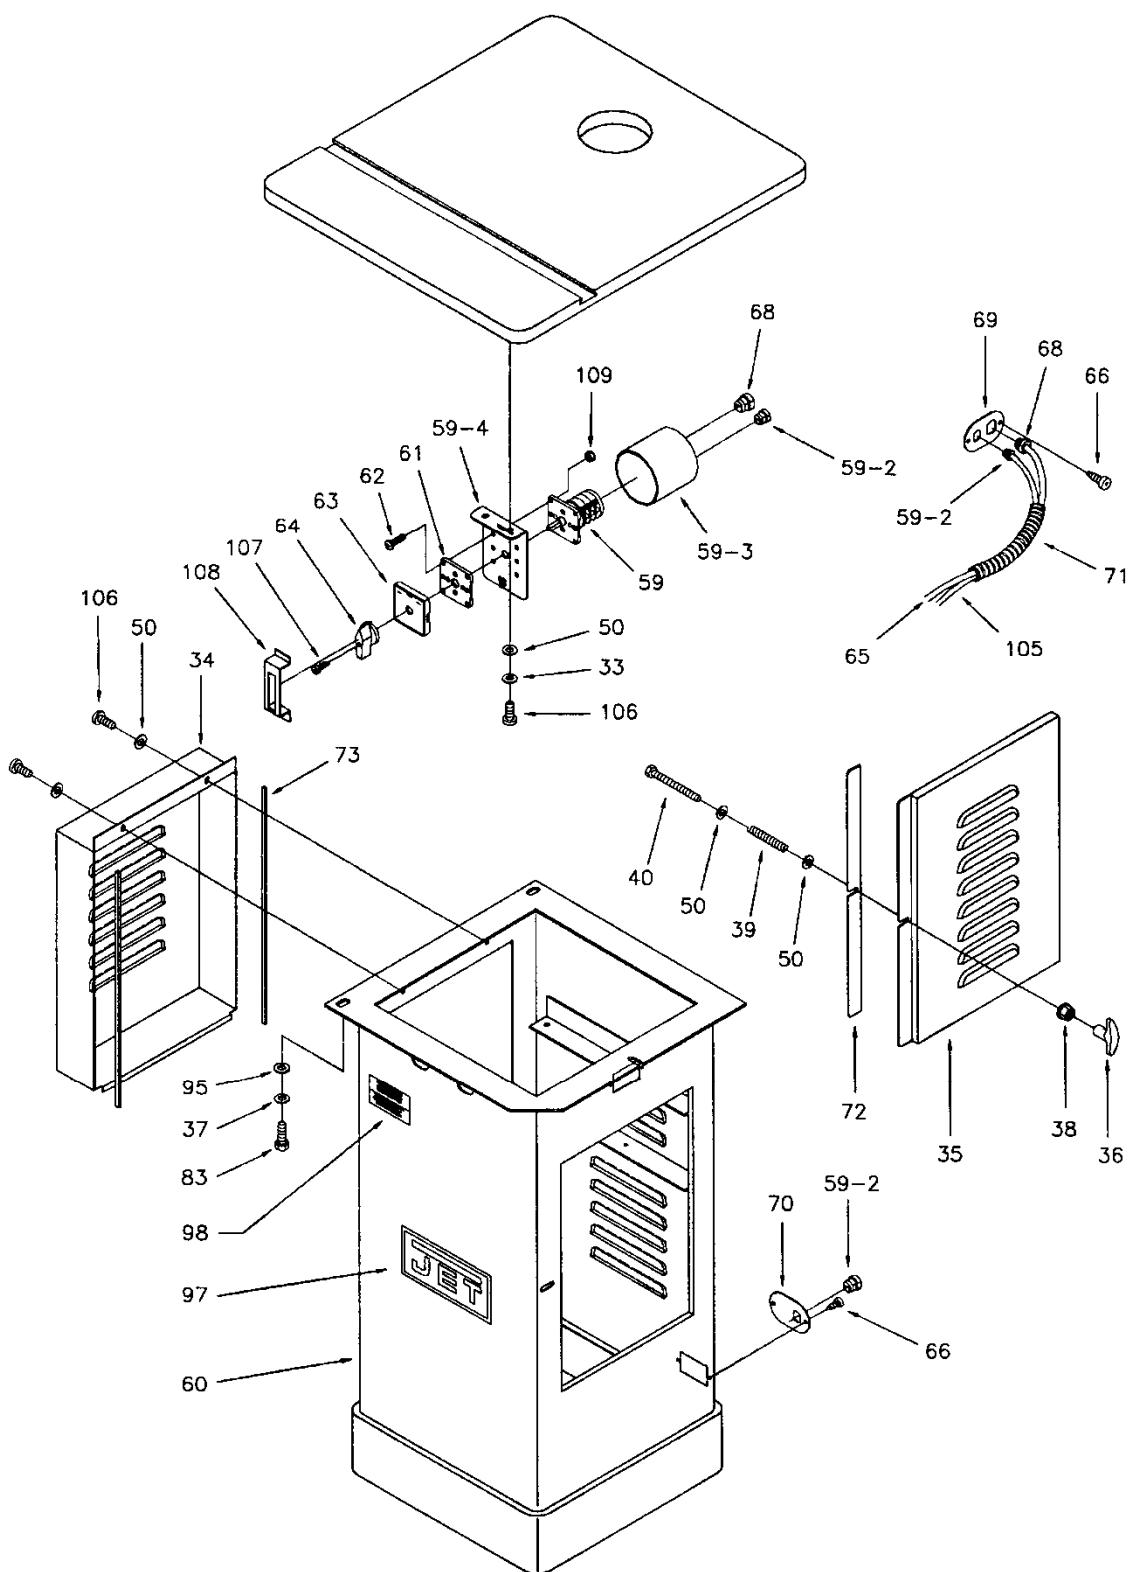

## Parts List

Index No.	Part No.	Description	Size	Qty
1.....	JWS22CS-1 .....	Table .....		1
2.....	JWS22CS-2 .....	Spindle Housing .....		1
2-1.....	JWS22CS-2-1 .....	Spindle Locking Mandrel .....		1
2-2.....	JWS22CS-2-2 .....	Lock Washer .....	M18.5 .....	1
3.....	JWS18HO-3 .....	Cutter Spindle Bracket .....		1
4.....	BB-6005ZZ .....	Ball Bearing .....		2
4-1.....	JWS18HO-4-1 .....	Wave Washer .....		1
5.....	JWS18HO-5 .....	Snap Ring .....		1
6.....	JWS22CS-6 .....	Pulley .....		1
7.....	TS-0561082 .....	Hex Nut .....	3/4x16UNF .....	1
8.....	JWS22CS-8 .....	Main Spindle .....		1
8-1.....	JWS18HO-8-1 .....	Shaft (1/2) .....		1
	JWS18HO-8-1A .....	Shaft ** (3/4-not shown) .....		1
9.....	JWS22CS-9 .....	Key .....		1
10.....	JWS18HO-10 .....	Snap Ring (spindle housing) .....		1
10-1.....	JWS18HO-10-1 .....	Snap Ring (main spindle) .....		1
10-2.....	OS-25478 .....	Oil Seal .....		1
11.....	JWS18HO-11 .....	Hex Nut (spindle) .....		1
11-1.....	JWS18HO-11-1 .....	Table Ring ( <i>serial # 0092192 and lower</i> ) .....		1
11-1.....	JWS18HO-11-1N .....	Table Ring ( <i>serial # 0092193 and higher</i> ) .....		1
11-2.....	JWS18HO-11-2 .....	Table Ring .....		1
11-3.....	JSL10TS-7 .....	Phillip's Screw .....	1/4"x5/8" .....	3
12.....	JWS18HO-12 .....	Spacer (1/2) .....	.80 .....	1
	JWS18HO-12A .....	Spacer ** (3/4-not shown) .....	1.00 .....	1
13.....	JWS18HO-13 .....	Spacer (1/2) .....	.60 .....	1
	JWS18HO-13A .....	Spacer ** (3/4-not shown) .....	.75 .....	1
14.....	JWS18HO-14 .....	Spacer (1/2) .....	.40 .....	1
14A.....	JWS18HO-14A .....	Spacer ** (3/4-not shown) .....	.50 .....	1
15.....	JWS18HO-15 .....	Fixed Bushing (1/2) .....		1
	JWS18HO-15A .....	Fixed Bushing ** (3/4-not shown) .....		1
16.....	JWS18HO-16 .....	Washer (1/2) .....		1
	JWS18HO-16A .....	Washer ** (3/4-not shown) .....		1
17.....	TS-0208061 .....	Hex Cap Bolt (1/2) .....	5/16x1 .....	1
	TS-0209051 .....	Hex Cap Bolt ** (3/4-not shown) .....	3/8x1 .....	1
18.....	JWS18HO-18 .....	Quill .....		1
18-1.....	JWS18HO-18-1 .....	Nut .....	1/2-20 UNF .....	1
19.....	TS-0561021 .....	Hex Nut .....	5/16 .....	1
20.....	TS-0051031 .....	Hex Head Bolt .....	5/16x5/8 .....	1
21.....	JWS18HO-21 .....	Lock Washer .....	.1/2 .....	3
22.....	TS-0070041 .....	Hex Cap Bolt .....	1/2x1-3/4 .....	3
23.....	JWS22CS-23 .....	Lock Bar .....		1
25.....	JSL10TS-6 .....	Guide Plate .....		1
26.....	JSL10TS-3 .....	Miter Gauge Body .....		1
27.....	JWS18HO-27 .....	Plate .....		1
27-1.....	JWS18HO-27-1 .....	Flat Head Screw .....	3/16x1/4 .....	1
27-2.....	JWS18HO-27-2 .....	Washer (special) .....		1
28.....	JWS18HO-28 .....	Washer .....		1
29.....	JSL10TS-1 .....	Knob .....		1
30.....	JWS18HO-30 .....	Screw .....	3/16x1/4 .....	1
31.....	JWS22CS-31 .....	Spring Pin .....	M3x19 .....	1
32.....	JWS22CS-32 .....	Lock Handle .....		1
33.....	TS-0680041 .....	Lock Washer .....	.1/4 .....	2
34.....	JWS22CS-34 .....	Motor Cover .....		1
35.....	JWS22CS-35 .....	Cabinet Cover .....		1


**Note:** (1/2) and (3/4) refer to 1/2" or 3/4" spindles

<b>Index No.</b>	<b>Part No.</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
36	JTAS10-45	Handle .....		1
37	TS-0720091	Lock Washer .....	3/8.....	4
38	TS-1540021	Hex Nut.....	M6.....	1
39	JTAS10-41	Spring .....		1
40	TS-1482101	Hex Cap Screw .....	M6x50.....	1
41	JWS22CS-41	Motor Plate.....		1
42	TS-0208061	Hex Cap Bolt .....	5/16x1.....	6
43	TS-0680031	Washer .....	5/16.....	9
44	TS-0720081	Lock Washer .....	5/16 .....	8
45	TS-0561021	Hex Nut.....	5/16 .....	6
46	JWS22CS-46	Motor .....		1
47	JWS18HO-47	Motor Pulley .....		1
48	JWS18HO-48	Key .....		1
49	JWS18HO-49	Set Screw .....	1/4x3/8.....	1
50	JWS22CS-50	Washer .....	5/16x18.....	5
51	TS-0081031	Hex Cap Screw .....	5/16x3/4.....	2
52	JWS22CS-52	Motor Plate Bracket .....		1
53	VB-M23	V-Belt.....		1
54	JWS22CS-54	Feed Bar .....		1
55	JWS18HO-55	Spring Pin .....	M3x18.....	1
56	JWS18HO-56	Handle .....		1
57	TS-0680021	Washer .....	1/4 .....	1
58	TS-0050021	Hex Cap Bolt .....	1/4 x 5/8.....	1
59	JWS18HO-59	Switch Assembly (includes #61,62,63,64,107,109).....		1
59-2	JWS22CS-59-2	Strain Relief .....		3
59-3	JWS18HO-59-3	Switch Cover .....		1
59-4	JWS22CS-59-4	Plate .....		1
60	JWS22CS-60	Cabinet .....		1
61	JWS18HO-61	Plate .....		1
62	JWS18HO-62	Screw .....		4
63	JWS18HO-63	Switch Plate .....		1
64	JWS18HO-64	Switch Handle .....		1
65	JWS22CS-65	Power Cord .....		1
66	JTAS10-28	Tap Screw.....	M5x10.....	4
67	JWS22CS-67	Draw Bar.....	5/16x6.....	1
67-1	JWS22CS-67-1	Taper Nut .....		1
68	JWS22CS-68	Strain Relief .....		2
69	JWS22CS-69	Cord Plate .....		1
70	JTAS10-47	Cord Clamp Plate .....		1
71	JWS22CS-71	Power Cord Sleeve .....		1
72	JWS22CS-72	Foam Strip .....		1
73	JWS22CS-73	Rubber Padding .....		2
74	JWS18HO-74	Fence (right).....		1
74-1	JWS18HO-74-1	Fence (left).....		1
75	JWS18HO-75	Guide Bar .....		2
76	TS-0680031	Washer .....	5/16 .....	2
77	JWS18HO-77	Flat Head Machine Screw .....	5/16x1-3/4.....	2
77-1	TS-0561021	Hex Nut.....	5/16 .....	2
78	JWS18HO-78	Lead Screw .....		2
79	TS-0050031	Hex Cap Bolt .....	1/4x3/4.....	2
80	JWS18HO-80	Guide Plate .....		2
81	JWS18HO-81	Slide Block .....		2
82	JWS18HO-82	Guide Plate Support.....		2
83	TS-0060051	Hex Cap Bolt .....	3/8x1 .....	1

<b>Index No.</b>	<b>Part No.</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
84.....	JWS18HO-84 .....	Safety Shield .....		1
85.....	JWS18HO-85 .....	Fence Body .....		1
86.....	TS-0209021 .....	Hex Socket Cap Bolt.....	3/8x5/8.....	2
87.....	JWS18HO-87 .....	Lock Knob .....	3/8.....	2
88.....	JWS18HO-88 .....	Knob .....		2
89.....	TS-0680061 .....	Washer .....	1/2 .....	2
90.....	JWS18HO-90 .....	Lock Handle .....		2
90-1.....	JWS18HO-90-1 .....	Handle .....	1/4.....	2
90-2.....	JWS18HO-90-2 .....	Round Knob .....	1/4.....	4
91.....	TS-0050051 .....	Hex Cap Bolt .....	1/4x1/2.....	2
92.....	JWS18HO-92 .....	Safety Shield Mount .....		1
93.....	TS-0680031 .....	Washer .....	5/16 .....	2
94.....	JWS18HO-94 .....	Knob .....	5/16x1.....	2
95.....	TS-0680041 .....	Washer .....	3/8 .....	1
96.....	JWS18HO-96 .....	Butterfly Nut .....		1
97.....	JWS18HO-97 .....	Label .....		1
98.....	JWS18HO-98 .....	Warning Label .....		1
99.....	JWS18HO-99 .....	Motor Name Plate .....		1
100.....	JWS18HO-100 .....	Stop Pin .....		2
101.....	JWS18HO-101 .....	Dust Chute .....		1
102.....	JWS22CS-102 .....	Spanner Wrench ** .....		1
103.....	JWS22CS-103 .....	Collet w/Nut** .....	1/4 .....	1
104.....	JWS22CS-104 .....	Collet w/Nut** .....	1/2 .....	1
105.....	JWS22CS-105 .....	Motor Cord .....		1
106.....	TS-0207021 .....	Hex Cap Bolt .....	1/4x1/2 .....	4
107.....	JWS18HO-107 .....	Screw .....		1
108.....	JWS22CS-108 .....	Lock Out Bracket .....		1
109.....	JWS18HO-109 .....	Nut .....		6
110.....	JWS22CS-110 .....	I.D. Label .....		1
111.....	JWS22CS-111 .....	Label (spindle direction) .....		1
112.....	JWS22CS-112 .....	Label (spindle lock) .....		1
.....	JWS22CS-MGCP ....	Miter Gauge Complete (includes # 25 thru 30) .....		1
.....	JWS22HO-HK .....	Hardware Kit (shaper - not shown) .....		1
.....	JWS18HO-FACP .....	Fence Assy Complete (not shown) .....		1
.....	JWS22CS-AP .....	Accessory Package .....		1

\*\* included in JWS22CS-HK, Hardware Kit

## Electrical Schematic

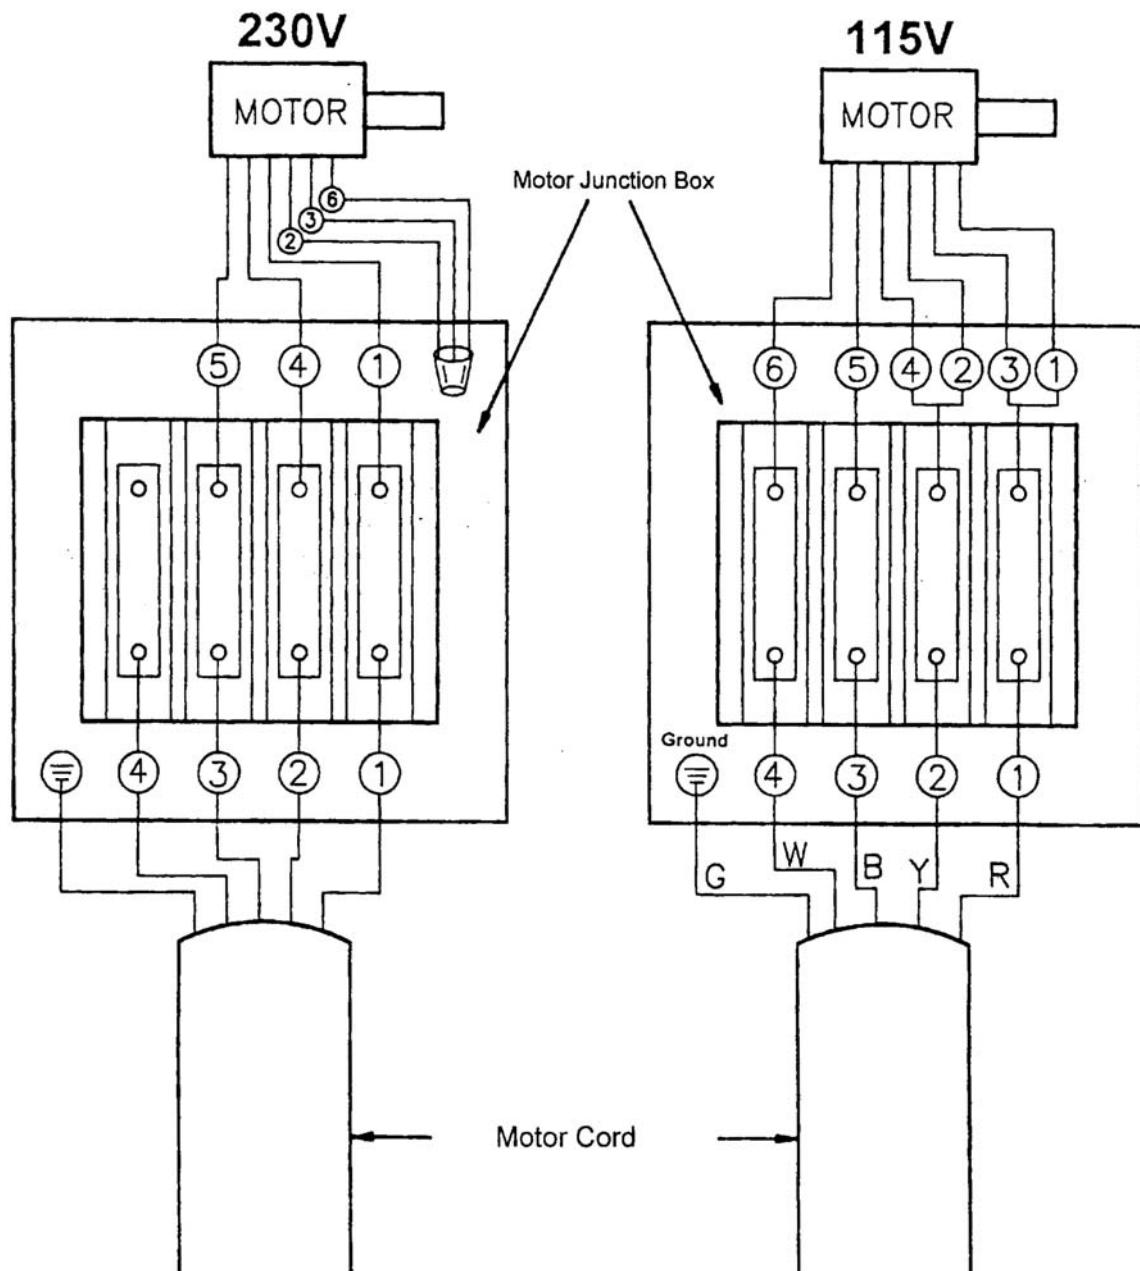

## Electrical Schematic for the Forward/Reverse Switch

