



Operation and Maintenance Instructions Geared Head Bench Lathe

Models GHB-1340A, GHB-1440A




(GHB-1340A shown with optional stand 321443AK)

For Parts List and Electrical Diagrams, see document M-321357A

JET
427 New Sanford Road
LaVergne, Tennessee 37086
Ph.: 800-274-6848
www.jettools.com

Part No. M-321357A-1
Revision G1 11/2014
Copyright © 2014 JET


1.0 BDB-1340A Headstock Assembly I – Exploded View

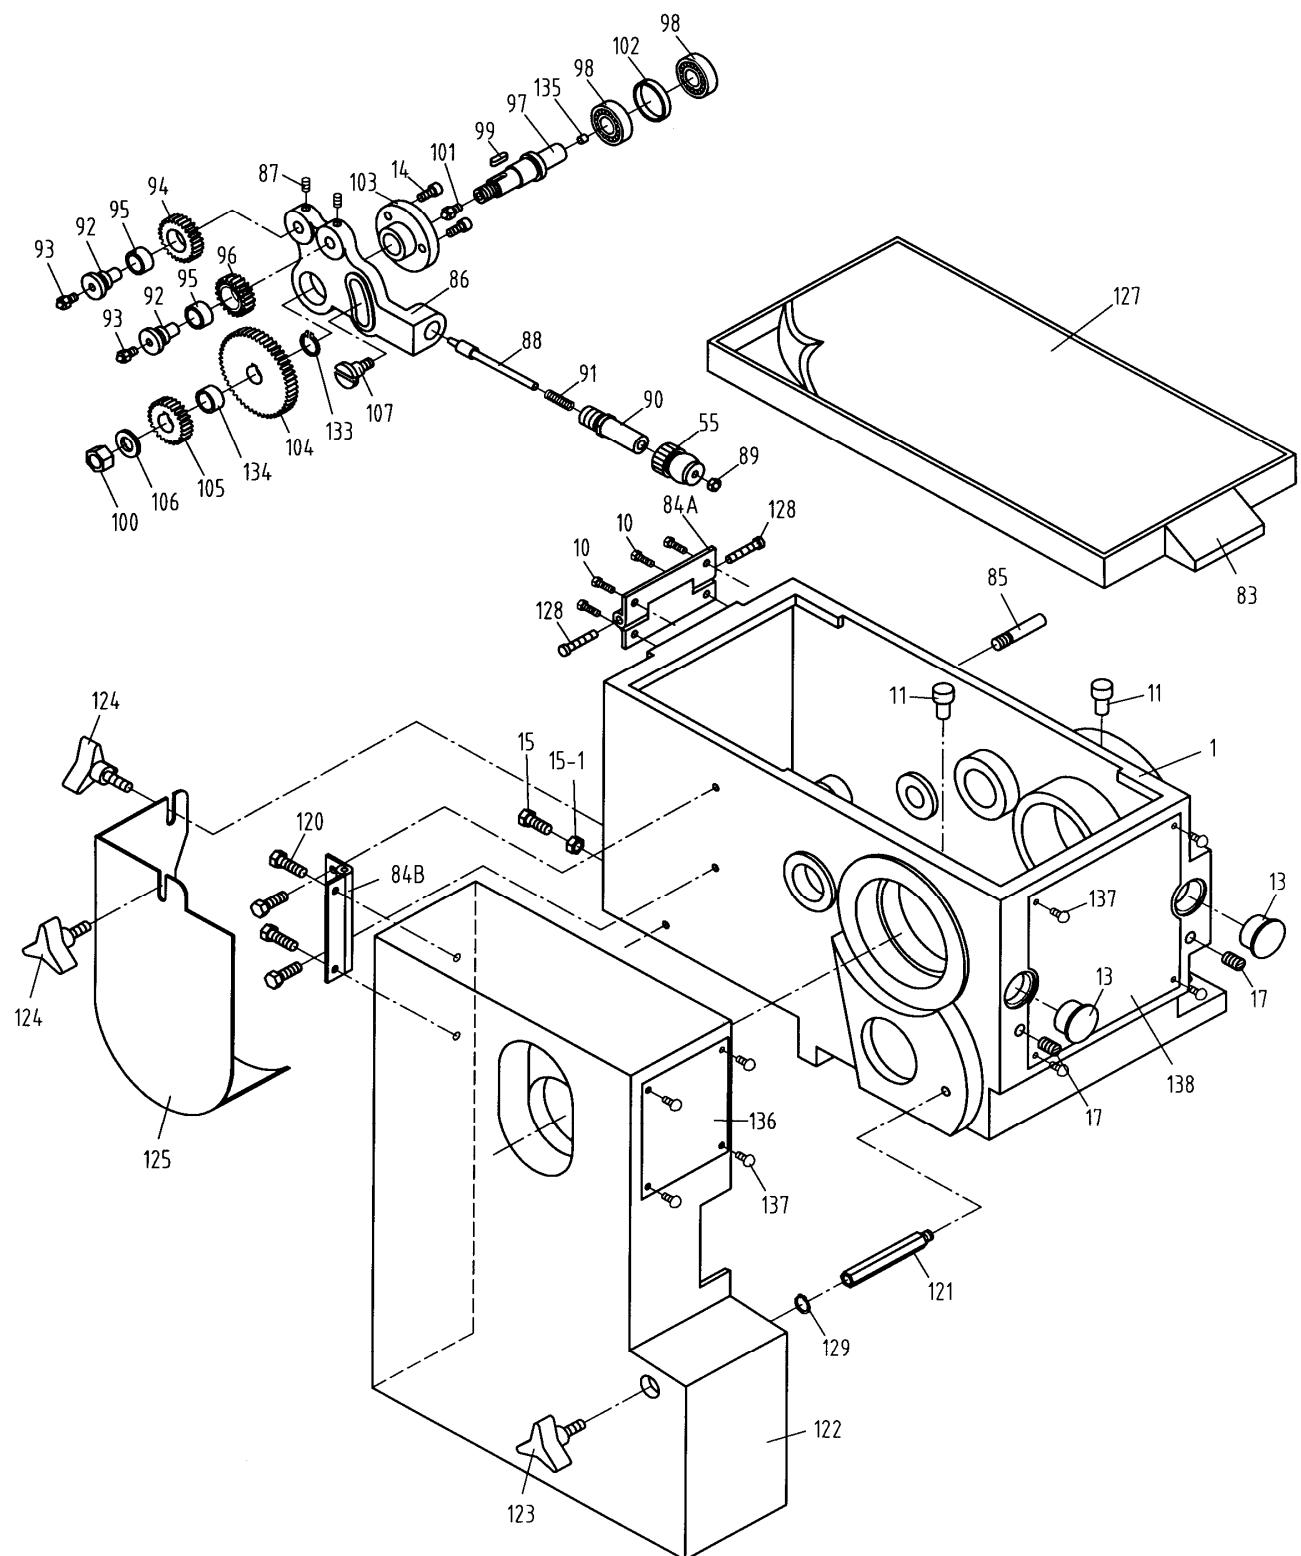

1.1 BDB-1340A Headstock Assembly I – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|-------------------|----------------------|------------|-----|
| 1 | 04101B | Headstock Casting | | 1 |
| 10 | TS-1482021 | Hex Socket Cap Screw | M6 x 12 | 4 |
| 11 | 04501A | Inlet Plug | | 2 |
| 13 | BDB1340-H13 | Oil Sight Glass | | 2 |
| 14 | TS-1503031 | Hex Socket Cap Screw | M6 x 12 | 3 |
| 15 | TS-1490081 | Hex Cap Bolt | M8 x 45 | 2 |
| 15-1 | TS-1540061 | Nut | M8 | 2 |
| 17 | BDB1340-H17 | Screw | 1/8" | 2 |
| 55 | 04733B | Knob | | 1 |
| 83 | 04310 | Cover | | 1 |
| 84A | 04723A | Cover Hinge | | 1 |
| 84B | 04723B | End Cover Hinge | | 1 |
| 85 | 04705 | Strut | | 1 |
| 86 | BDB1340A-02118A | Arm | | 1 |
| 87 | TS-1523031 | Set Screw | M6 x 10 | 2 |
| 88 | 04725B | Plunger | | 1 |
| 89 | BDB1340-H89 | Cap Nut | | 1 |
| 90 | 04734B | Spring Sleeve | | 1 |
| 91 | BDB1340-H91 | Spring | 1x9x50 | 1 |
| 92 | 04721 | Idle Shaft | | 2 |
| 93 | BDB1340-H93 | Oil Nipple | | 2 |
| 94 | 04719 | Gear | 1.5m26T | 1 |
| 95 | 04303 | Bushing | | 2 |
| 96 | 04720 | Gear | 1.5m21T | 1 |
| 97 | BDB1340A-02717A | Output Shaft | | 1 |
| 98 | BB-6202ZR | Ball Bearing | 6202ZR | 2 |
| 99 | BDB1340A-H99 | Key | 5 x 5 x 50 | 1 |
| 100 | TS-1540081 | Hex Nut | M12 | 1 |
| 101 | BDB1340-H93 | Oil Nipple | | 1 |
| 102 | 04716 | Spacer | | 1 |
| 103 | 04119A | Flange | | 1 |
| 104 | BDB1340A-02718A | Gear | 1.5m50T | 1 |
| 105 | GH1340A-05735 | Gear | 1.25m32T | 1 |
| | 32A5726A | Gear | 1.25m42T | 1 |
| | BDB1340A-32A5726A | Gear | 1.25m44T | 1 |
| 106 | BDB1340-H106 | Washer | | 1 |
| 107 | 04714 | Bolt | | 1 |
| 120 | TS-1482021 | Cap Screw | M6 x 12 | 4 |
| 121 | BDB1340A-02722A | Stud | | 1 |
| 122 | BDB1340A-02305A | End Cover | | 1 |
| 123 | BDB1340-H123 | Knob | | 1 |
| 124 | BDB1340-H124 | Knob | | 2 |
| 125 | 04724 | Cover | | 1 |
| 127 | BDB1340-H127 | Rubber Mat | | 1 |
| 128 | TS-1503081 | Hex Socket Cap Screw | M6 x 35 | 2 |
| 129 | BDB1340-H129 | C-Clip | 8 | 1 |
| 133 | BDB1340A-H133 | C-clip for Shaft | 19 | 1 |
| 134 | BDB1340A-02124 | Spacer | | 1 |
| 135 | BDB1340A-H135 | Plug | 5 | 1 |
| 136 | BDB1340A-H136 | Sign Plate | | 1 |
| 137 | BDB1340A-H137 | Half Round Cap Screw | M3x50 | 8 |
| 138 | BDB1340A-H138 | Sign Plate | | 1 |


2.1 BDB-1340A Headstock Assembly II – Exploded View

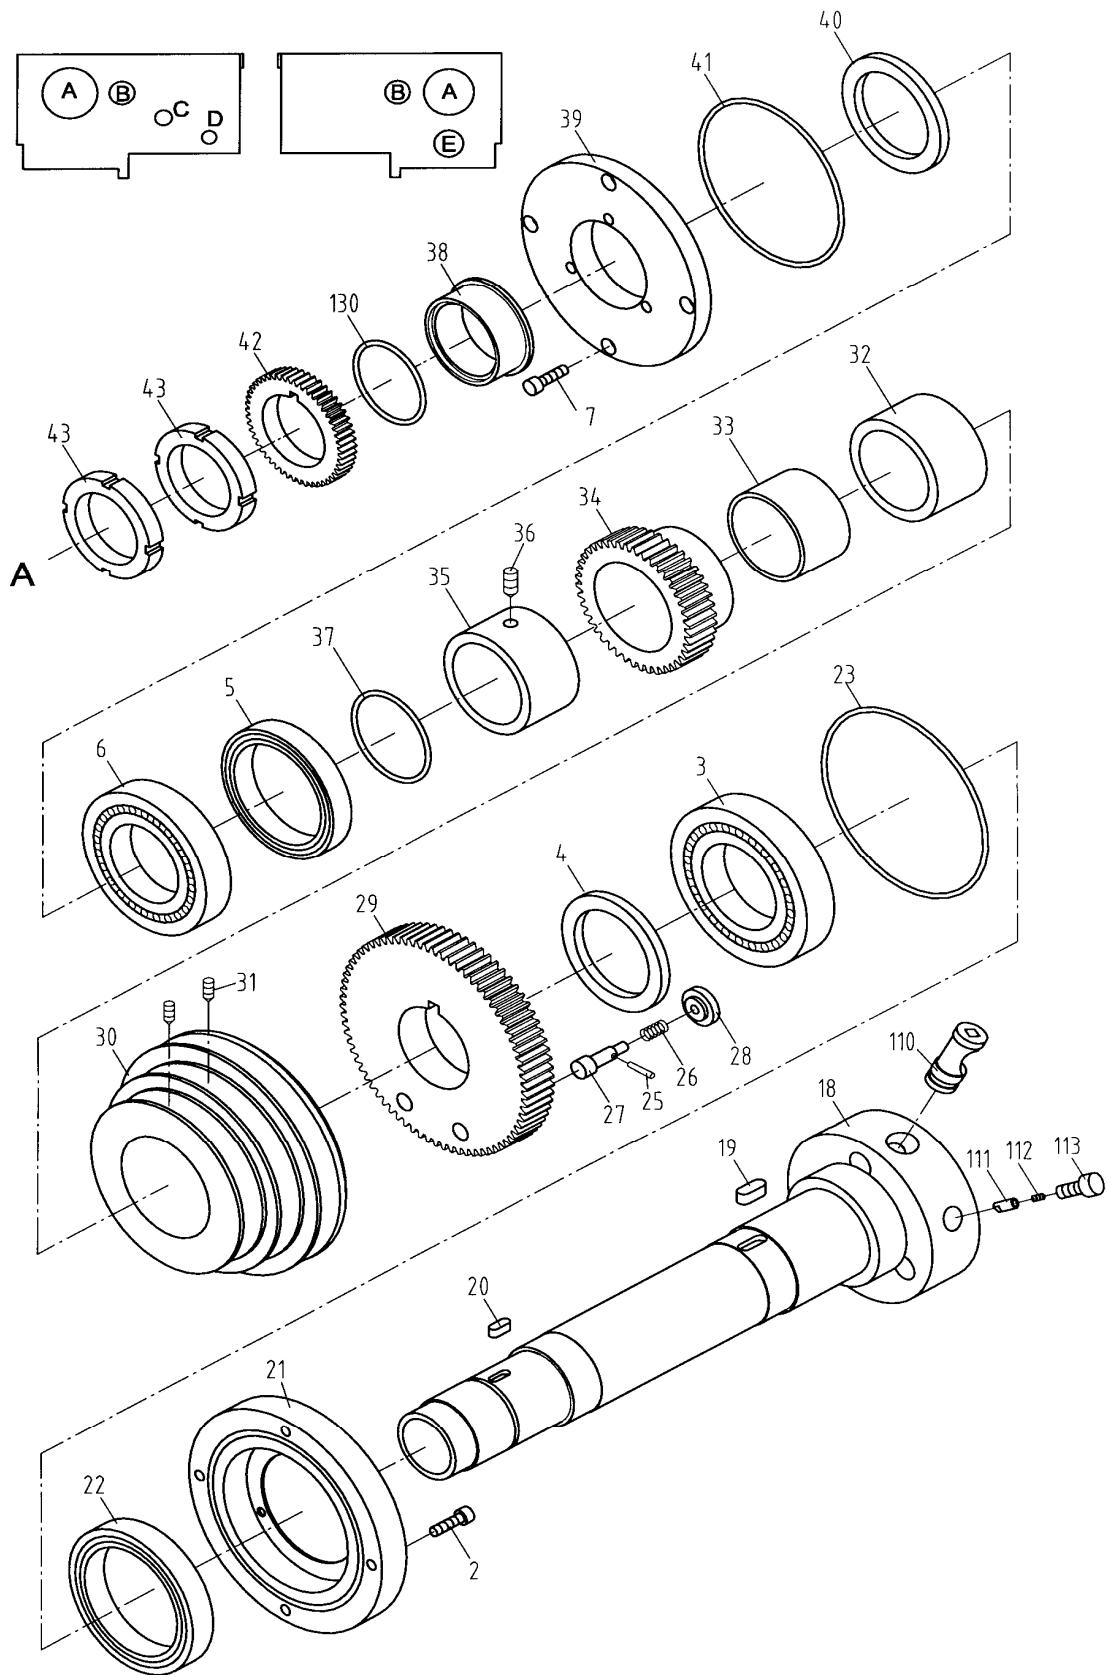

2.2 BDB-1340A Headstock Assembly II – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|--------------|-----------------------------|----------------------|-----|
| 2 | TS-1503051 | Socket Set Screw | M8 x 10 | 4 |
| 3 | BB-30212 | Taper Roller Bearing..... | 60 x 110 x 22 | 1 |
| 4 | BDB1340-H4 | Oil Seal | PG60 x 80 x 12 | 1 |
| 5 | OS-709012 | Oil Seal | SG70 x 90 x 12 | 1 |
| 6 | BB-30211 | Taper Roller Bearing..... | 55 x 100 x 21 | 1 |
| 7 | TS-1503041 | Hex Socket Cap Screw..... | M6 x 16 | 4 |
| 18 | 04701 | Spindle | D1-4 | 1 |
| 19 | BDB1340-H19 | Key..... | 8 x 7 x 18 | 1 |
| 20 | BDB1340-H20 | Key..... | 6 x 6 x 16 | 1 |
| 21 | 04102 | Bearing Cover (front) | | 1 |
| 22 | BDB1340-H22 | Oil Seal | 75 x 100 x 12 | 1 |
| 23 | BDB1340-H23 | O-Ring | 125 x 3.1 | 1 |
| 25 | BDB1340-H25 | Shaft Pin | 3 x 18 | 1 |
| 26 | BDB1340-H26 | Spring | 0.8 x 11 x 18 | 1 |
| 27 | 04703 | Pin..... | | 1 |
| 28 | 04702 | Nut | | 1 |
| 29 | 04117A | Gear..... | 2m74T | 1 |
| 30 | 04116 | Pulley | | 1 |
| 31 | TS-1523031 | Set Screw | M6 x 10 | 2 |
| 32 | 04302 | Bushing..... | | 1 |
| 33 | 04301 | Bushing..... | | 1 |
| 34 | 04115 | Gear..... | 2m44T | 1 |
| 35 | 04114 | Spacer | | 1 |
| 36 | TS-1524021 | Set Screw | M8 x 6 | 1 |
| 37 | BDB1340-H37 | O-Ring | 60 x 3.1 | 1 |
| 38 | 04112A | Spacer | | 1 |
| 39 | 04113 | Bearing Cover (rear) | | 1 |
| 40 | BDB1340-H40 | Oil Seal | W60 x 80 x 8 | 1 |
| 41 | BDB1340-H41 | O-Ring | 110 x 3.1 | 1 |
| 42 | 04713 | Gear..... | 1.5m50T | 1 |
| 43 | 04743 | Locking Nut | | 2 |
| 110 | 04729 | Cam | | 3 |
| 111 | 04741 | Pin..... | | 3 |
| 112 | BDB1340-H112 | Spring | 0.6 x 4 x 16 | 3 |
| 113 | TS-1504041 | Hex Socket Cap Screw..... | M8 x 18 | 3 |
| 130 | BDB1340-H130 | O-Ring | 55 x 3.1 | 1 |


3.1 BDB-1340A Headstock Assembly III – Exploded View

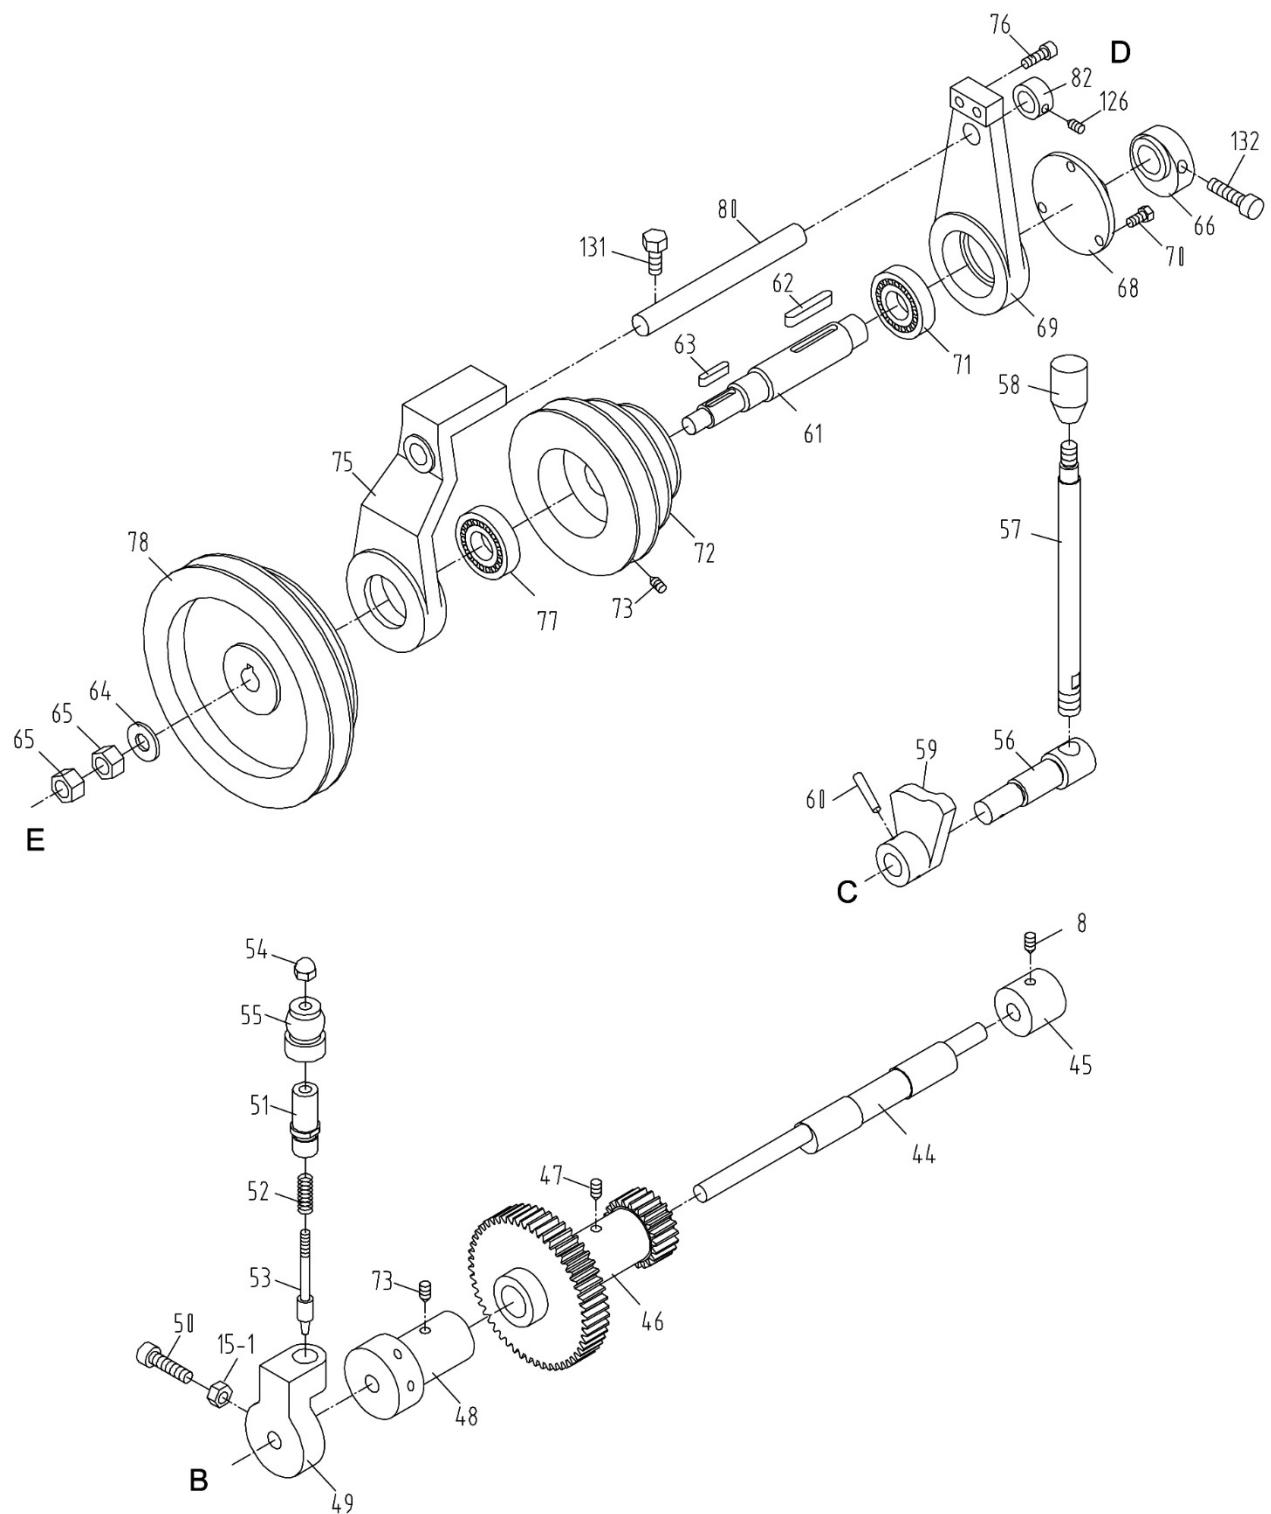

3.2 BDB-1340A Headstock Assembly III – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|-----------------|-----------------------|--------------|-----|
| 8 | TS-1524021 | Set Screw | M8 x 10 | 1 |
| 15-1 | TS-1540061 | Nut | M8 | 1 |
| 44 | 04704 | Eccentric Shaft | | 1 |
| 45 | 04103A | Bushing | | 1 |
| 46 | 04109A | Gear | 2m52T, 2m22T | 1 |
| 47 | TS-1523011 | Set Screw | M6 x 6 | 1 |
| 48 | 04111A | Bushing | | 1 |
| 49 | 04110 | Moving Arm | | 1 |
| 50 | TS-1504071 | Hex Socket Cap Screw | M8 x 35 | 1 |
| 51 | 04726 | Sleeve | | 1 |
| 52 | BDB1340-H52 | Spring | 1 x 9 x 40 | 1 |
| 53 | 04725 | Shaft | | 1 |
| 54 | BDB1340-H54 | Cap Nut | M6 | 1 |
| 55 | 04733B | Knob | | 1 |
| 56 | 04706 | Shaft | | 1 |
| 57 | 04707 | Handle | | 1 |
| 58 | BDB1340-H58 | Knob | | 1 |
| 59 | 04104A | Cam | | 1 |
| 60 | BDB1340-H60 | Spring Pin | 5 x 30 | 1 |
| 61 | 04712 | Input Shaft | | 1 |
| 62 | BDB1340-H62 | Key | 6 x 6 x 40 | 1 |
| 63 | BDB1340-H63 | Key | 5 x 5 x 25 | 1 |
| 64 | TS-1550081 | Washer | M12 | 1 |
| 65 | TS-1540081 | Hex Nut | M12 | 2 |
| 66 | 04708 | Cam | | 1 |
| 68 | 04709 | Strut | | 1 |
| 69 | 04105A | Swing Arm | | 1 |
| 70 | TS-1482021 | Hex Socket Cap Screw | M6 x 12 | 3 |
| 71 | BB-6204ZR | Ball Bearing | 6204ZR | 1 |
| 72 | 04107 | Pulley | | 1 |
| 73 | TS-1524021 | Set Screw | M8 x 8 | 2 |
| 75 | 04106A | Swing Arm | | 1 |
| 76 | TS-1503051 | Hex Socket Cap Screw | M6 x 20 | 2 |
| 77 | BB-6204 | Ball Bearing | 6204 | 1 |
| 78 | BDB1340A-04108 | Pulley | | 1 |
| 80 | 04711 | Shaft | | 1 |
| 82 | 04710 | Spacer | | 1 |
| 126 | TS-1523011 | Set Screw | M6 x 6 | 1 |
| 131 | TS-1490041 | Hex Cap Bolt | M8 x 25 | 1 |
| 132 | TS-1504041 | Hex Socket Cap Screw | M8 x 20 | 1 |
| | BDB1340A-02311 | Nameplate (not shown) | | 1 |
| | BDB1340A-02304A | Nameplate (not shown) | | 1 |
| | 04308 | Nameplate (not shown) | | 1 |
| | VB-B32 | V-Belt (not shown) | B32 | 1 |
| | VB-B33 | V-Belt (not shown) | B33 | 1 |

7.1 Bed Assembly I – Exploded View

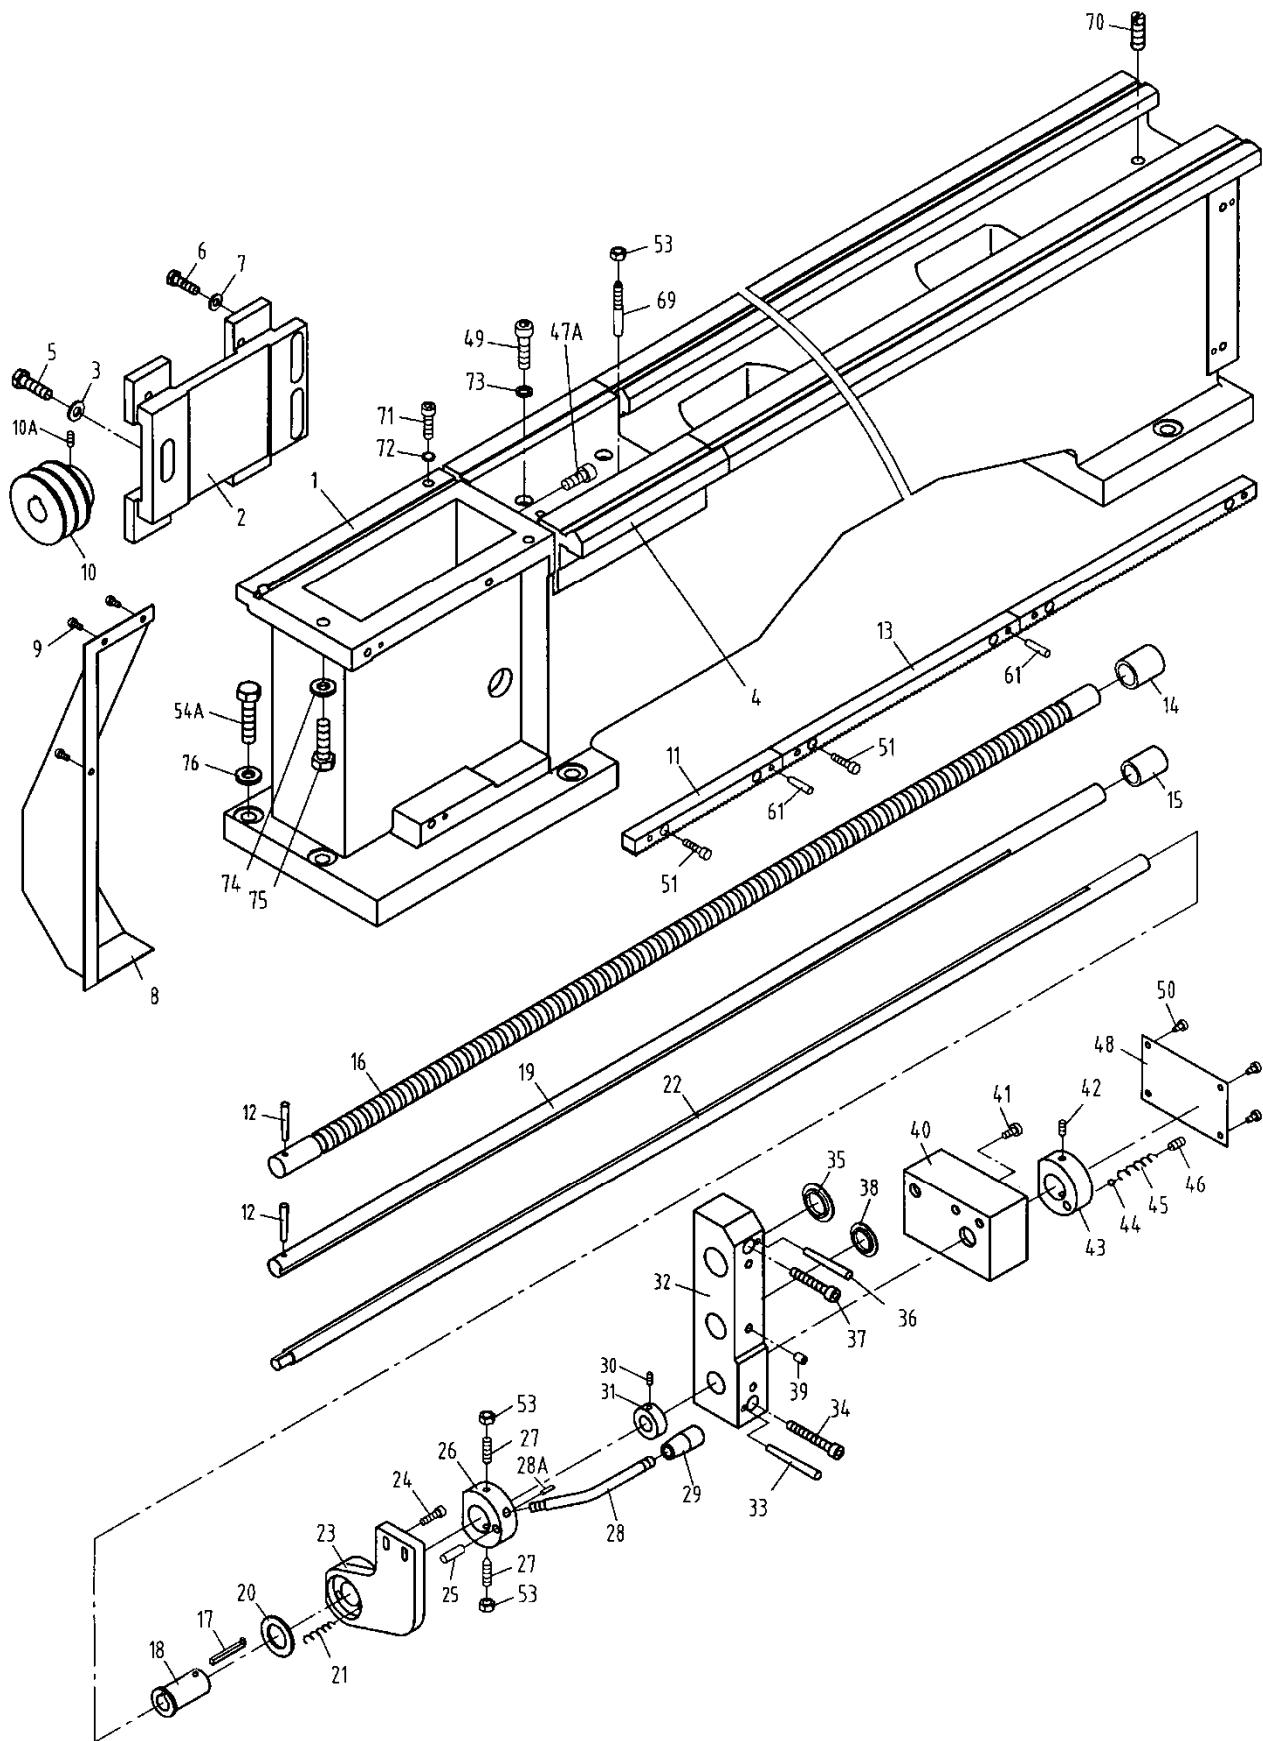


7.2 Bed Assembly I – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|----------------|----------------------------|--------------|-----|
| 1 | GHB1340A-01101 | Bed | | 1 |
| 2 | GHB1340A-1110 | Motor Base | | 1 |
| 3 | TS-1550071 | Washer | M10 | 3 |
| 4 | GHB1340-1102 | Gap Bridge | | 1 |
| 5 | TS-149105 | Hex Cap Bolt | M10 x 35 | 3 |
| 6 | TS-1490041 | Hex Cap Bolt | M8 x 25 | 4 |
| 7 | TS-1550061 | Washer | | 4 |
| 8 | GHB1340A-02703 | End Cover (GHB-1340A only) | | 1 |
| | GHB1440A-02703 | End Cover (GHB-1440A only) | | 1 |
| 9 | GHB1340A-9B | Screw | M5 x 8 | 3 |
| 10 | GHB1340-01112 | Pulley | | 1 |
| 10A | TS-1523041 | Set Screw | M6 x 12 | 1 |
| 11 | 01203 | Rack | | 1 |
| 12 | GHB1340A-12B | Pin | 5 x 35 | 2 |
| 13 | 01204-2 | Rack | | 2 |
| 14 | 32A1105 | Collar | | 1 |
| 15 | 32A1106 | Collar | | 1 |
| 16 | GHB1340A-1701 | Lead Screw | GHB-1340A | 1 |
| | BDB1340A-1701 | Lead Screw | BDB-1340A | 1 |
| 17 | 321728 | Key | | 1 |
| 18 | 321706 | Collar | | 1 |
| 19 | GHB1340A-1702 | Feed Rod | GHB-1340A | 1 |
| | BDB1340A-1702 | Feed Rod | BDB-1340A | 1 |
| 20 | 01707 | Brake Ring | | 1 |
| 21 | GHB1340A-21B | Spring | 1 x 7.5 x 25 | 3 |
| 22 | GHB1340A-1703 | Shaft | GHB-1340A | 1 |
| | BDB1340A-1703 | Shaft | BDB-1340A | 1 |
| 23 | 32A1103A | Bracket | | 1 |
| 24 | TS-1503061 | Hex Socket Cap Screw | M6 x 22 | 4 |
| 25 | GHB1340A-25B | Pin | 6 x 25 | 1 |
| 26 | 32A1710 | Handle Hub | | 1 |
| 27 | TS-1524061 | Screw | M8 x 28 | 2 |
| 28 | 01710A | Handle | | 1 |
| 28A | GHB1340A-77 | Pin | 3 x 10 | 1 |
| 29 | GHB1340A-29B | Knob | BM10 x 50 | 1 |
| 30 | TS-1522031 | Set Screw | M5 x 8 | 1 |
| 31 | 01708 | Collar | | 1 |
| 32 | 32A1104A | Bracket | | 1 |
| 33 | GHB1340A-33B | Pin | 6 x 70 | 1 |
| 34 | TS-1504131 | Hex Socket Cap Screw | M8 x 65 | 1 |
| 35 | 32A1502 | Plug | | 1 |
| 36 | GHB1340A-36B | Pin | 6 x 65 | 2 |
| 37 | TS-1504121 | Hex Socket Cap Screw | M8 x 60 | 2 |
| 38 | 32A1502 | Plug | | 1 |
| 39 | GHB1340A-39B | Oil Ball | 8 | 3 |
| 40 | 32A1301 | Switch Box | | 1 |
| 41 | TS-1504041 | Hex Socket Cap Screw | M8 x 20 | 4 |
| 42 | TS-1523051 | Screw | M6 x 16 | 1 |
| 43 | 32A1705 | Bushing | | 1 |
| 44 | SB-6MM | Steel Ball | 6 | 1 |
| 45 | GHB1340A-45B | Spring | 1X5X22 | 1 |
| 46 | TS-1524041 | Screw | M8 x 16 | 1 |
| 47A | TS-1525021 | Set Screw | M10 x 12 | 1 |
| 48 | 32A1504 | Switch Box Cover | | 1 |
| 49 | TS-1505051 | Hex Socket Cap Screw | M10 x 35 | 4 |
| 50 | TS-1502021 | Socket Head Cap Screw | M5 x 10 | 4 |
| 51 | TS-1503061 | Hex Socket Cap Screw | M6 x 25 | 8 |
| 53 | TS-1540061 | Hex Nut | M8 | 4 |
| 54A | TS-1492061 | Hex Cap Bolt | M12 x 60 | 6 |
| 61 | GHB1340-61B | Pin | 6 x 30 | 6 |

| Index No | Part No | Description | Size | Qty |
|-----------------|--------------------|---------------------------|---------------------|------------|
| 69 | GHB1340-69B | Pin..... | 8 x 60 | 2 |
| 70 | GHB1340A-74B | Set Screw | M12 x 40 | 1 |
| 71 | TS-1504071 | Hex Socket Cap Screw..... | M8 x 35 (BDB) | 2 |
| | TS-1504081 | Hex Socket Cap Screw..... | M8 x 40 (GHB) | 2 |
| 72 | TS-1551061 | Lock Washer..... | M8 | 4 |
| 73 | TS-1551071 | Lock Washer..... | M10 | 4 |
| 74 | TS-1550061 | Washer | M8 (BDB) | 2 |
| | TS-1550061 | Washer | M8 (GHB)..... | 4 |
| 75 | TS-1504091 | Hex Socket Cap Screw..... | M8 x 45 | 2 |
| 76 | TS-2360121 | Washer | 12..... | 6 |


8.1 Bed Assembly II – Exploded View

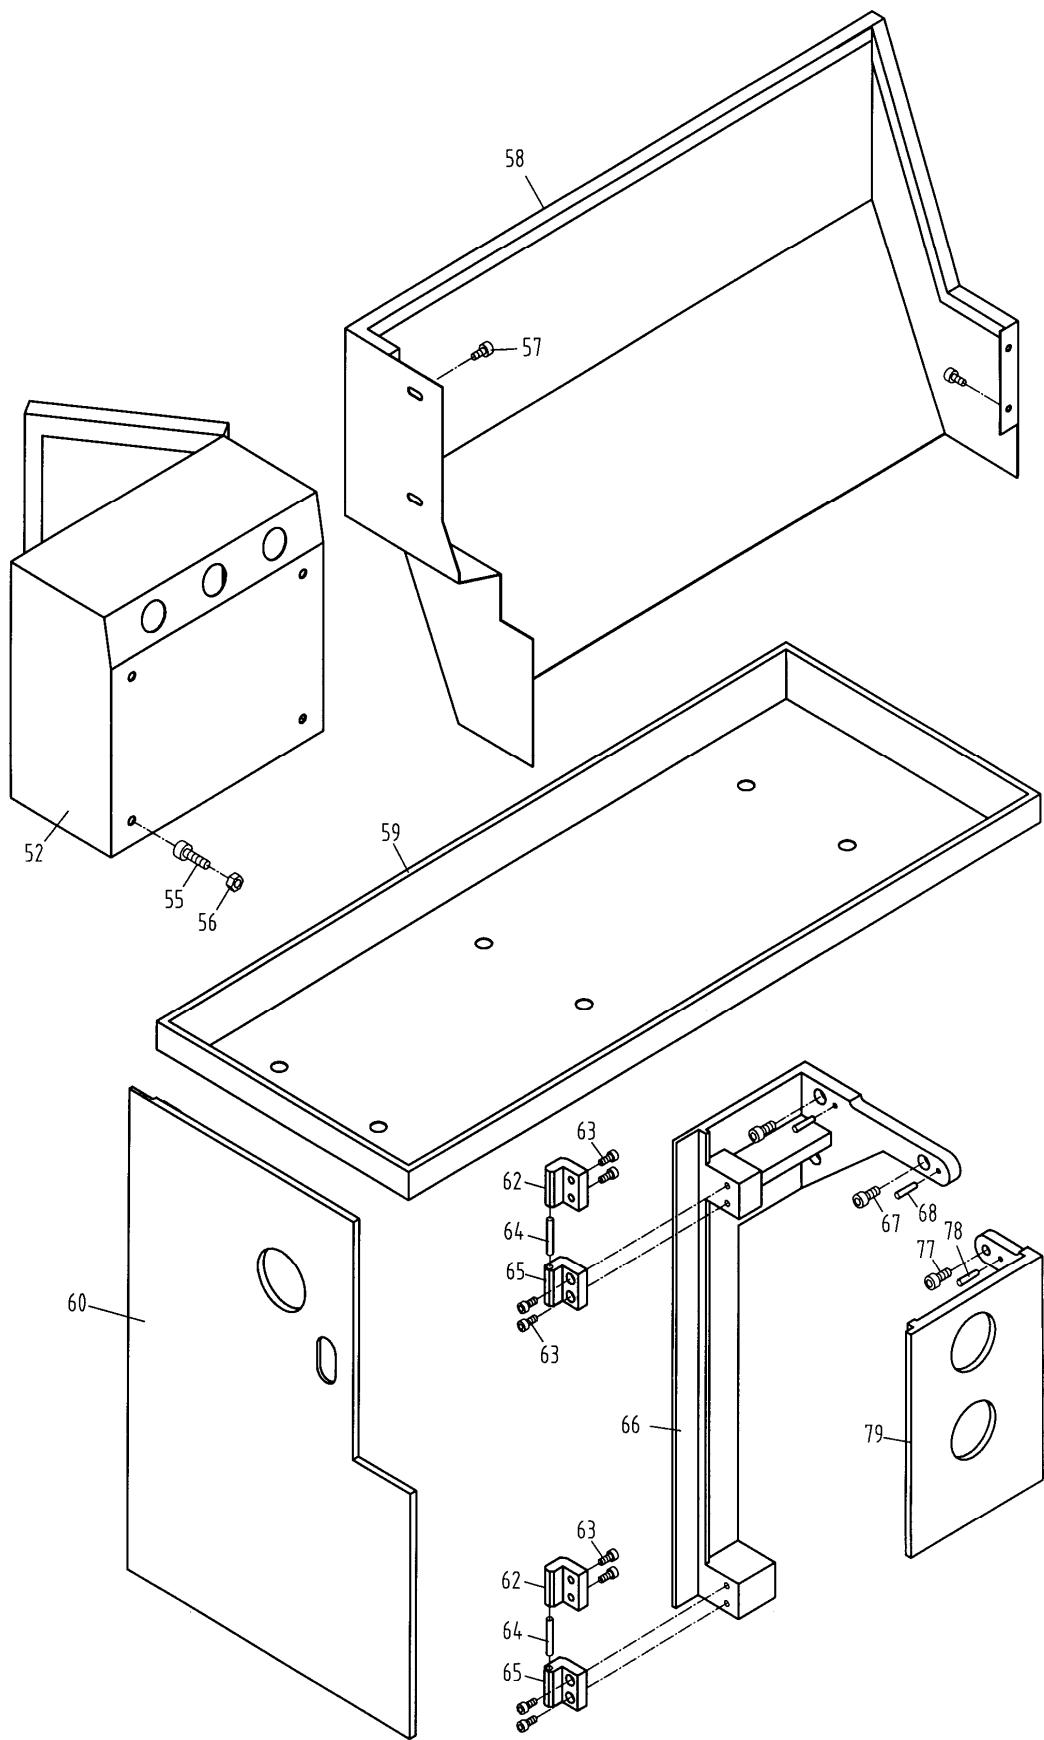

8.2 Bed Assembly II – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|------------------|---|---------------------|-----|
| 52 | GHB1340A-18701 | Electrical Box..... | GHB-1340A..... | 1 |
| 52A | BDB1340A-18701 | Electrical Box..... | BDB-1340A..... | 1 |
| 55 | GHB1340A-55B | Screw..... | M6 x 20 | 4 |
| 56 | GHB1340A-56B | Nut | M6..... | 4 |
| 57 | GHB1340A-57B | Screw..... | M6 x 10 | 4 |
| 58 | GHB1340A-12701 | Splash Guard (serial #11072601A and lower) GHB-1340A | GHB-1340A | 1 |
| | GHB1340A-12701A | Splash Guard (serial #11082602A and higher) GHB-1340A | GHB-1340A | 1 |
| | GHB1440A-12701 | Splash Guard..... | GHB-1440A..... | 1 |
| | BDB1340A-12701B | Splash Guard..... | BDB-1340A..... | 1 |
| 59 | GHB1340A-01701 | Oil Plate (serial #12042866A and lower) | GHB-1340A..... | 1 |
| | GHB1340A-01701BJ | Oil Plate (serial #12092867A and higher)..... | GHB-1340A..... | 1 |
| | C0632-01727 | Oil Plate | GHB-1440A..... | 1 |
| | BDB1340A-01701B | Oil Plate (serial #1204B1274A and lower)..... | BDB-1340A..... | 1 |
| | BDB1340A-01701BJ | Oil Plate (serial #1205B1275A and higher) | BDB-1340A..... | 1 |
| 60 | GHB1340A-02302 | Back Cover | GHB/BDB-1340A | 1 |
| | C0636A-01501 | Back Cover | GHB-1440A..... | 1 |
| 62 | ZX-8712 | Upper Hinge..... | | 2 |
| 63 | TS-1503041 | Hex Socket Cap Screw..... | M6 x 14 | 8 |
| 64 | GHB1340A-64B | Pin..... | 10m6 x 40 | 2 |
| 65 | ZX-8711 | Lower Hinge..... | | 2 |
| 66 | GHB1340A-02105 | Rear Side Plate..... | GHB/BDB-1340A | 1 |
| | GHB1440A-02105 | Rear Side Plate..... | GHB-1440A | 1 |
| 67 | TS-1504031 | Hex Socket Cap Screw..... | M8 x 14 | 3 |
| 68 | GHB1340A-68B | Pin..... | 6 x 25 | 2 |
| 77 | TS-1502041 | Hex Socket Cap Screw..... | M5 x 14 | 2 |
| 78 | GHB1340A-78B | Pin..... | 5 x 25 | 2 |
| 79 | GHB1340A-02104 | Front Side Plate | GHB/BDB-1340A | 1 |
| | GHB1440A-02104 | Front Side Plate | GHB-1440A..... | 1 |


9.1 Gear Assembly I – Exploded View

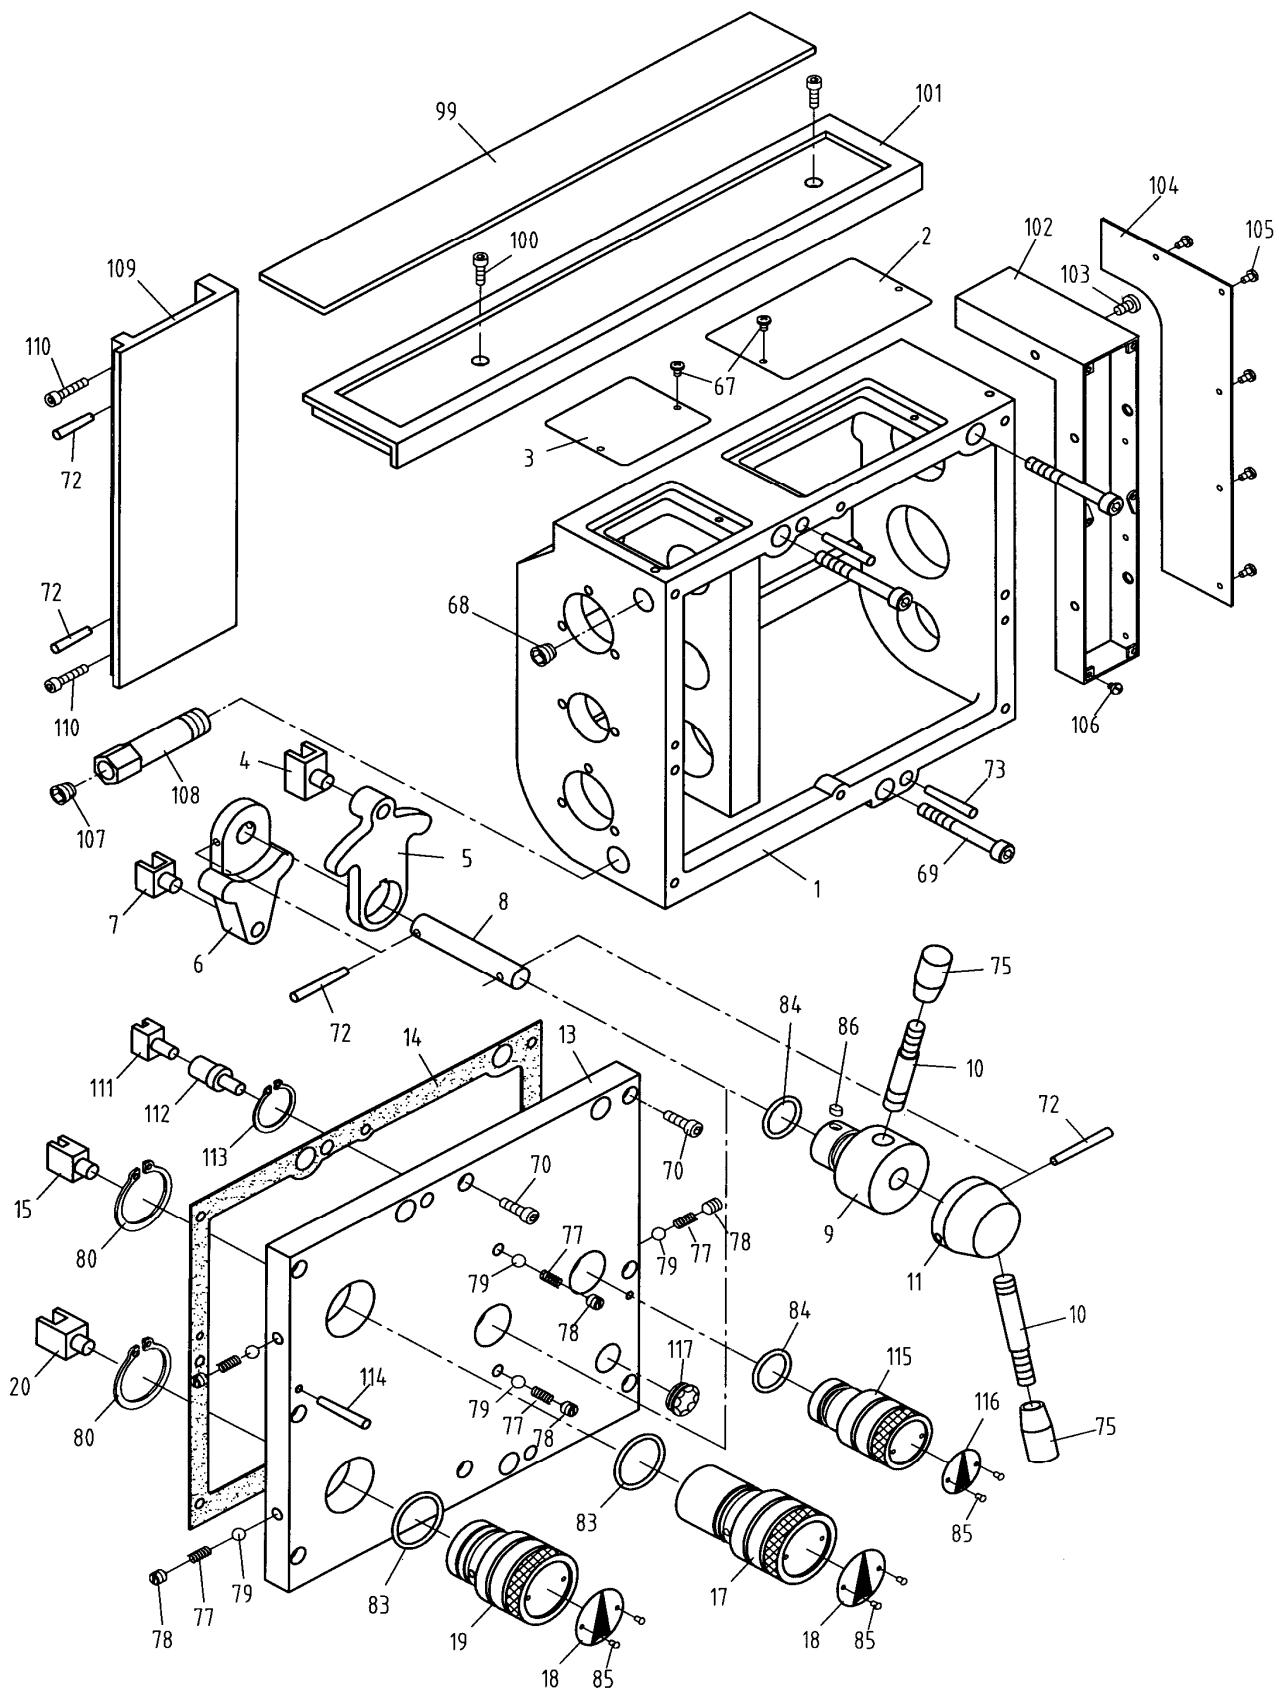

9.2 Gear Assembly I – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|----------------|---|--------------------|-----|
| 1 | 05101A | Casting..... | | 1 |
| 2 | 05715 | Right cover..... | | 1 |
| 3 | 05720 | Left cover..... | | 1 |
| 4 | 32A5308 | Slipper..... | | 1 |
| 5 | 32A5111A | Lever..... | | 1 |
| 6 | 32A5108A | Lever..... | | 1 |
| 7 | 32A5307 | Slipper..... | | 1 |
| 8 | 32A5702 | Shaft | | 1 |
| 9 | 32A5109 | Handle Base | | 1 |
| 10 | 32A5701 | Lever..... | | 2 |
| 11 | 32A5110 | Handle Base | | 1 |
| 13 | GHB1340A-05106 | Cover | | 1 |
| 14 | 05504 | Gasket | | 1 |
| 15 | 32A5305 | Slipper..... | | 1 |
| 17 | 32A5106 | Lever..... | | 1 |
| 18 | 32A5302 | Plate..... | | 2 |
| 19 | 32A5103 | Handle | | 1 |
| 20 | 32A5306 | Slipper..... | | 1 |
| 67 | GHB1340A-G67 | Screw..... | M4 x 6 | 6 |
| 68 | GHB1340A-G68 | Tapered Tap | ZG3/8"..... | 2 |
| 69 | GHB1340A-G69 | Socket Head Cap Screw..... | M8 x 65 | 3 |
| 70 | TS-1503061 | Socket Head Cap Screw..... | M6 x 25 | 8 |
| 72 | GHB1340A-G72 | Pin..... | 5 x 30 | 4 |
| 73 | GHB1340A-G73 | Pin..... | 5 x 40 | 2 |
| 75 | GHB1340A-G75 | Knob | BM10 x 50 | 2 |
| 77 | GHB1340A-G77 | Spring | 0.8 x 5 x 25 | 5 |
| 78 | TS-1524021 | Socket Set Screw | M8 x 10 | 5 |
| 79 | SB-6.5MM | Steel Ball..... | 6.5..... | 5 |
| 80 | GHB1340A-G80 | C-clip..... | 40 | 2 |
| 83 | GHB1340A-G83 | O-Ring | 40 x 3.1 | 2 |
| 84 | GHB1340A-G84 | O-Ring | 30 x 3.1 | 2 |
| 85 | GHB1340A-G85 | Screw..... | M3 x 6 | 6 |
| 86 | GHB1340A-G86 | Key..... | 5 x 8 | 1 |
| 99 | GHB1340A-05503 | Rubber Mat (GHB-1340A only)..... | | 1 |
| | GHB1440A-05503 | Rubber Mat (GHB-1440A only)..... | | 1 |
| | BDB1340A-05503 | Rubber Mat (BDB-1340A only)..... | | 1 |
| 100 | TS-1502041 | Socket Set Screw | M5 x 16 | 2 |
| 101 | GHB1340A-05105 | Top Cover (GHB-1340A only)..... | | 1 |
| | GHB1440A-05105 | Top Cover (GHB-1440A only)..... | | 1 |
| | BDB1340A-05105 | Top Cover (BDB-1340A only)..... | | 1 |
| 102 | 05723 | Cover | | 1 |
| 103 | GHB1340A-G103 | Screw..... | M4 x 8 | 3 |
| 104 | 05722 | Plate..... | | 1 |
| 105 | GHB1340A-G105 | Screw..... | M3 x 5 | 5 |
| 106 | GHB1340A-G106 | Screw..... | M3 x 6 | 6 |
| 107 | GHB1340A-G107 | Tapered Tap | Z1/4"..... | 1 |
| 108 | 05724 | Oil Drain Pipe..... | | 1 |
| 109 | 05108 | Extending Plate..... | | 1 |
| 110 | TS-1502061 | Socket Head Cap Screw..... | M5 x 25 | 2 |
| 111 | 05305 | Slipper..... | | 1 |
| 112 | 05721 | Slipper Shaft | | 1 |
| 113 | GHB1340A-G113 | C-clip..... | 30 | 1 |
| 114 | GHB1340A-G114 | Pin..... | 5 x 30 | 2 |
| 115 | 05107 | Lever..... | | 1 |
| 116 | 05304 | Sign Disc..... | | 1 |
| 117 | GHB1340A-G117 | Oil Sight Glass (GHB-1340A, serial #10052363A and lower)....12mm..... | | 1 |
| | GHB1340A-G117 | Oil Sight Glass (BDB-1340A, serial #1008B1083A and lower)...12mm..... | | 1 |
| | GHB1340A-160M | Oil Sight Glass (GHB-1340A, serial #10102364A and higher)...M27x1.5..... | | 1 |
| | GHB1340A-160M | Oil Sight Glass (BDB-1340A, serial #1010B1084A and higher)..M27x1.5 | | 1 |
| | GHB1340A-05306 | Sign Plate (not shown)..... | | 1 |
| | BDB1340A-05301 | Sign Plate (not shown)..... | | 1 |


10.1 Gear Assembly II – Exploded View

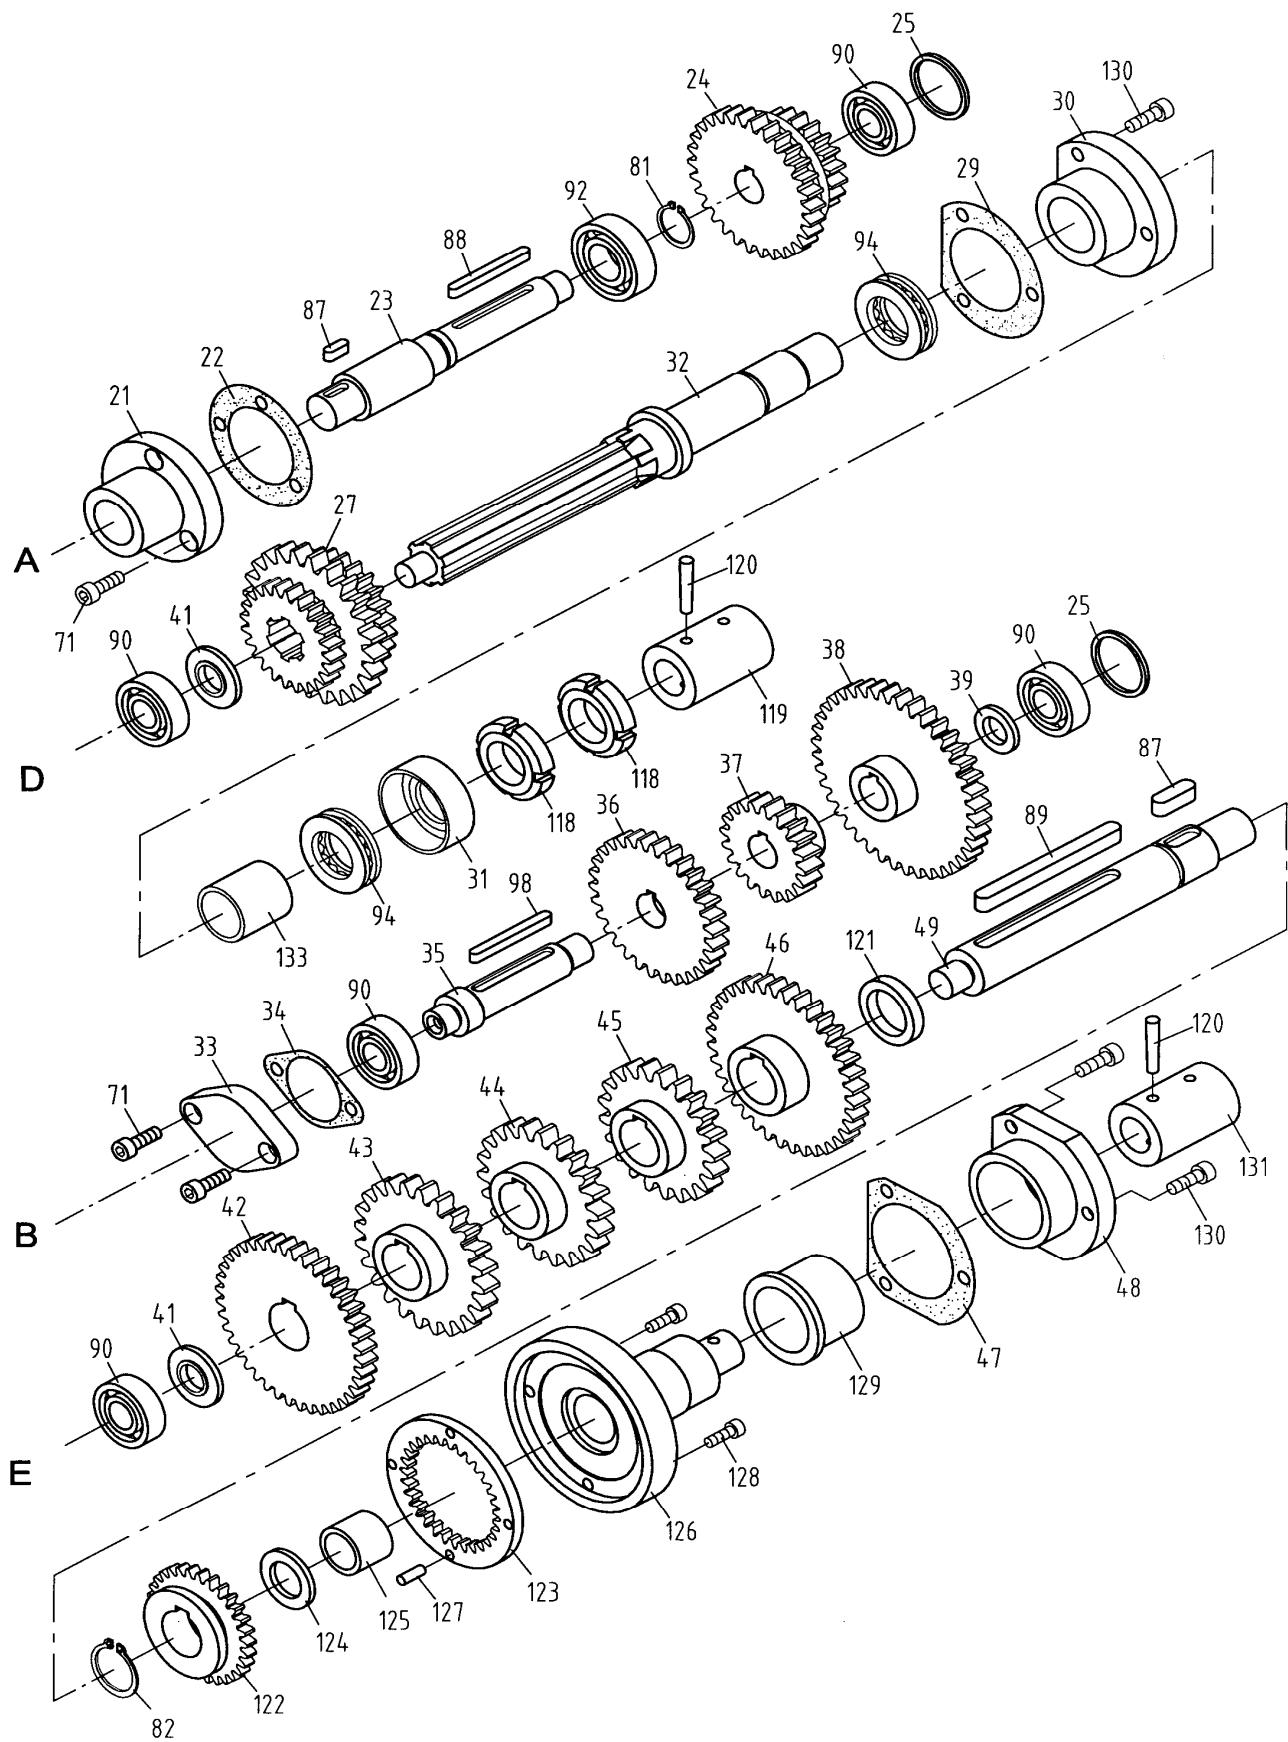

10.2 Gear Assembly II – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|----------------|----------------------------|-----------------------|-----|
| 21 | 32A5113 | Cover | | 1 |
| 22 | 32A5503 | Gasket | | 1 |
| 23 | 32A5712 | Shaft | | 1 |
| 24 | 32A5710A | Gear..... | 2.5m30T, 20T | 1 |
| 25 | 32A5719 | Washer | | 2 |
| 27 | 05718 | Gear..... | 2.25m, 3.25m, 2.5m24T | 1 |
| 29 | 05502 | Gasket | | 1 |
| 30 | 05104 | Bushing..... | | 1 |
| 31 | 05714 | Washer | | 1 |
| 32 | 05716 | Shaft | | 1 |
| 33 | 32A5114 | End cover..... | | 1 |
| 34 | 32A5504 | Gasket | | 1 |
| 35 | 32A5716 | Shaft | | 1 |
| 36 | 32A5714A | Gear..... | 2.5m30T | 1 |
| 37 | 32A5715A | Gear..... | 2.5m20T | 1 |
| 38 | 32A5713A | Gear..... | 2.5m40T | 1 |
| 39 | 32A5708 | Washer | | 2 |
| 41 | 05719 | Washer | | 2 |
| 42 | 05702 | Gear..... | 2.25m40T | 1 |
| 43 | 05703 | Gear..... | 3.25m24T | 1 |
| 44 | 05704 | Gear..... | 3.25m22T | 1 |
| 45 | 05705 | Gear..... | 3.25m21T | 1 |
| 46 | 05706 | Gear..... | 2.5m36T | 1 |
| 47 | 05501 | Gasket | | 1 |
| 48 | 05103 | Flange..... | | 1 |
| 49 | 05717 | Shaft | | 1 |
| 71 | TS-1504031 | Socket Head Cap Screw..... | M6 x 16 | 5 |
| 81 | GHB1340A-G81 | C-clip..... | 20 | 1 |
| 82 | GHB1340A-G82 | C-clip..... | 25 | 1 |
| 87 | GHB1340A-G87 | Key..... | 5 x 14 | 1 |
| 88 | GHB1340A-G88 | Key..... | 5 x 50 | 1 |
| 89 | GHB1340A-G89 | Key..... | 8 x 110 | 1 |
| 90 | BB-6202 | Bearing | 6202 | 5 |
| 92 | BB-6004 | Bearing | 6004 | 1 |
| 94 | BB-51105 | Thrust Bearing | 51105 | 2 |
| 98 | GHB1340A-G98 | Key..... | 5 x 55 | 1 |
| 118 | GHB1340A-G118 | Round Nut..... | M24 x 1.5 | 2 |
| 119 | 05713 | Connecting Sleeve | GHB1340A | 1 |
| | BDB1340A-05713 | Connecting Sleeve | | 1 |
| 120 | GHB1340A-G120 | Pin..... | 5 x 35 | 4 |
| 121 | 05707 | Washer | | 1 |
| 122 | 05708 | Gear..... | 2m30T | 1 |
| 123 | 05709 | Inner Gear..... | 2m30T | 1 |
| 124 | 05711 | Washer | | 1 |
| 125 | 05302 | Oil Light Bushing..... | | 1 |
| 126 | 05710 | XIB Shaft..... | | 1 |
| 127 | GHB1340A-G127 | Pin..... | 5n6 x 14 | 2 |
| 128 | GHB1340A-G128 | Screw..... | M5 x 10 | 2 |
| 129 | 05301 | Sliding Bearing..... | | 1 |
| 130 | TS-1503031 | Socket Head Cap Screw..... | M6 x 12 | 6 |
| 131 | GHB1340A-05712 | Connecting Sleeve | GHB-1340A | 1 |
| | BDB1340A-05712 | Connecting Sleeve | BDB-1340A | 1 |
| 133 | 05303 | Bearing Housing | | 1 |


11.1 Gear Assembly III – Exploded View

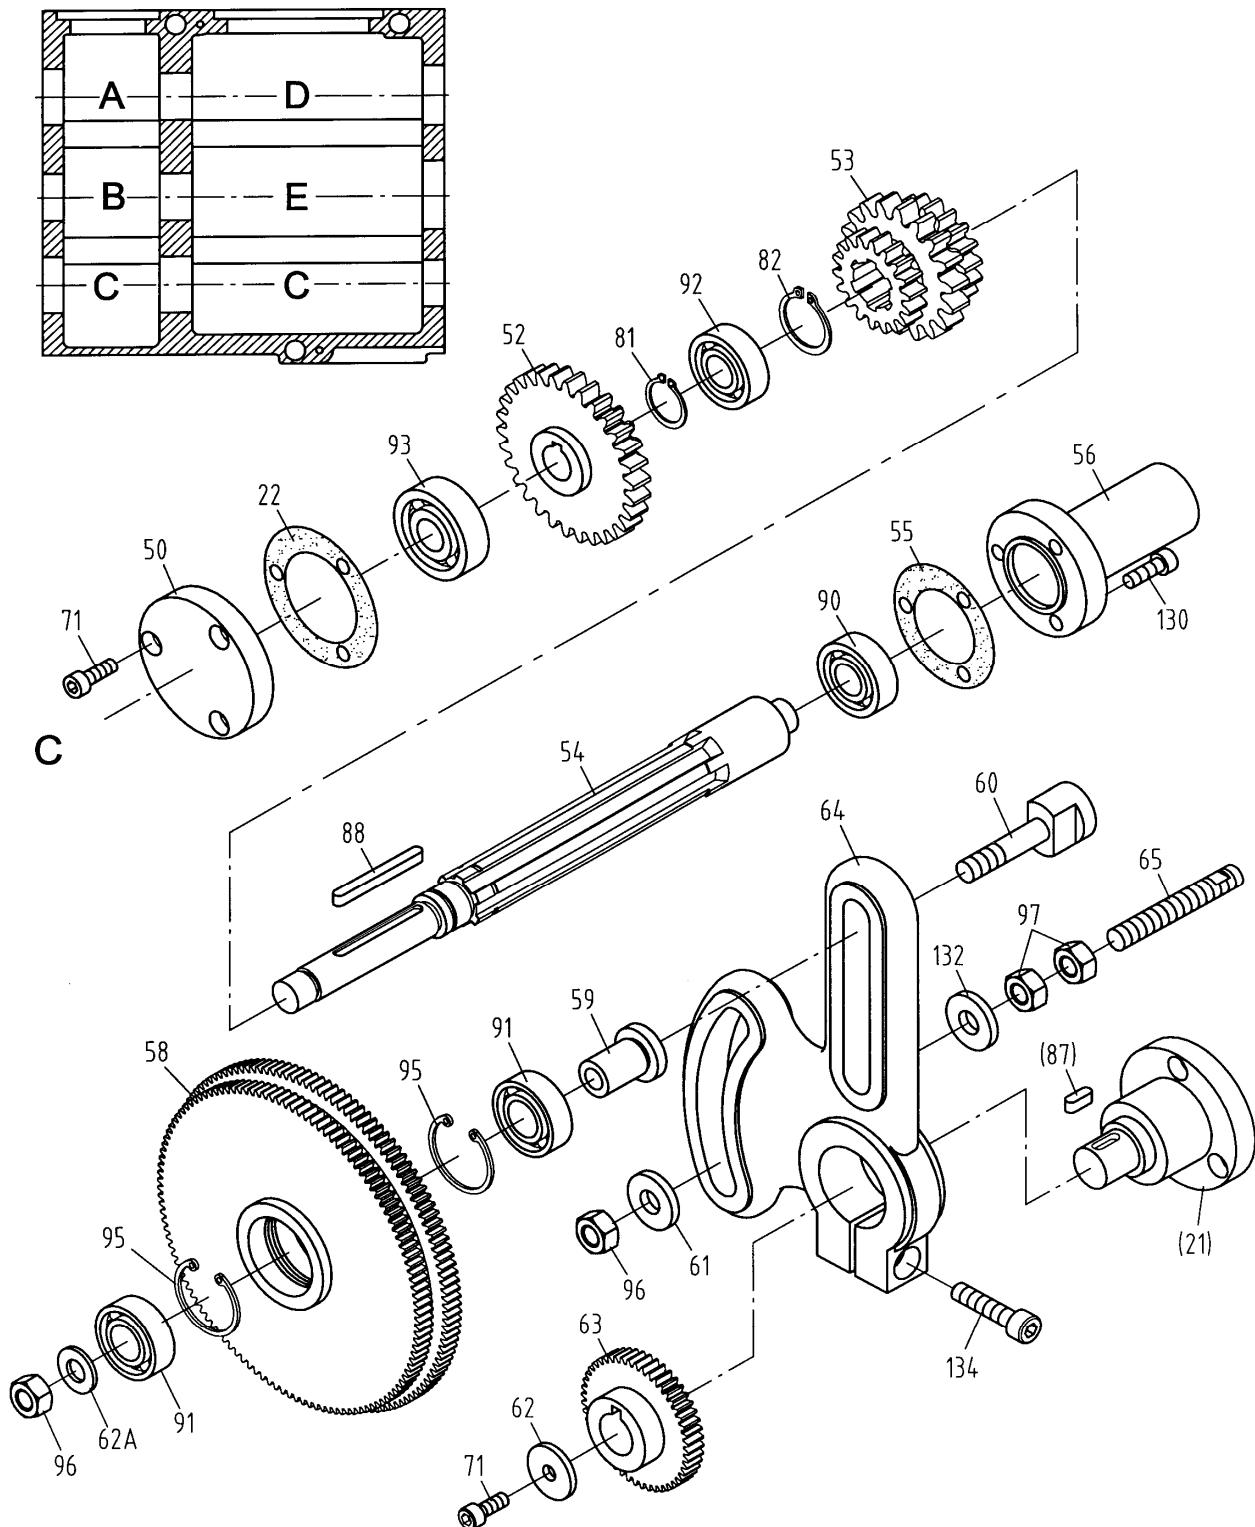

11.2 Gear Assembly III – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|---------------|----------------------------|-----------------------|-----|
| 21 | 32A5113 | Cover | | 1 |
| 22 | 32A5503 | Gasket | | 1 |
| 50 | 32A5115 | End Cover..... | | 1 |
| 52 | 32A5718A | Gear..... | 2.5m30T, 15T..... | 1 |
| 53 | 32A5721A | Gear..... | 2.25m, 3.25m, 2.5m18T | 1 |
| 54 | 05701 | Key shaft..... | | 1 |
| 55 | 05505 | Gasket | | 1 |
| 56 | 05102 | Cover | | 1 |
| 58 | 40A5736 | Gear..... | 1.25m120T, 127T..... | 1 |
| 59 | 40A5738 | Collar | | 1 |
| 60 | 40A5739 | Screw..... | | 1 |
| 61 | 321719 | Washer | | 1 |
| 62 | 40A5740 | Washer | | 2 |
| 62A | 40A5740A | Washer | | 1 |
| 63 | 32A5726A | Gear..... | 1.25m48T..... | 5 |
| 64 | 32A5119 | Gear Frame | | 1 |
| 65 | 321718 | Screw rod..... | | 1 |
| 71 | TS-1504031 | Socket Head Cap Screw..... | M6 x 16 | 4 |
| 81 | GHB1340A-G81 | C-clip..... | 20 | 1 |
| 82 | GHB1340A-G82 | C-clip..... | 25 | 1 |
| 87 | GHB1340A-G87 | Key..... | 5 x 14 | 1 |
| 88 | GHB1340A-G88 | Key..... | 5 x 50 | 1 |
| 90 | BB-6202 | Bearing | 6202 | 1 |
| 91 | BB-6103 | Bearing | 6103 | 2 |
| 92 | BB-6004 | Bearing | 6004 | 1 |
| 93 | BB-6302 | Thrust Bearing | 6302 | 1 |
| 95 | GHB1340A-G95 | C-clip..... | 35 | 2 |
| 96 | TS-1540071 | Hex Nut..... | M10 | 1 |
| 97 | TS-1540081 | Hex Nut..... | M12 | 3 |
| 130 | TS-1503031 | Socket Head Cap Screw..... | M6 x 12 | 3 |
| 132 | TS-2360121 | Washer | | 1 |
| 134 | GHB1340A-G134 | Hex Socket Cap Screw..... | M8 x 30 | 1 |


12.1 Apron Assembly I – Exploded View

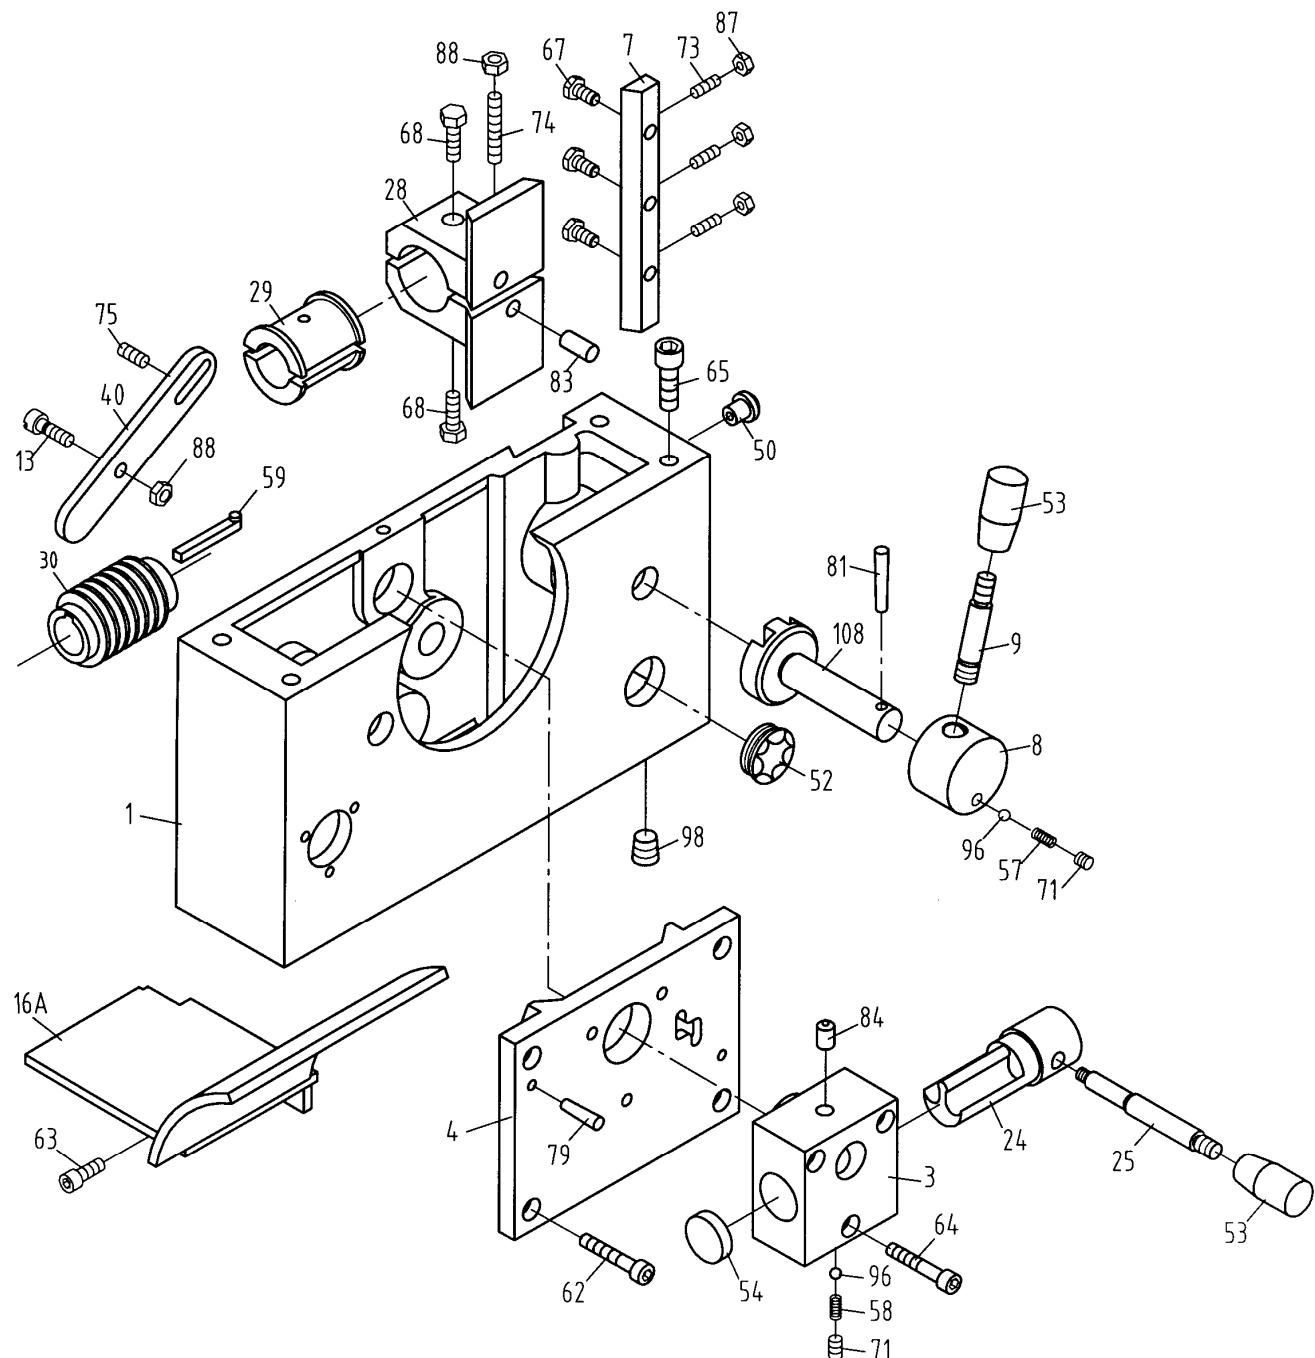

12.2 Apron Assembly I – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|-----------------|---|----------------|-----|
| 1 | GHB1340A-06101A | Casting..... | | 1 |
| 3 | 06103 | Housing..... | | 1 |
| 4 | 06104 | Cover | | 1 |
| 7 | 06107 | Gib | | 1 |
| 8 | 06208 | Handle Hub..... | | 1 |
| 9 | 06209 | Handle | | 1 |
| 13 | 06213 | Gear Pin..... | | 1 |
| 16A | 06415 | Bracket..... | | 1 |
| 24 | 06222 | Shift Lever..... | | 1 |
| 25 | 06223 | Shift Handle | | 1 |
| 28 | 06126 | Bracket..... | | 1 |
| 29 | 06427 | Half Nut..... | | 1 |
| 30 | 06228 | Worm (LH Thread)..... | 2m1T..... | 1 |
| | 06228A | Worm (RH Thread)..... | 2m1T..... | 1 |
| 40 | 06238 | Bar | | 1 |
| 50 | 06548 | Oil Filler Plug | | 1 |
| 52 | 06551 | Oil Sight Glass (GHB-1340A serial #10052363A and lower) | | 1 |
| | 06551 | Oil Sight Glass (BDB-1340A serial #1008B1083A and lower) | | 1 |
| | GHB1340A-160M | Oil Sight Glass (GHB-1340A serial #10102364A and higher)....M27x1.5 | M27x1.5 | 1 |
| | GHB1340A-160M | Oil Sight Glass (BDB-1340A serial #1010B1084A and higher)...M27x1.5 | M27x1.5 | 1 |
| 53 | 06553 | Knob | M8 x 40 | 2 |
| 54 | Z06554 | Plug "A"..... | | 1 |
| 57 | 06257 | Spring | | 1 |
| 58 | 06258 | Spring | | 1 |
| 59 | 06260 | Key..... | | 1 |
| 62 | TS-1503031 | Hex Socket Cap Screw..... | M6 x 12 | 4 |
| 63 | TS-1503041 | Hex Socket Cap Screw..... | M6 x 16 | 1 |
| 64 | TS-1503061 | Hex Socket Cap Screw..... | M6 x 25 | 2 |
| 65 | TS-1504061 | Hex Socket Cap Screw..... | M8 x 30 | 4 |
| 67 | GHB1340-A67 | Screw..... | M5 x 16 | 3 |
| 68 | TS-1523041 | Set Screw | M6 x 12 | 2 |
| 71 | TS-1523011 | Set Screw | M6 x 6 | 3 |
| 73 | TS-1522051 | Set Screw | M5 x 16 | 3 |
| 74 | GHB1340-A74 | Set Screw | M6 x 35 | 1 |
| 75 | TS-1523031 | Set Screw | M6 x 10 | 1 |
| 79 | GHB1340-A79 | Pin..... | 5 x 20 | 2 |
| 81 | GHB1340-A81 | Pin..... | 5 x 32 | 1 |
| 83 | GHB1340-A83 | Pin..... | 8n6 x 12 | 2 |
| 84 | GHB1340-A84 | Oiler | 8 | 2 |
| 87 | TS-1540031 | Hex Nut..... | M5 | 3 |
| 88 | TS-1540041 | Hex Nut..... | M6 | 2 |
| 96 | SB-5MM | Steel Ball..... | 5 | 2 |
| 98 | GHB1340A-A98 | Plug | Z1/4"..... | 1 |
| 108 | 06261 | Half Nut Controlling Shaft | | 1 |


13.1 Apron Assembly II – Exploded View

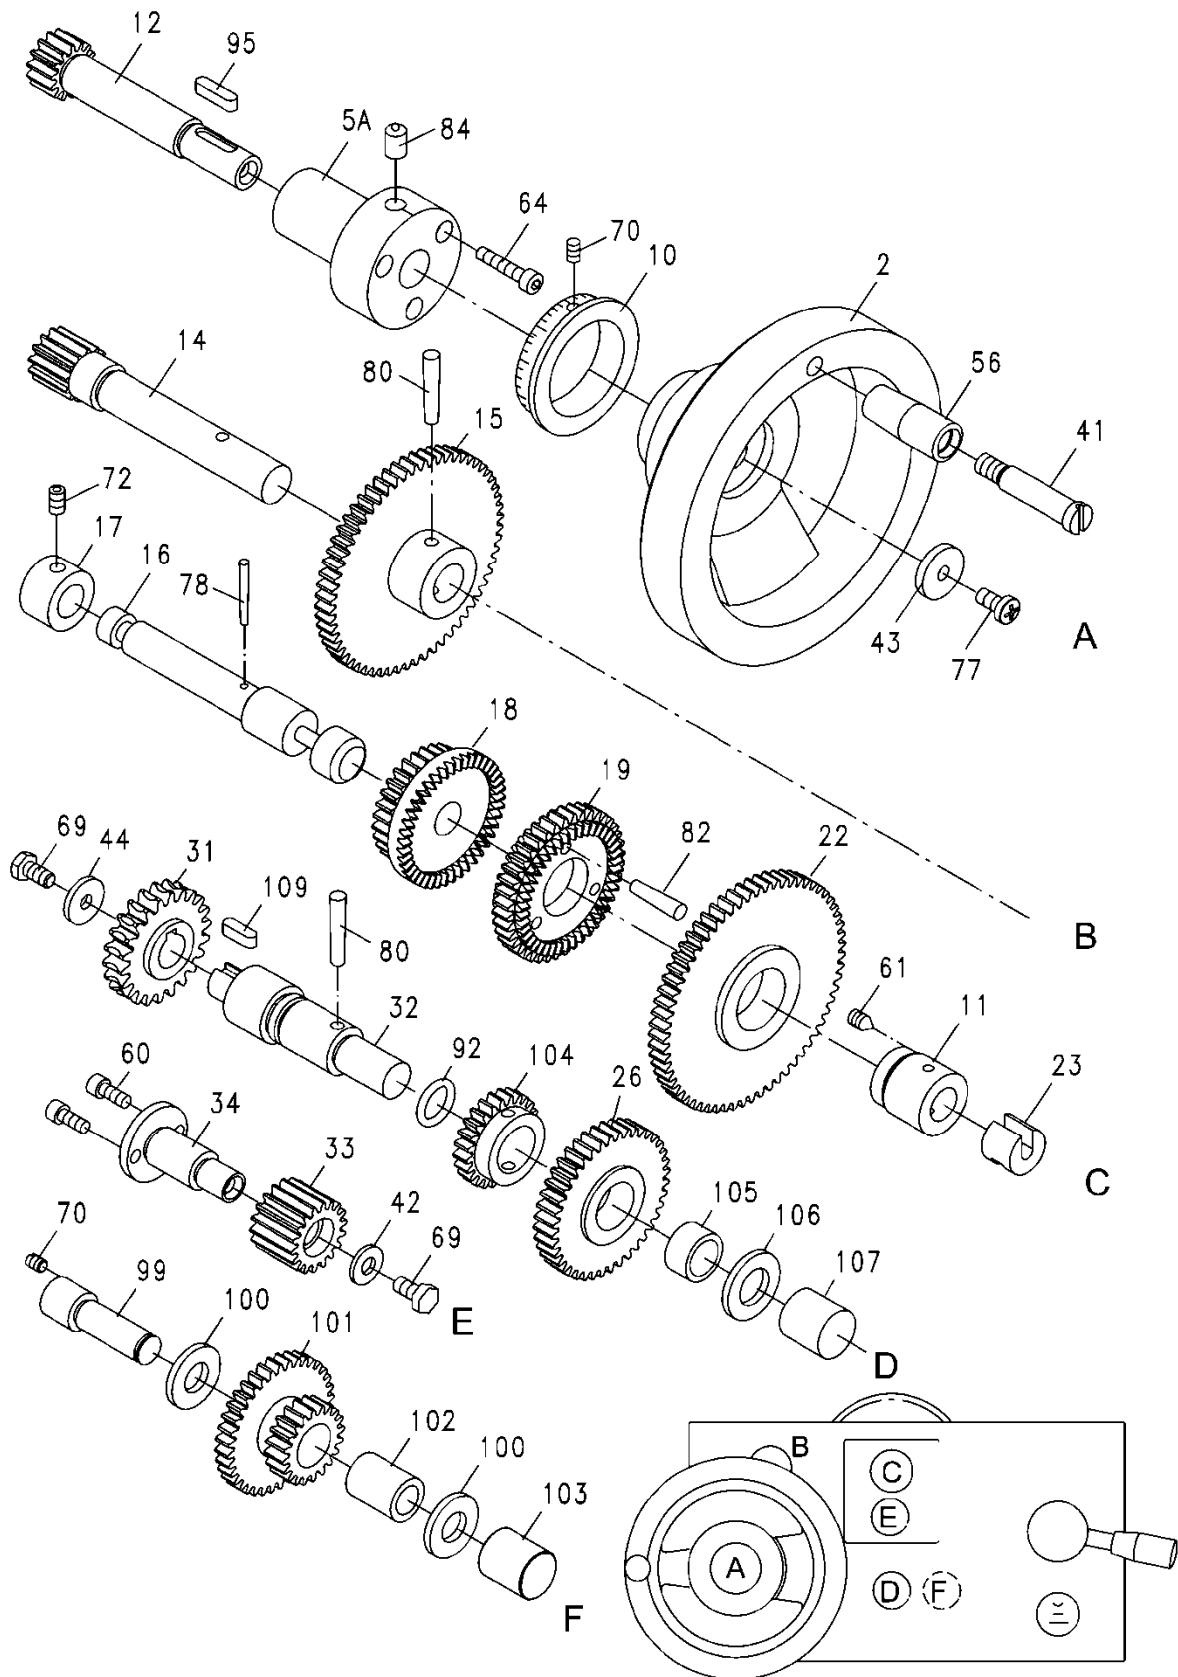

13.2 Apron Assembly II – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|----------------|---------------------------|--------------|-----|
| 2 | 06102 | Handwheel..... | | 2 |
| 5A | 06105A | Hub | | 1 |
| 10 | 06510 | Index Ring..... | | 1 |
| 11 | Z06111 | Cover | | 1 |
| 12 | 06212 | Shaft | 1.5m14T | 1 |
| 14 | 06214 | Gear Shaft | 1.5m13T | 1 |
| 15 | 06215 | Gear..... | 1.5m60T | 1 |
| 16 | 06216 | Shaft | | 1 |
| 17 | 06417 | Collar | | 1 |
| 18 | 06218 | Gear..... | 1.5m30T | 1 |
| 19 | 06219 | Gear..... | 1.5m40T | 1 |
| 22 | 06220 | Gear..... | 1.5m46T | 1 |
| 23 | 06421 | Shift Fork | | 1 |
| 26 | GHB1340A-06704 | Gear..... | 1.5m40T | 1 |
| 31 | 06429 | Gear..... | 2m22T | 1 |
| 32 | GHB1340A-06714 | Shaft | | 1 |
| 33 | 06231 | Gear..... | 1.5m18T | 1 |
| 34 | 06232 | Shaft | | 1 |
| 41 | 06239 | Screw..... | | 1 |
| 42 | TS-1550041 | Washer | | 1 |
| 43 | Z06241 | Washer | | 1 |
| 44 | 06242 | Washer | | 1 |
| 56 | 06556 | Handle | | 1 |
| 60 | TS-1502031 | Hex Socket Cap Screw..... | M5 x 12 | 2 |
| 61 | TS-1523011 | Set Screw | M6 x 6 | 1 |
| 64 | TS-1503061 | Hex Socket Cap Screw..... | M6 x 25 | 3 |
| 69 | TS-1503021 | Screw..... | M6 x 10 | 2 |
| 70 | TS-1522011 | Set Screw | M5 x 6 | 2 |
| 72 | TS-1523031 | Set Screw | M6 x 10 | 1 |
| 77 | GHB1340-A77 | Screw..... | M6 x 12 | 1 |
| 78 | GHB1340-A78 | Pin..... | 3 x 25 | 1 |
| 80 | GHB1340-A80 | Pin..... | 5 x 30 | 2 |
| 82 | GHB1340-A82 | Pin..... | 5 x 25 | 3 |
| 84 | GHB1340-A84 | Oiler | 8 | 1 |
| 92 | GHB1340-A92 | O-Ring | 20 x 2.4 | 2 |
| 95 | GHB1340-A95 | Key..... | A5 x 18 | 1 |
| 99 | GHB1340A-06732 | Shaft | | 1 |
| 100 | GHB1340A-06114 | Washer | | 2 |
| 101 | GHB1340A-06734 | Gear..... | 1.5m20T, 36T | 1 |
| 102 | GHB1340A-06115 | Collar | | 1 |
| 103 | GHB1340A-A103 | Shaft Plug | | 1 |
| 104 | GHB1340A-06731 | Gear..... | 1.5m24T | 1 |
| 105 | GHB1340A-06113 | Collar | | 1 |
| 106 | GHB1340A-06111 | Washer | | 1 |
| 107 | GHB1340A-06112 | Shaft Plug | | 1 |
| 109 | GHB1340A-A109 | Key..... | 5 x 12 | 1 |


14.1 Apron Assembly III – Exploded View

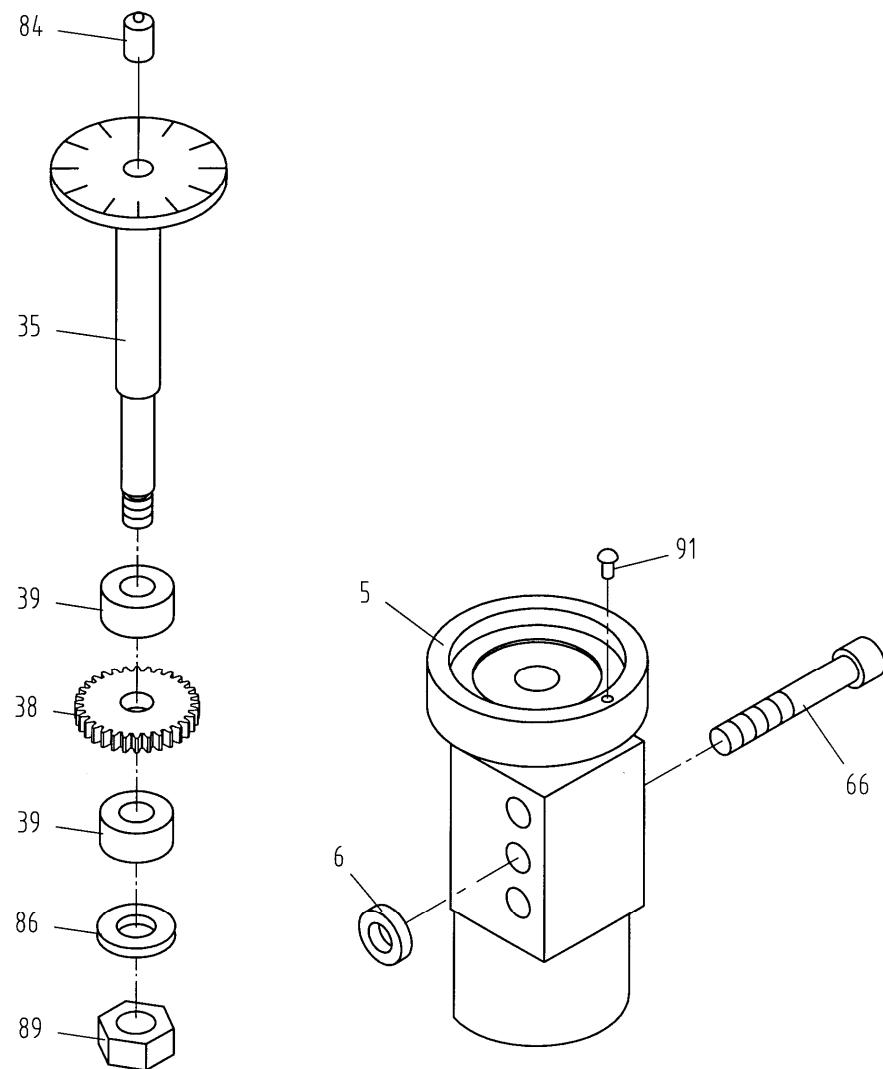

14.2 Apron Assembly III – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|-------------|----------------------|---------|-----|
| 5 | Z06105 | Threading Dial Body | | 1 |
| 6 | 06206 | Washer | | 1 |
| 35 | 06233 | Threading Dial Shaft | | 1 |
| 38 | 06236 | Gear | 1m32T | 1 |
| 39 | 06237 | Spacer | | 2 |
| 66 | TS-1504101 | Hex Socket Cap Screw | M8 x 50 | 1 |
| 84 | GHB1340-A84 | Oiler | 8 | 1 |
| 86 | GHB1340-A86 | Lock Washer | M8 | 1 |
| 89 | TS-1540061 | Hex Nut | M8 | 1 |
| 91 | GHB1340-A91 | Rivet | 3 x 8 | 1 |


15.1 Micro Carriage Stop Assembly – Exploded View

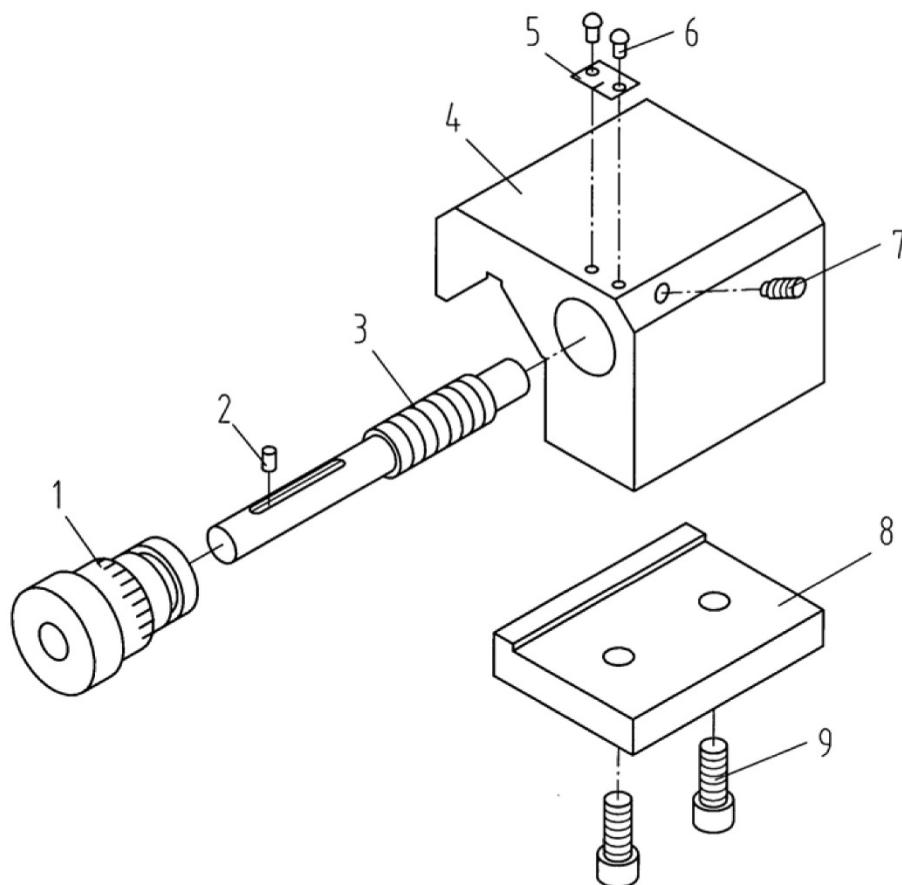

15.2 Micro Carriage Stop Assembly – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|----------------|----------------------|---------|-----|
| 1 | GHB1340A-01707 | Dial | | 1 |
| 2 | GHB1340A-MS02 | Pin | B3 x 6 | 1 |
| 3 | GHB1340A-01716 | Axle | | 1 |
| 4 | GHB1340A-01107 | Stop | | 1 |
| 5 | ZX-03302 | Indicator Plate | | 1 |
| 6 | ZX-MS06 | Pin | 3 x 8 | 2 |
| 7 | TS-1523031 | Socket Set Screw | M6 x 10 | 1 |
| 8 | GH1340A-01108 | Clamping Plate | | 1 |
| 9 | TS-1503051 | Hex Socket Cap Screw | M6 x 20 | 2 |


16.1 Top Slide, Tool Post, Saddle, and Cross Slide I – Exploded View

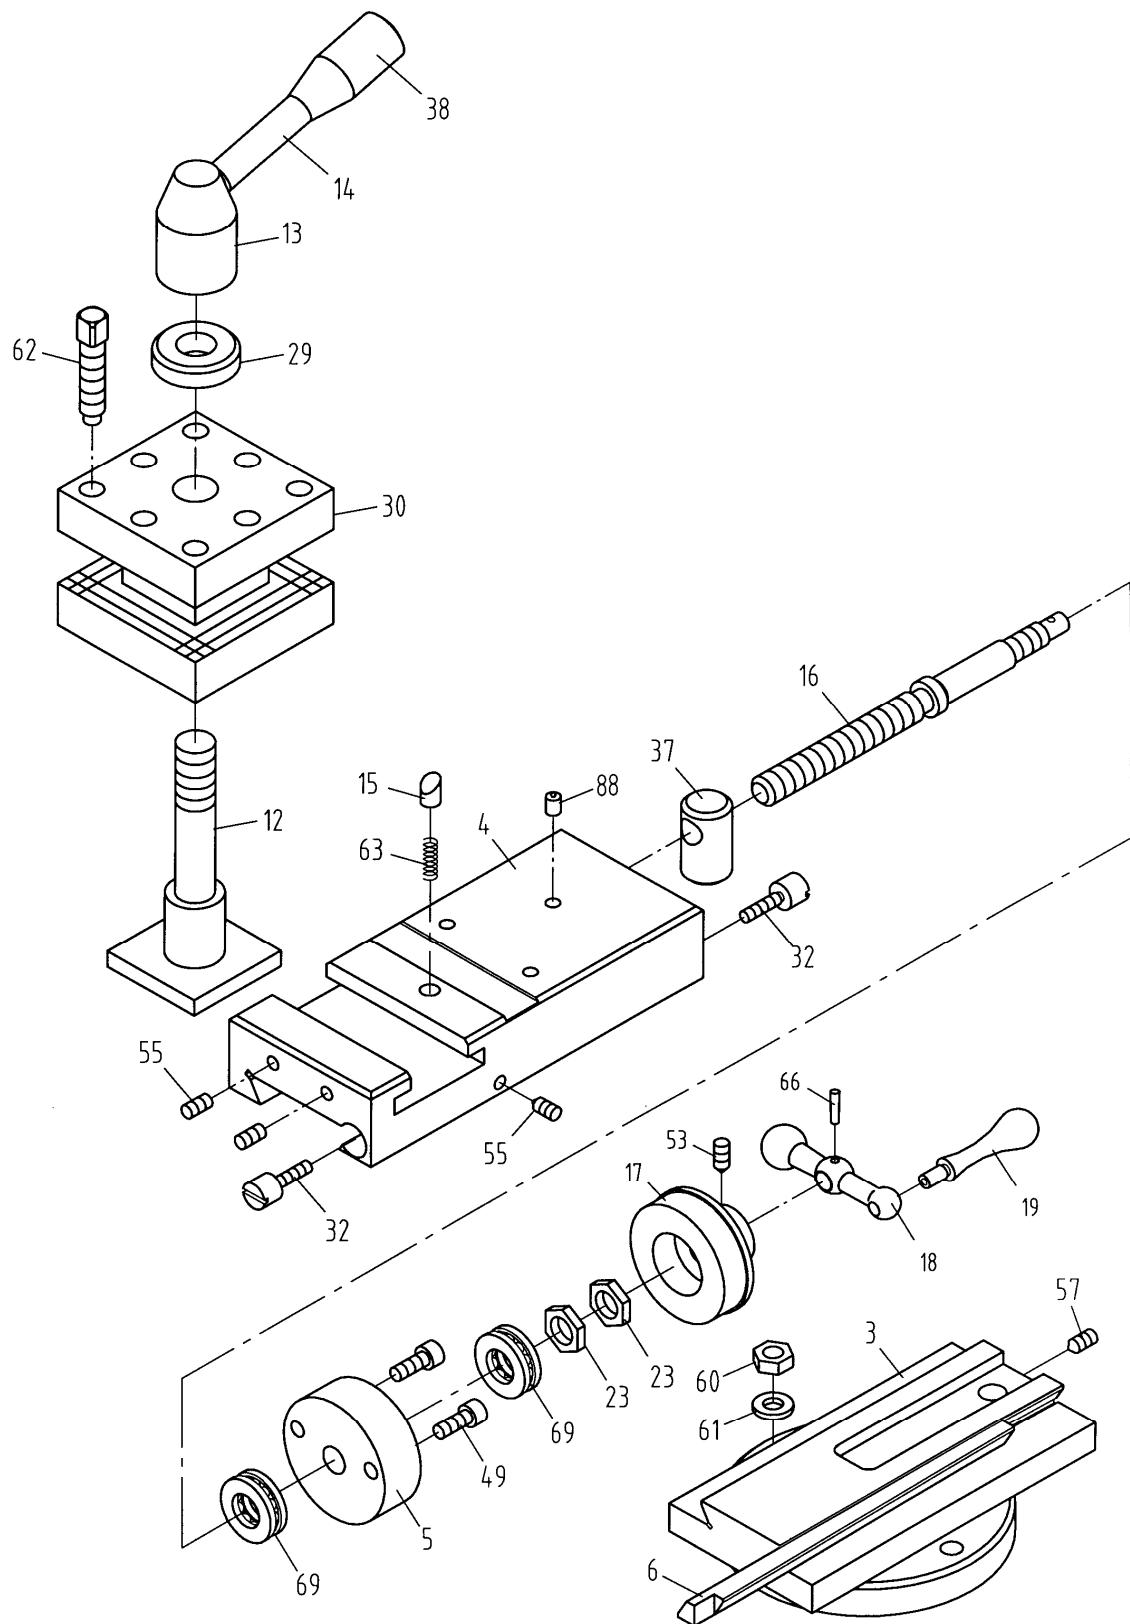

16.2 Top Slide, Tool Post, Saddle, and Cross Slide I – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|-------------|--|-------------------|-----|
| 3 | 07103 | Swivel Slide | | 1 |
| 4 | 07104 | Top Slide..... | | 1 |
| 5 | 07111 | Collar | | 1 |
| 6 | 07117 | Gib | | 1 |
| 12 | 07205 | Screw..... | | 1 |
| 13 | 07206 | Handle Base | | 1 |
| 14 | 07207 | Handle Shaft..... | | 1 |
| 15 | 07209 | Stop | | 1 |
| 16 | 07210 | Screw..... | | 1 |
| 17 | 07212 | Index Ring..... | | 1 |
| 18 | 07213 | Ball Handle | | 1 |
| 19 | 07214 | Handle | | 1 |
| 23 | 07221 | Nut | | 2 |
| 29 | 07233 | Washer | | 1 |
| 30 | 07234 | Post Base | | 1 |
| 32 | 07237 | Gib Adjusting Screw | | 2 |
| 37 | 07430 | Nut | | 1 |
| 38 | 07508 | Knob | | 1 |
| 49 | TS-1503051 | Hex Socket Cap Screw..... | M6 x 20 | 2 |
| 53 | TS-1523011 | Set Screw | M6 x 6 | 1 |
| 55 | TS-1523031 | Set Screw | M6 x 10 | 3 |
| 57 | TS-1524011 | Set Screw | M8 x 8 | 1 |
| 60 | TS-1540061 | Hex Nut..... | M8..... | 2 |
| 61 | TS-1550061 | Washer | M8..... | 1 |
| 62 | GHB1340-62T | Screw..... | M10 x 40 | 8 |
| 63 | GHB1340-63T | Spring | 0.6 x 4x 18 | 1 |
| 66 | GHB1340-66T | Pin..... | 3 x 16 | 1 |
| 69 | GHB1340-69T | Ball Bearing | | 2 |
| | GHB1340-TSA | Top Slide Assembly w/o Tool Post | | 1 |
| 70 | 07545 | Screw..... | M8 x 20 | 1 |
| 88 | GHB1340-88 | Oil Ball | 6 | 1 |


17.1 Top Slide, Tool Post, Saddle, and Cross Slide II – Exploded View

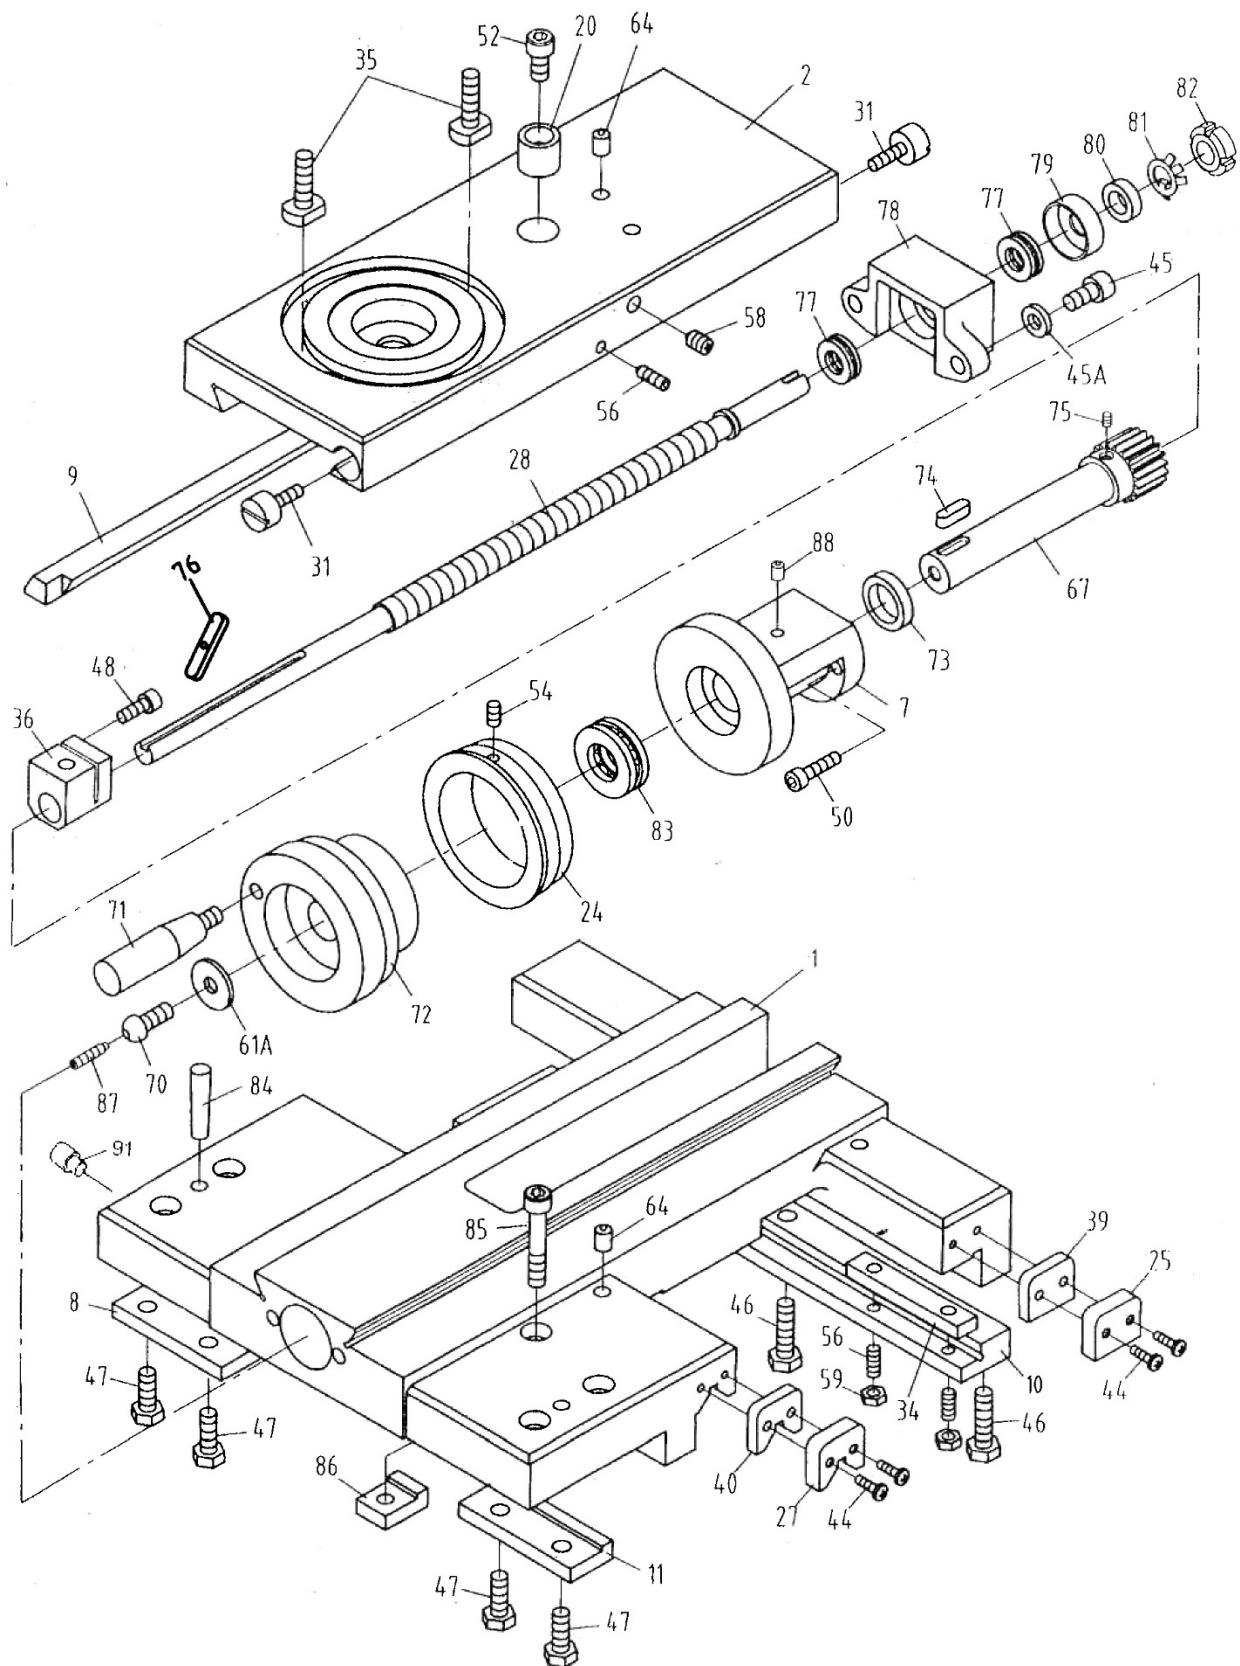

17.2 Top Slide, Tool Post, Saddle, and Cross Slide II – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|------------------|---|------------|-----|
| 1 | 07101 | Saddle (GHB-1340A serial #07061685A and lower) (BDB-1340A serial #0706B0764A and lower) | | 1 |
| | GHB-1340A-04101A | Saddle (GHB-1340A serial #07071686A and higher) (BDB-1340A serial #0707B0765A and higher) | | 1 |
| 2 | 07102 | Cross Slide | | 1 |
| 7 | 07120N | Bearing Housing | | 1 |
| 8 | 07123 | Strip | | 1 |
| 9 | 07131 | Gib | | 1 |
| 10 | 07132 | Strip | | 1 |
| 11 | 07141 | Front Strip (GHB-1340A serial #07061685A and lower) (BDB-1340A serial #0706B0764A and lower) | | 1 |
| | C0632-04111A | Front Strip (GHB-1340A serial #07071686A and higher) (BDB-1340A serial #0707B0765A and higher) | | 1 |
| 20 | 07216 | Collar | | 1 |
| 24 | 07222N | Index Ring | | 1 |
| 25 | 07224 | Plate | | 2 |
| 27 | 07227 | Plate | | 2 |
| 28 | 07229N | Screw | | 1 |
| 31 | 07236 | Gib Adjusting Screw | | 2 |
| 34 | 07239 | Gib Strip | | 2 |
| 35 | 07240 | T-Bolt | | 2 |
| 36 | 07415N | Block | | 1 |
| 39 | 07526 | Wiper | | 2 |
| 40 | 07528 | Wiper | | 2 |
| 44 | GHB1340-44T | Screw | M4 x 12 | 8 |
| 45 | TS-1504051 | Hex Socket Cap Screw | M8 x 25 | 2 |
| 45A | TS-1551061 | Lock Washer | M8 | 2 |
| 46 | GHB1340-46T | Screw | M8 x 20 | 3 |
| 47 | GHB1340-47T | Screw | M8 x 20 | 4 |
| 48 | TS-1503041 | Hex Socket Cap Screw | M6 x 16 | 1 |
| 50 | TS-1503061 | Hex Socket Cap Screw | M6 x 25 | 2 |
| 52 | TS-1504031 | Hex Socket Cap Screw | M8 x 16 | 1 |
| 54 | TS-1523021 | Set Screw | M6 x 8 | 1 |
| 56 | TS-1523071 | Set Screw | M6 x 25 | 5 |
| 58 | TS-1524021 | Set Screw | M8 x 10 | 1 |
| 59 | TS-1540041 | Hex Nut | M6 | 4 |
| 61 | TS-1550061 | Washer | M8 | 1 |
| 61A | GHB1340-65T | Washer | | 1 |
| 64 | GHB1340-64T | Oil Ball | 8 | 5 |
| 67 | 07530 | Gear Shaft | | 1 |
| 70 | TS-1504041 | Screw | M8 x 20 | 1 |
| 71 | 07531 | Handle | | 1 |
| 72 | 07532 | Compound Handle | | 1 |
| 73 | 07533 | Spacer | | 1 |
| 74 | 07534 | Key | | 1 |
| 75 | 07535 | Set Screw | M3 x 8 | 1 |
| 76 | 07536 | Key | 5 x 5 x 30 | 1 |
| 77 | BB-8101 | Thrust Bearing | 8101 | 2 |
| 78 | 07538 | Bearing Housing | | 1 |
| 79 | 07539 | Bearing Dust Cover | | 1 |
| 80 | 07540 | Washer | | 1 |
| 81 | 07541 | Star Washer | | 1 |
| 82 | 07542 | Locking Nut | | 1 |
| 83 | BB-8104 | Thrust Bearing | 8104 | 1 |
| 84 | GHB1340-84 | Taper Pin | 8 x 40 | 2 |
| 85 | GHB1340-85 | Hex Socket Cap Screw | M8 x 50 | 1 |
| 86 | GHB1340-86 | Locking Washer | | 1 |
| 87 | GHB1340-87 | Screw | M5 x 20 | 1 |
| 88 | GHB1340-88 | Oil Ball | 6 | 1 |
| 91 | GHB1340A-04789E | Stop Pin (GHB-1340A for serial #07071686A and higher) | | 1 |


18.1 Tailstock Assembly I – Exploded View

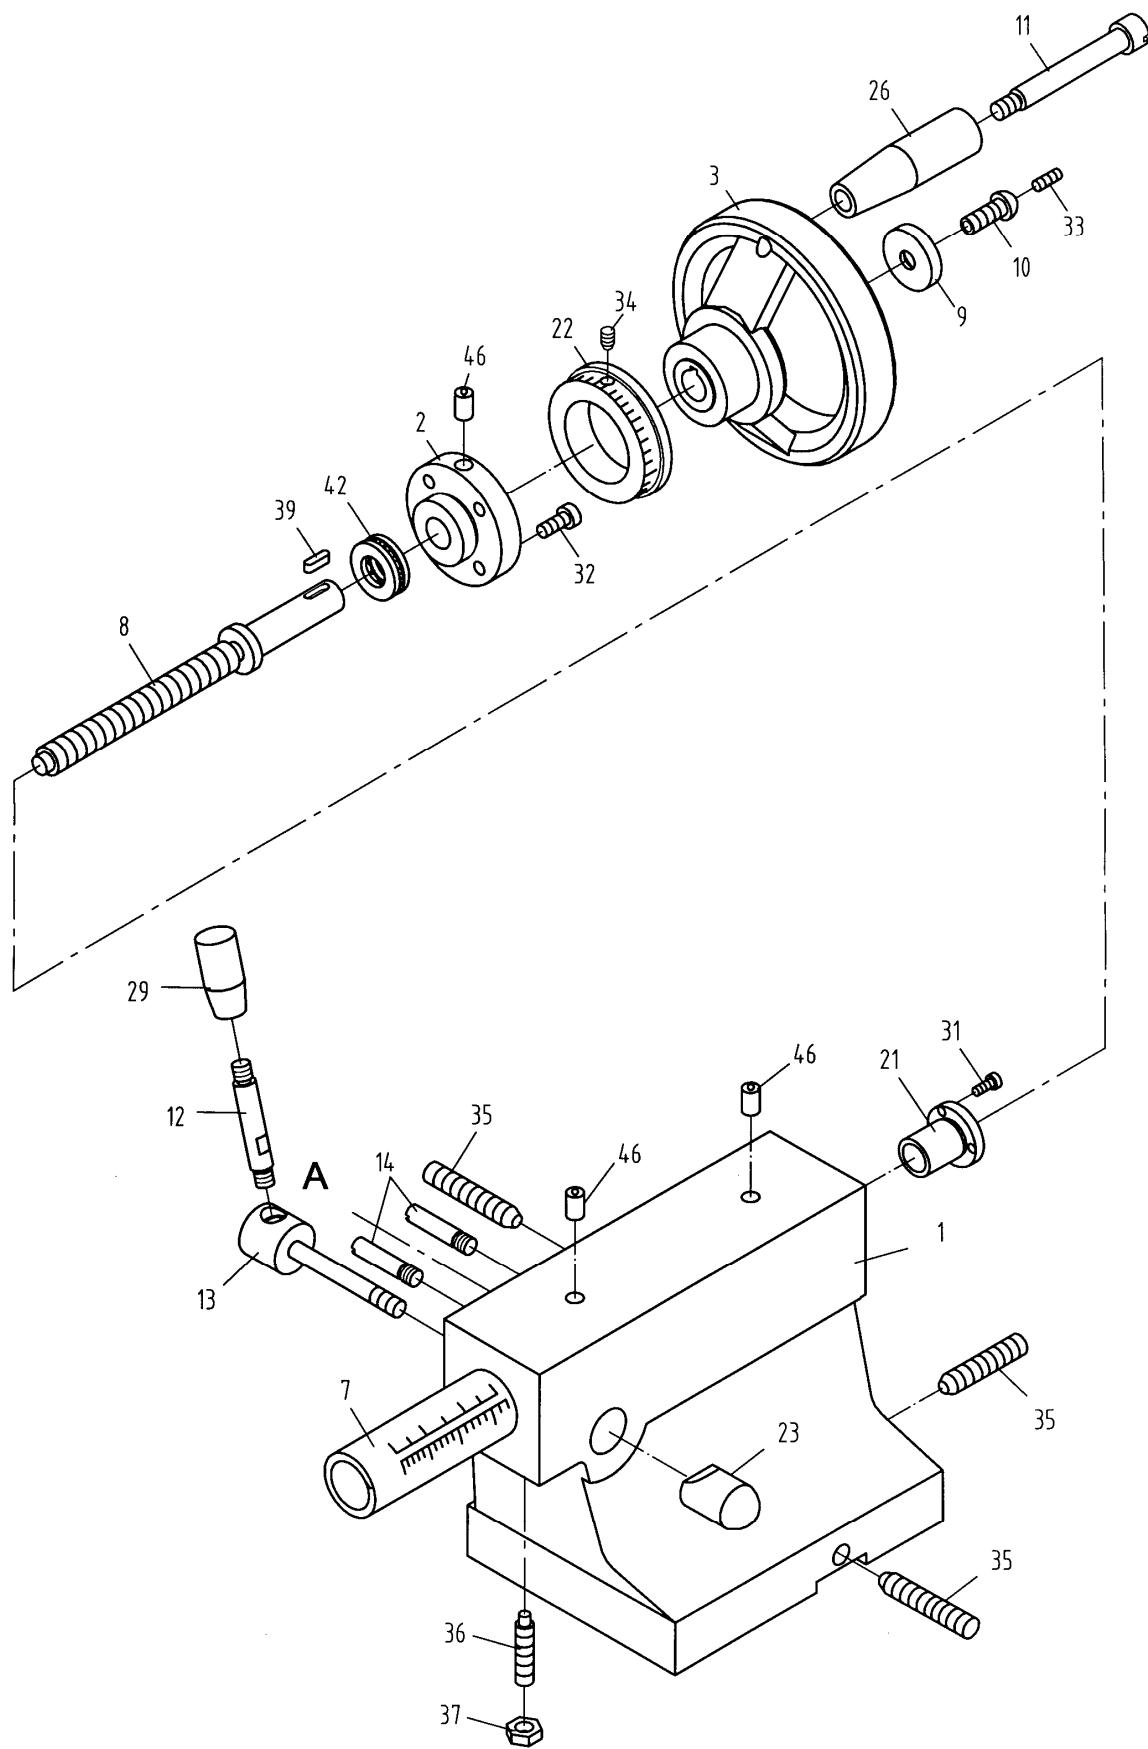

18.2 Tailstock Assembly I – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|--------------|-------------------------------|----------------|-----|
| 1 | Z08101 | Casting..... | | 1 |
| 2 | Z08102 | Flange Cover | | 1 |
| 3 | 08103 | Hand Wheel..... | | 1 |
| 7 | 08202 | Quill..... | | 1 |
| 8 | Z08203 | Screw..... | | 1 |
| 9 | GHB1340-09TS | Washer | | 1 |
| 10 | Z08205 | Screw..... | M8 x 20 | 1 |
| 11 | 08206 | Screw..... | | 1 |
| 12 | Z08207 | Lever..... | | 1 |
| 13 | 08208 | Shaft | | 1 |
| 14 | 08209 | Screw..... | | 2 |
| 21 | 08401 | Nut | | 1 |
| 22 | 08402 | Index Ring..... | | 1 |
| 23 | 08403 | Pivot Block..... | | 1 |
| 26 | 08501 | Handle | | 1 |
| 29 | GHB1340-29TS | Handle | M8 x 40 | 1 |
| 31 | TS-1501031 | Hex Socket Cap Screw..... | M4 x 10 | 3 |
| 32 | TS-1503041 | Hex Socket Cap Screw..... | M6 x 16 | 4 |
| 33 | TS-1522061 | Set Screw | M5 x 20 | 1 |
| 34 | TS-1523031 | Set Screw | M6 x 8 | 1 |
| 35 | GHB1340-35TS | Set Screw | M10 x 45 | 3 |
| 36 | GHB1340-36TS | Screw..... | M8 x 35 | 1 |
| 37 | TS-1540061 | Hex Nut..... | M8 | 1 |
| 39 | GHB1340-39TS | Key..... | 4 x 15 | 1 |
| 42 | BB-51102 | Bearing | 8102 | 1 |
| 46 | GHB1340-43TS | Oil Ball | 8 | 3 |
| | Z08201 | Live Center (not shown)..... | MT3 | 1 |
| | 8404 | Arrow Plate (not shown) | | 1 |
| | 8405 | Scale Plate (not shown)..... | | 1 |


19.1 Tailstock Assembly II – Exploded View

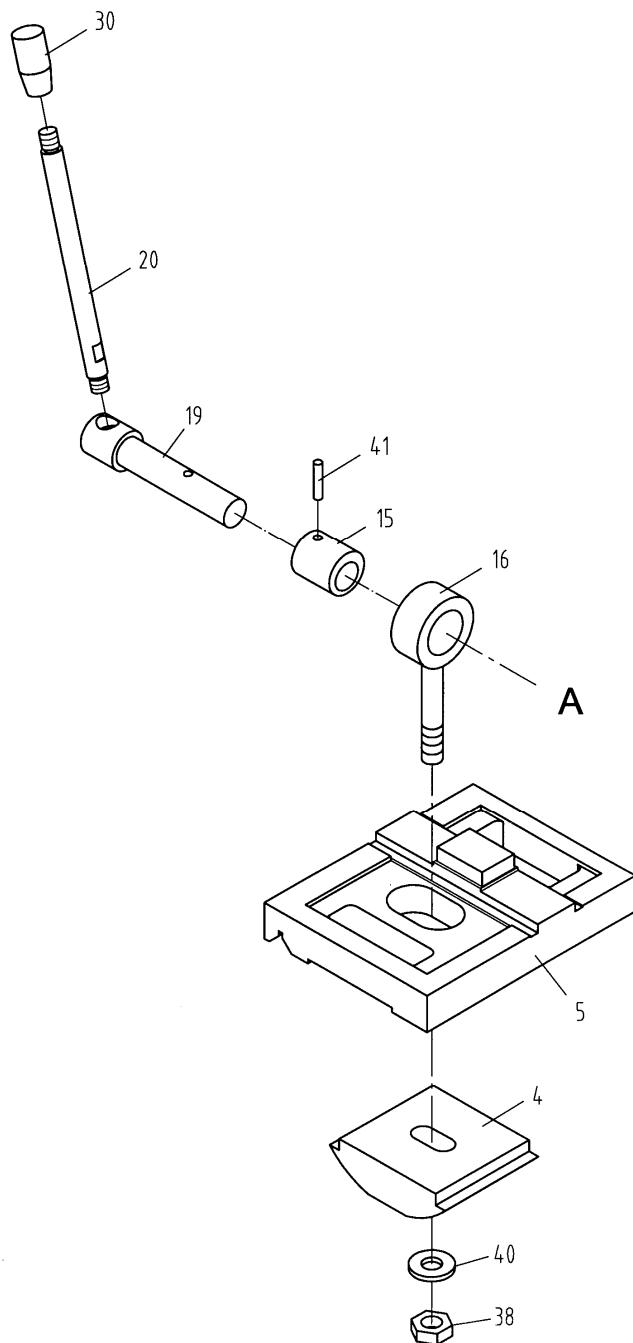

19.2 Tailstock Assembly II – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|--------------|-------------|----------|-----|
| 4 | 08104 | Clamp Plate | | 1 |
| 5 | 08105 | Base | | 1 |
| 15 | 08211 | Collar | | 1 |
| 16 | 08212 | Screw | | 1 |
| 19 | 08213 | Shaft | | 1 |
| 20 | 08214 | Lever | | 1 |
| 30 | GHB1340-30TS | Knob | M10 x 50 | 1 |
| 38 | TS-1540081 | Hex Nut | M12 | 1 |
| 40 | TS-2360121 | Washer | M12 | 1 |
| 41 | GHB1340-41TS | Pin | 5 x 25 | 1 |


20.1 Follow Rest – Exploded View

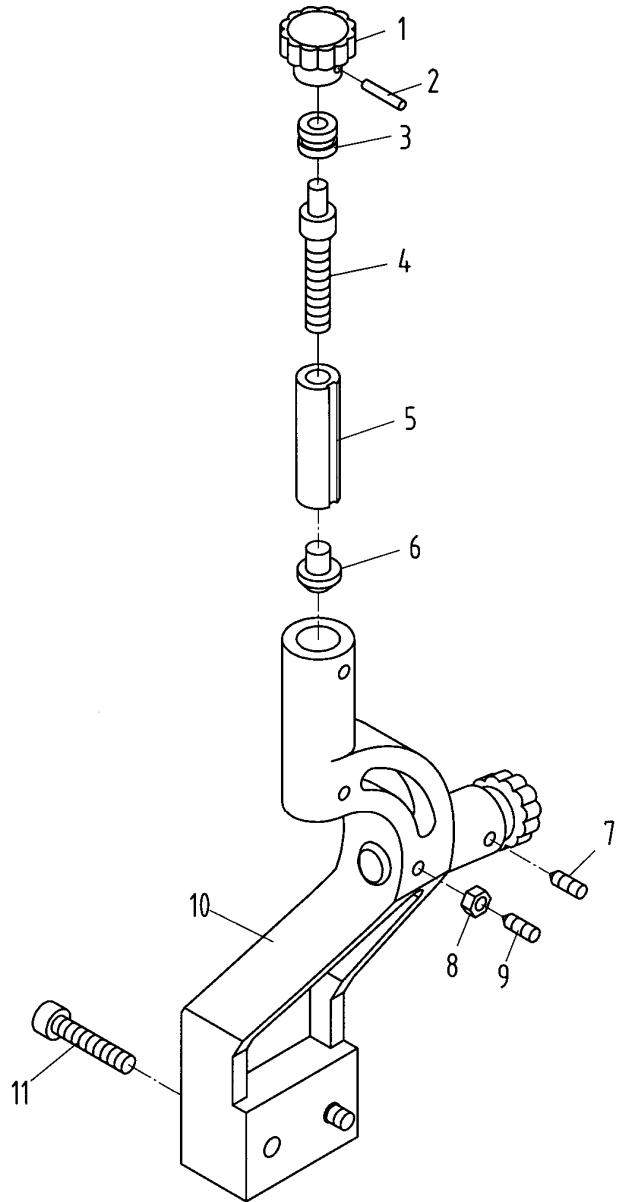

20.2 Follow Rest – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|-------------|----------------------|---------|-----|
| 1 | GHB1340-1FR | Knob | | 2 |
| 2 | GHB1340-2FR | Pin | 3 x 18 | 2 |
| 3 | 10208 | Bushing | | 2 |
| 4 | 10204 | Screw | | 2 |
| 5 | 10201 | Sleeve | | 2 |
| 6 | 10401 | Brass Finger | | 2 |
| 7 | TS-1523011 | Set Screw | M6 x 8 | 2 |
| 8 | TS-1540041 | Nut | M6 | 2 |
| 9 | TS-1523051 | Set Screw | M6 x 16 | 2 |
| 10 | 10104 | Base Casting | | 1 |
| 11 | TS-1504071 | Hex Socket Cap Screw | M8 x 35 | 2 |
| | GHB1340-FR | Follow Rest Complete | | 1 |

21.1 Steady Rest – Exploded View

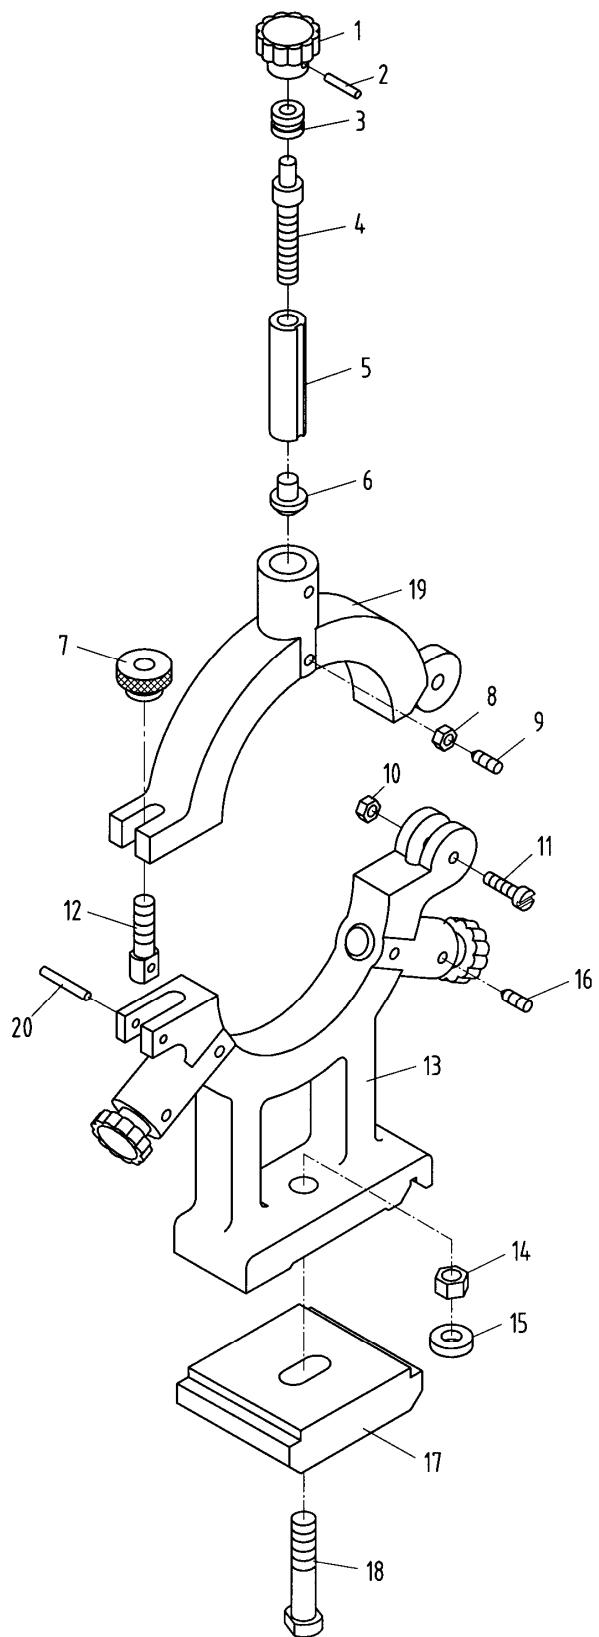

21.2 Steady Rest – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|--------------|---------------------------|--------------|-----|
| 1 | GHB1340-1FR | Knob | | 3 |
| 2 | GHB1340-2FR | Pin..... | 3 x 18 | 3 |
| 3 | 10203 | Bushing..... | | 3 |
| 4 | 10204 | Screw..... | | 3 |
| 5 | 10201 | Sleeve..... | | 3 |
| 6 | 10401 | Brass Finger | | 3 |
| 7 | 10205 | Lock Knob..... | | 1 |
| 8 | TS-1540041 | Nut | M6..... | 3 |
| 9 | TS-1523051 | Set Screw | M6 x 16..... | 3 |
| 10 | TS-1540041 | Nut | M6..... | 1 |
| 11 | GHB1340-11SR | Bolt..... | M6 x 30..... | 1 |
| 12 | 10206 | Pivot Bolt..... | | 1 |
| 13 | 10102 | Base Casting | | 1 |
| 14 | TS-1540081 | Nut | M12..... | 1 |
| 15 | TS-1550081 | Flat Washer | M12..... | 1 |
| 16 | TS-1523021 | Set Screw | M6 x 8 | 3 |
| 17 | 10103 | Clamp Rod..... | | 1 |
| 18 | TH1340-18SR | Clamp Screw | | 1 |
| 19 | 10101 | Top Casting | | 1 |
| 20 | GHB1340-20SR | Pin..... | 5 x 25 | 1 |
| | GHB1340-SR | Steady Rest Complete..... | | 1 |


23.0 Additional Parts (Not Shown)

| Index No | Part No | Description | Size | Qty |
|----------|--------------|-------------------------|----------------|-----|
| | GHB1340-FP | Face Plate..... | 12" D1-4..... | 1 |
| | GHB1340-TBC | Tool Box Complete | | 1 |
| | 321449 | Chuck..... | 6" 3 Jaw | 1 |
| | 321430 | Chuck..... | 8" 4 Jaw | 1 |
| | GHB1340A-CG1 | Change Gear | 1.25m44T..... | 1 |
| | GHB1340A-CG2 | Change Gear | 1.25m48T..... | 1 |
| | GHB1340A-CG3 | Change Gear | 1.25m33T..... | 1 |
| | GHB1340A-CG4 | Change Gear | 1.25m46T..... | 1 |
| | GHB1340A-CG5 | Change Gear | 1.25m52T..... | 1 |

24.0 Additional Electrical Components (Not Shown)

| Index No | Part No | Description | Size | Qty |
|----------|----------------|---|------|-----|
| | BDB1340-QS1 | Main Power Switch (BDB-1340A Only) | | 1 |
| | BDB1340-QS1-A | Faceplate for Power Switch (BDB-1340A Only) | | 1 |
| | BDB1340-QS1-B | Knob for Power Switch (BDB-1340A Only)..... | | 1 |
| | 321320 | Motor (2HP, 1Ph, 60HZ 230V only for GHB-1340A/1440A)..... | | 1 |
| | GHB1340-MP | Motor Pulley..... | | 1 |
| | 321321 | Motor (2HP, 1Ph, 60HZ 230V only for BDB-1340A) | | 1 |
| | BDB1340-MP | Motor Pulley..... | | 1 |
| | GHB1340-C | Capacitor (same with BDB-1340A)..... | | 1 |
| | GHB1340-CC | Capacitor Cover (same with BDB-1340A) | | 1 |
| | GHB1340-CSF | Centrifugal Switch Fixture (same with BDB-1340A) | | 1 |
| | GHB1340-CSR | Centrifugal Switch Rotor | | 1 |
| | BDB1340-CSR | Centrifugal Switch Rotor | | 1 |
| | GHB1340A-EBC | Electrical Box Complete..... | | 1 |
| | BDB1340A-EBC | Electrical Box Complete..... | | 1 |
| | GHB1340A-18701 | Electrical Box (bare) | | 1 |
| | BDB1340A-18701 | Electrical Box (bare) | | 1 |
| | GHB1340-JB | Motor Junction Box..... | | 1 |
| | BDB1340-JB | Motor Junction Box..... | | 1 |
| | GHB1340A-RSB | Rotary Switch Box | | 1 |
| | GHB1340A-SP | Electric Switch Plate (GHB-1340A/1440A Only)..... | | 1 |

26.1 Electrical Schematic – BDB-1340A

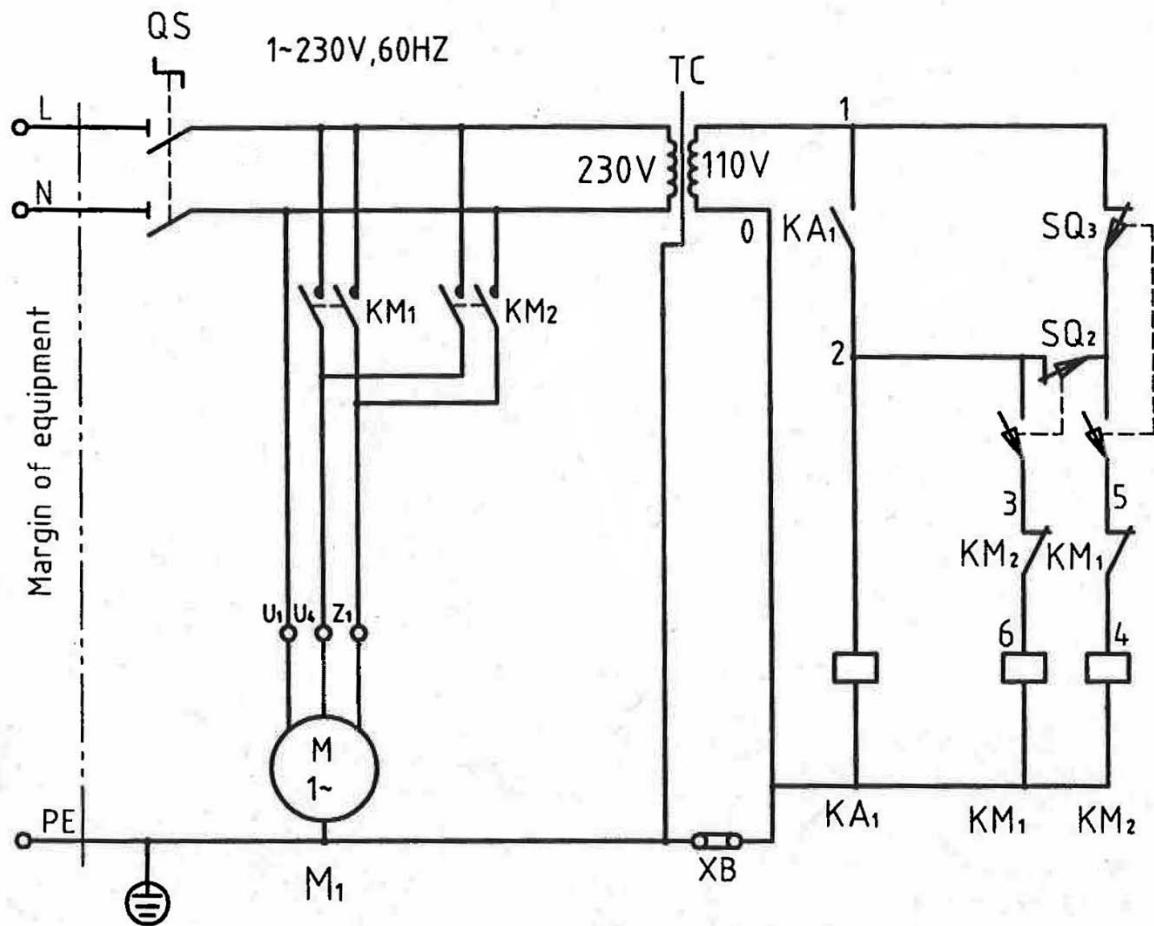


26.2 Electrical Schematic Parts List – BDB-1340A

| Index No | Part No | Description | Size | Qty. |
|----------|--------------|------------------------------|-----------------|------|
| 1 | GHB1340-KA1 | Relay..... | CA2-DN140..... | 1 |
| 2 | GHB1340-KM1 | A.C. Contactor | LC1-D259..... | 1 |
| 3 | GHB1340-KM2 | A.C. Contactor | LC1-D259..... | 1 |
| 4 | GHB1340-TC | Control Transformer..... | JBK3-63..... | 1 |
| 5 | GHB1340A-SQ2 | Stroke Switch..... | LXW5-11D1 | 1 |
| 6 | GHB1340A-SQ3 | Stroke Switch..... | LXW5-11D1 | 1 |
| 7 | GHB1340-XT1 | Wiring Board | JHY1-32 | 1 |
| 8 | GHB1340-XT2 | Wiring Board | JHY1-16 | 1 |
| 9 | GHB1340-XB | Copper Plate (for grounding) | | 1 |

Replacement Parts

To order parts or reach our service department, call 800-274-6848 between 8:00 a.m. and 5:00 p.m. (CST), Monday through Friday. Having the Model Number and Serial Number of your product available when you call will allow us to serve you quickly and accurately.

CC-GHB1340A Collet Closer – Exploded View

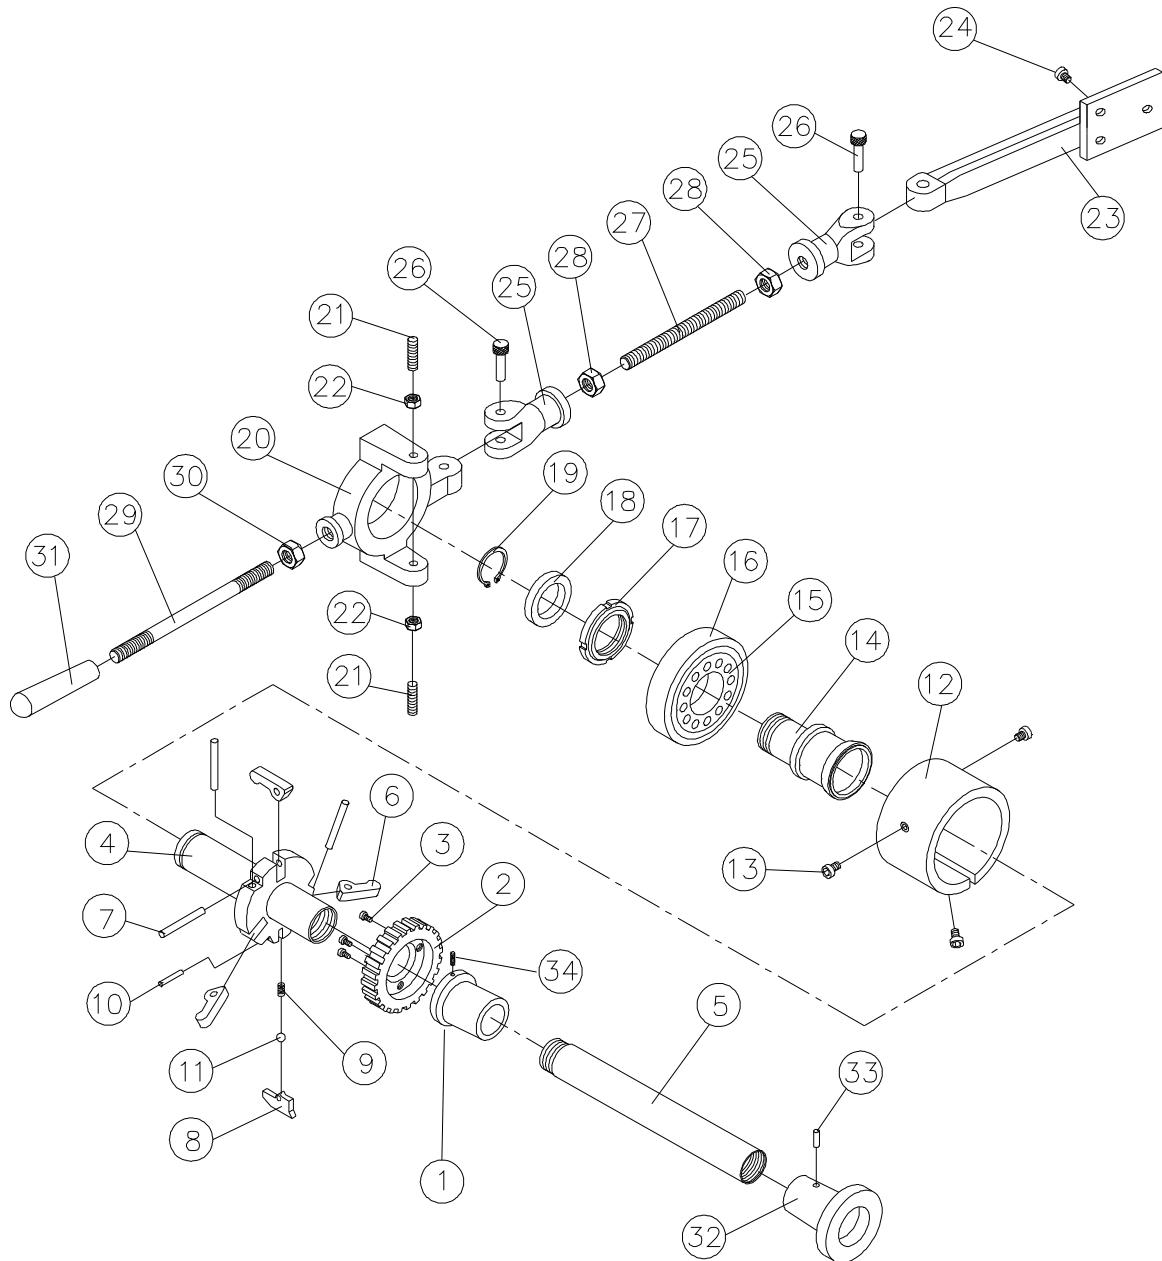

CC-GHB1340A Collet Closer – Parts List

| Index No. | Part No. | Description | Size | Quantity |
|------------------|-------------------|--------------------------------|-------------|-----------------|
| 1..... | CC13GHB-01E | Sleeve Coupling..... | 156mm..... | 1 |
| 2..... | CC13BD-02 | Coupling..... | | 1 |
| 3..... | CC13BD-03 | Hex Socket Cap Screw..... | | 3 |
| 4..... | CC13BD-04 | Arbor | | 1 |
| 5..... | CC-05H..... | Draw Bar | 477mm..... | 1 |
| 6..... | CC13BD-06 | Buckle | | 3 |
| 7..... | CC13BD-07 | Pin | | 3 |
| 8..... | CC13BD-08 | Buckling Plate | | 1 |
| 9..... | CC13BD-09 | Spring | | 1 |
| 10..... | CC13BD-10 | Pin | | 1 |
| 11..... | CC13BD-11 | Steel Ball..... | | 1 |
| 12..... | CC13BD-12 | Outward Flange..... | | 1 |
| 13..... | CC13BD-13 | Hex Socket Cap Screw..... | | 3 |
| 14..... | CC13BD-14 | Bearing Shaft | | 1 |
| 15..... | CC13BD-15 | Ball Bearing..... | | 1 |
| 16..... | CC13BD-16 | Bearing Stand | | 1 |
| 17..... | CC13BD-17 | Locking Nut | | 1 |
| 18..... | CC13BD-18 | Collar | | 1 |
| 19..... | CC13BD-19 | Retaining Ring (external)..... | | 1 |
| 20..... | CC13BD-20 | Bearing Body..... | | 1 |
| 21..... | CC13BD-21 | Set Screw..... | | 2 |
| 22..... | CC13BD-22 | Hex Nut..... | | 2 |
| 23..... | CC-23LN..... | Fixed Seat (length)..... | 200L..... | 1 |
| 24..... | CC13BD-24 | Hex Socket Cap Screw..... | | 3 |
| 25..... | CC13BD-25 | Coupling | | 2 |
| 26..... | CC13BD-26 | Special Pin | | 2 |
| 27..... | CC13BD-27 | Screw Bolt | | 1 |
| 28..... | CC13BD-28 | Hex Nut | | 2 |
| 29..... | CC13BD-29 | Screw Bolt | | 1 |
| 30..... | CC13BD-30 | Hex Nut | | 1 |
| 31..... | CC13BD-31 | Grip | | 1 |
| 32..... | CC13BD-32 | Sleeve | | 1 |
| 33..... | CC13BD-33 | Pin | | 1 |
| 34..... | CC13BD-34 | Set Screw..... | M6x8..... | 1 |