



# Operating Instructions and Parts Manual

## 14ga. x 52-inch Hydraulic Shear

Model HS-1452




**JET**


427 New Sanford Road  
LaVergne, Tennessee 37086  
Ph.: 800-274-6848  
[www.jettools.com](http://www.jettools.com)

**Part No. M-756205**  
Revision B1 06/2014  
Copyright © 2014 JET


### 11.1.1 HS-1452 Hydraulic Shear – Exploded View

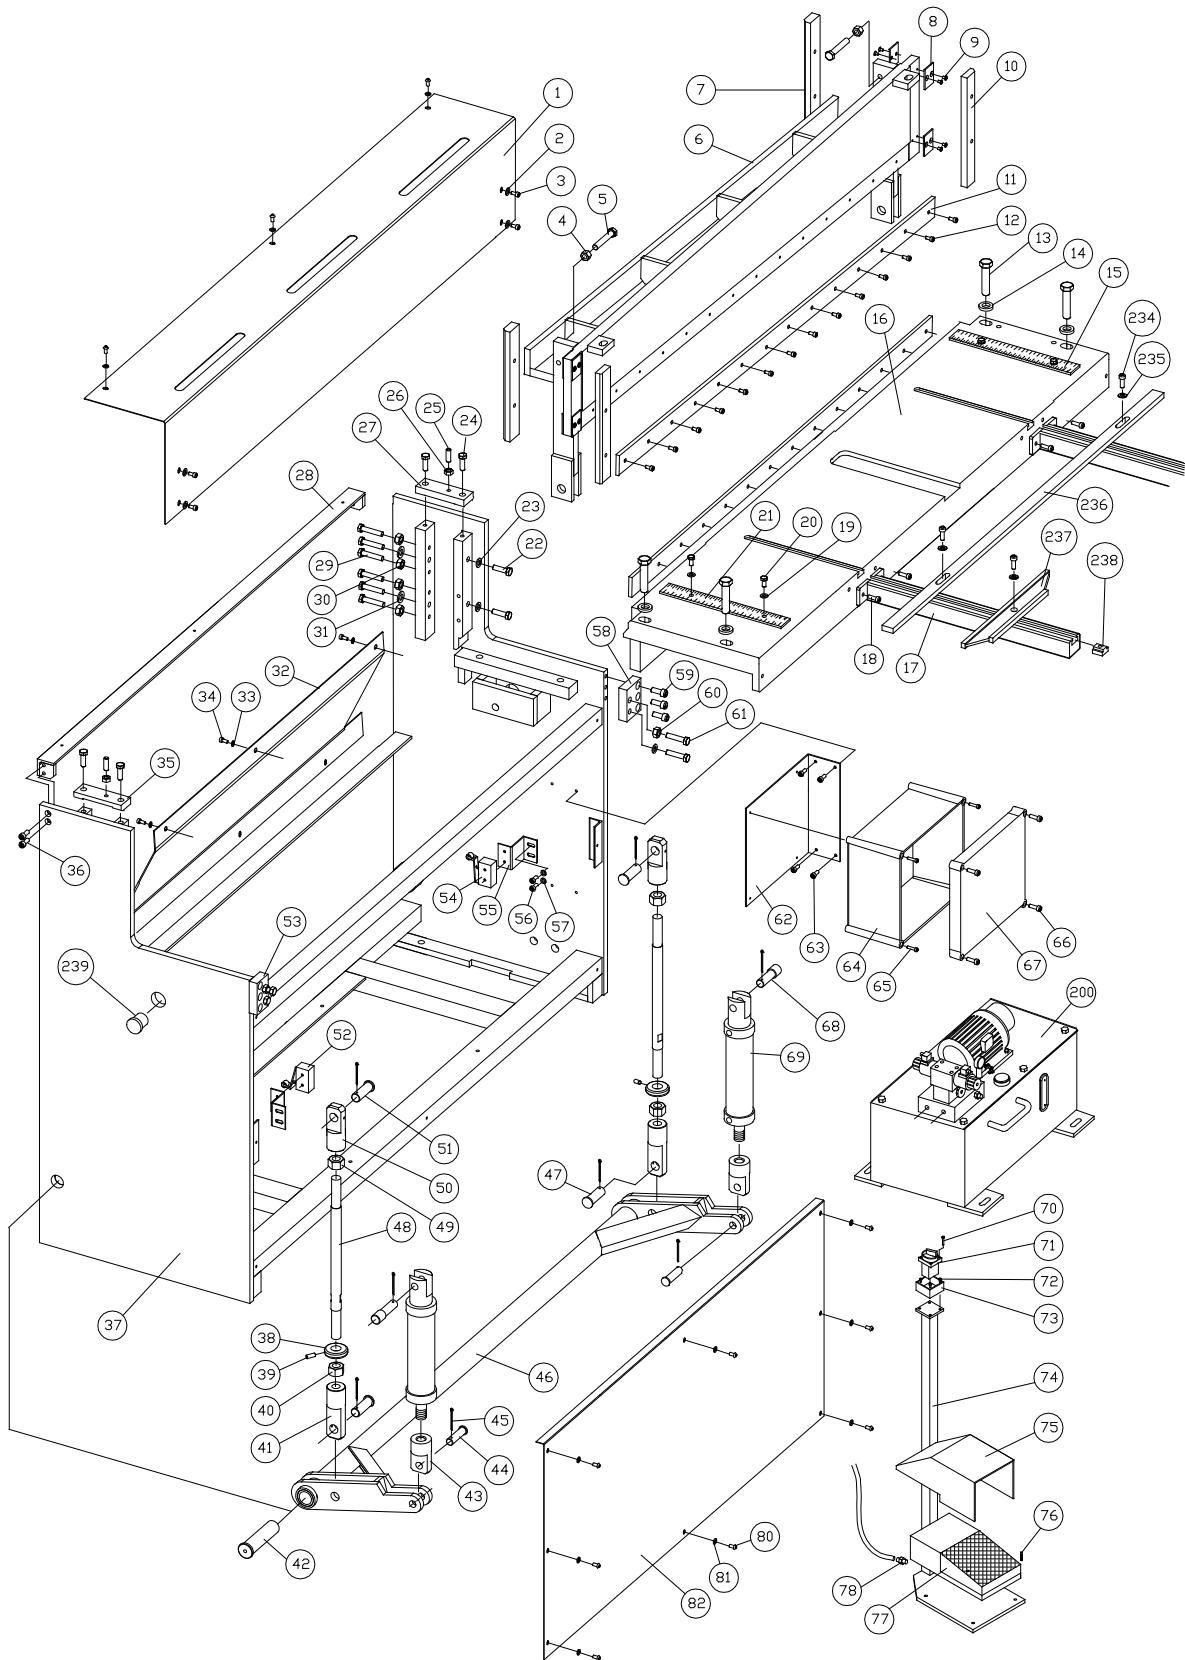


### 11.1.2 HS-1452 Rear Stop and Press Plate – Exploded View

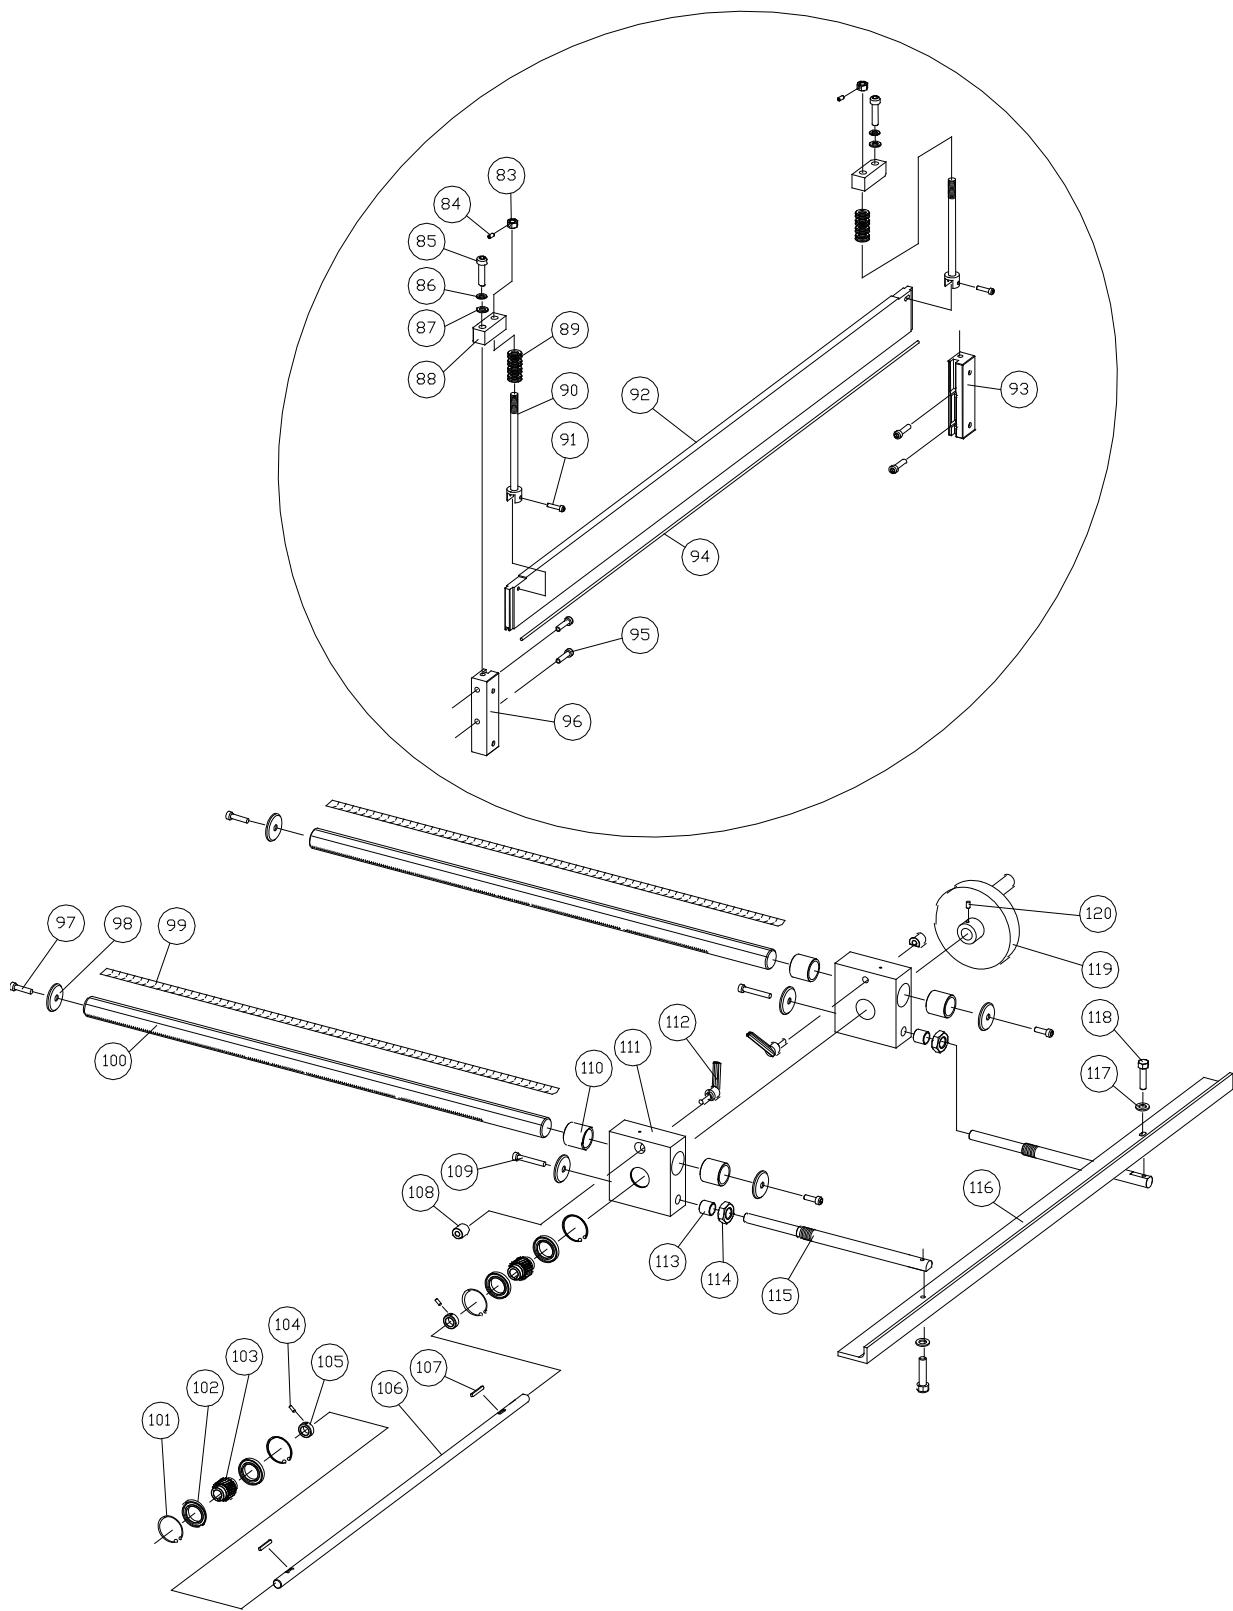

### 11.1.3 HS-1452 Hydraulic Regulator Assembly – Exploded View

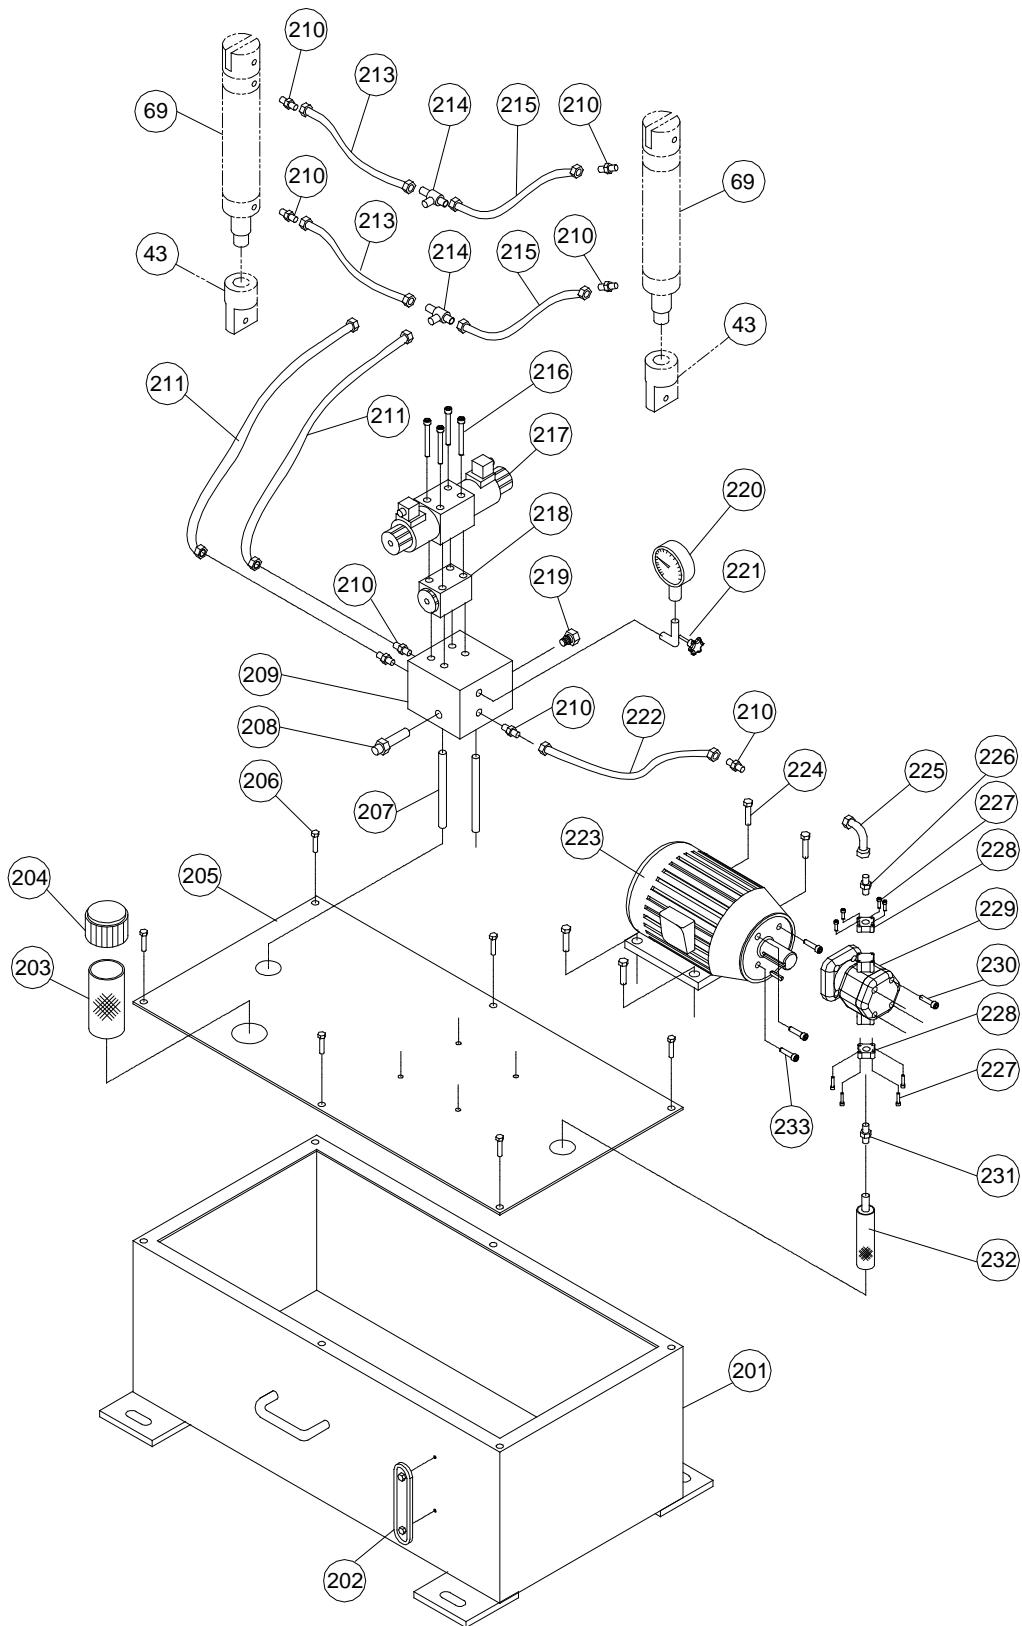

#### 11.1.4 HS-1452 Control Box – Exploded View

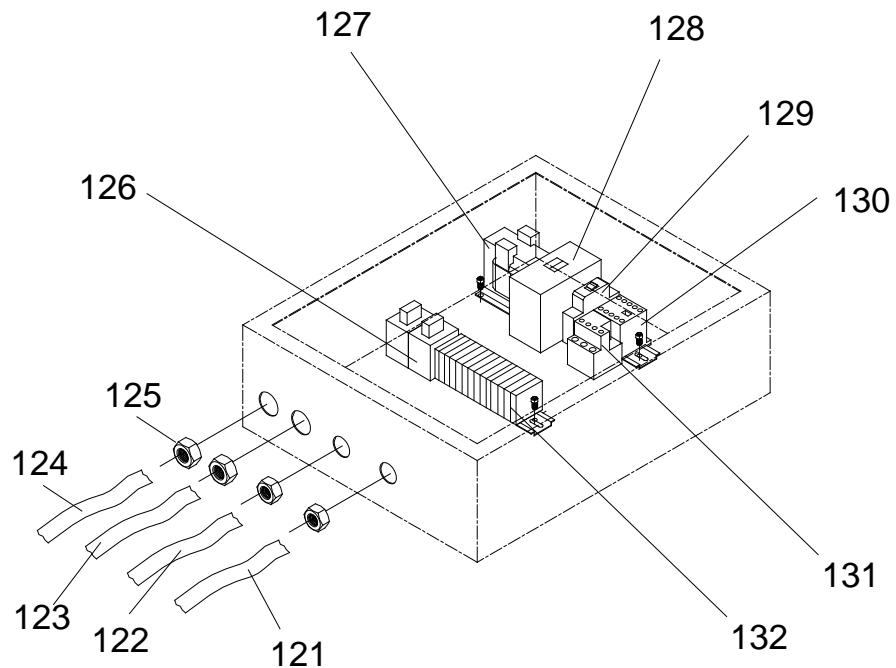


## 11.1.5 HS-1452 Hydraulic Shear Assembly – Parts List

Index No.	Part No.	Description	Size	Qty
1	HS1252-1	Cover.....		1
2	TS-1550041	Flat Washer.....	M6.....	7
3	TS-2246122	Hex Socket Button Head Screw.....	M6x12.....	7
4	HS1252-4	Copper Nut.....	M12.....	2
5	HS1252-5	Copper Bolt.....	M12x70.....	2
6	HS1252-6	Upper Beam.....		1
7	HS1252-7	Fixed Plate.....		2
8	HS1252-8	Block .....		8
9	TS-1533032	Cross Recess Head Screw .....	M5x10.....	16
10	HS1252-10	Fixed Plate .....		2
11	HS1252-11	Blade .....		2
12	HS1252-12	Bolt.....	M6x12.....	28
13	TS-1510071	Hex Cap Screw .....	M16x70.....	4
14	HS1252-14	Washer.....		4
15	HS1252-15	Scale .....		1
16	HS1252-16	Table .....		1
17	HS1252-17	Support Rod.....		2
18	TS-1505031	Socket Head Cap Screw.....	M10x25.....	4
19	TS-1550061	Flat Washer.....	M8.....	4
20	TS-1490021	Hex Cap Screw .....	M8x16.....	4
21	HS1252-21	Scale .....		1
22	TS-149105	Hex Cap Screw .....	M10x35.....	4
23	TS-1550071	Flat Washer.....	M10.....	4
24	TS-1491041	Hex Cap Screw .....	M10x30.....	4
25	TS-2279301	Hex Socket Set Screw .....	M10x30.....	2
26	TS-2311101	Hex Nut .....	M10.....	2
27	HS1252-27	Upper Limit Block (RH) .....		1
28	HS1252-28	Upper Support .....		1
29	TS-2210501	Hex Cap Screw .....	M10x50.....	12
30	TS-2311101	Hex Nut .....	M10.....	8
31	TS-1550071	Flat Washer.....	M10.....	4
32	HS1252-32	Rear Plate .....		1
33	TS-1550041	Flat Washer.....	M6.....	6
34	TS-2246122	Hex Socket Button Head Screw.....	M6x12.....	6
35	HS1252-35	Upper Limit Block (LH) .....		1
36	TS-1504041	Socket Head Cap Screw .....	M8x20.....	4
37	HS1252-37	Body .....		1
38	HS1252-38	Block .....		2
39	TS-1523051	Hex Socket Set Screw .....	M6x16.....	2
40	TS-2310201	Hex Nut .....	M20.....	2
41	HS1252-41	Lower Connecting Block .....		2
42	HS1252-42	Pin .....		2
43	HS1252-43	Cylinder Adaptor .....		2
44	HS1252-44	Clevis Pin .....		2
45	HS1252-45	Cotter Pin .....	3.2x45.....	8
46	HS1252-46	Connecting bar .....		1
47	HS1252-47	Clevis Pin .....		2
48	HS1252-48	Link Rod .....		2
49	TS-2310201	Hex Nut .....	M20.....	2
50	HS1252-50	Upper Connecting Block .....		2
51	HS1252-51	Clevis Pin .....		2
52	HS1252-52	Lower Limit Switch .....		1
53	HS1252-53	Adjusting Block .....		1
54	HS1252-54	Upper Limit Switch .....		1
55	HS1252-55	Stand for Limit Switch .....		2
56	TS-1503031	Socket Head Cap Screw .....	M6x12.....	4
57	TS-1550041	Flat Washer .....	M6.....	4
58	HS1252-58	Adjusting Block .....		1

<b>Index No.</b>	<b>Part No.</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
59	TS-1505031	Socket Head Cap Screw.....	M10x25.....	6
60	TS-2311101	Hex Nut .....	M10.....	2
61	TS-2210451	Hex Cap Screw .....	M10x45.....	2
62	HS1252-62	Stand for Electric Box.....	.....	1
63	TS-1503031	Socket Head Cap Screw.....	M6x12.....	4
64	HS1252-64	Electric Box .....	.....	1
65	TS-1503081	Socket Head Cap Screw.....	M6x35.....	4
66	HS1252-66	Electric Box Bolt.....	.....	4
67	HS1252-67	Electric Box Cover.....	.....	1
68	HS1252-68	Clevis Pin .....	.....	2
69	HS1252-69	Cylinder .....	.....	2
70	HS1252-70	Screw .....	ST4.2x45 .....	4
71	HS1252-71	Select Switch.....	XB2-ED23.....	1
72	TS-1532042	Cross Recess Head Screw .....	M4x12 .....	4
73	HS1252-73	Switch Box .....	.....	1
74	HS1252-74	Post .....	.....	1
75	HS1252-75	Pedal Guard .....	YBLT-YDT1/11 .....	1
76	TS-1501041	Socket Head Cap Screw .....	M4x12 .....	4
77	HS1252-77	Pedal Switch .....	YBLT-YDT1/11 .....	1
78	HS1252-78	Strain Relief.....	M20x1.5.....	1
80	TS-2246122	Hex Socket Button Head Screw.....	M6x12.....	8
81	TS-1550041	Flat Washer.....	M6.....	8
82	HS1252-82	Front Plate .....	.....	1
83	HS1252-83	Nut.....	M12.....	2
84	TS-1521021	Hex Socket Set Screw .....	M4x6 .....	2
85	TS-1505061	Socket Head Cap Screw .....	M10x40 .....	2
86	TS-2361101	Lock Washer .....	M10.....	2
87	TS-1550071	Flat Washer .....	M10.....	2
88	HS1252-88	Block .....	.....	2
89	HS1252-89	Coiled Spring.....	25x12.5x1.5.....	48
90	HS1252-90	Rod .....	.....	2
91	TS-1503071	Socket Head Cap Screw .....	M6x30 .....	2
92	HS1252-92	Hold-down .....	.....	1
93	HS1252-93	Guide Slot (RH) .....	.....	1
94	HS1252-94	Rubber Seal .....	.....	1
95	TS-1504071	Socket Head Cap Screw .....	M8x35 .....	4
96	HS1252-96	Guide Slot (LH) .....	.....	1
97	HS1252-97	Socket Head Cap Screw .....	M8x20 .....	4
98	HS1252-98	Washer .....	.....	6
99	HS1252-99	Scale .....	.....	2
100	HS1252-100	Scale Rod .....	.....	2
101	HS1252-101	Retaining Ring .....	37 .....	4
102	HS1252-102	Bearing (37x25x7) .....	61805 .....	4
103	HS1252-103	Small Gear .....	.....	2
104	TS-1522011	Hex Socket Set Screw .....	M5x6 .....	2
105	HS1252-105	Ring .....	.....	2
106	HS1252-106	Connecting Bar .....	.....	1
107	HS1252-107	Flat Key .....	5x20 .....	2
108	HS1252-108	Block .....	.....	2
109	TS-1504081	Socket Head Cap Screw .....	M8x40 .....	2
110	HS1252-110	Sliding Bushing .....	.....	4
111	HS1252-111	Sliding Block .....	.....	2
112	HS1252-112	Adjustable Handle .....	M10x50 .....	2
113	HS1252-113	Spacer .....	.....	2
114	HS1252-114	Nut .....	M20x1.5 .....	2
115	HS1252-115	Fixed Shaft .....	.....	2
116	HS1252-116	Rear Stop .....	.....	1
117	TS-1550061	Flat Washer .....	M8 .....	2
118	TS-1490031	Hex Cap Screw .....	M8x20 .....	2
119	HS1252-119	Handwheel .....	Φ150xΦ16 .....	1
120	TS-2276081	Hex Socket Set Screw .....	M6x8 .....	1
121	HS1252-121	Cable for Limit Switch .....	2x0.75mm <sup>2</sup> .....	1

<b>Index No.</b>	<b>Part No.</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
122	HS1252-122	Cable for Magnetic Valve.....	6x0.5mm <sup>2</sup> 1.5m.....	1
123	HS1252-123	Power Cable (for 1PH).....	3x2.5mm <sup>2</sup> .....	1
	HS1252-123/3	Power Cable (for 3PH).....	4x1.5mm <sup>2</sup> .....	1
124	HS1252-124	Control Cable .....	6x0.5mm <sup>2</sup> 2.5m.....	1
125	HS1252-125	Strain Relief.....	M16x1.5.....	3
126	HS1252-126	Slave Relay.....	HH54P .....	2
127	HS1252-127	Transformer (for 1PH).....	.....	1
	HS1252-127/3	Transformer (for 3PH).....	.....	1
128	HS1252-128	Time Relay.....	JS14P 0.1-0.99S .....	1
129	HS1252-129	Breaker (for 1PH).....	DZ47-63 1P C5/2P C16.....	1
	HS1252-129/3	Breaker (for 3PH).....	DZ47-63 1P C5/3P C10.....	1
130	HS1252-130	A.C. Contactor (for 1PH).....	CU11 AC24V .....	1
	HS1252-130/3	A.C. Contactor (for 3PH).....	CN-6 AC24V .....	1
131	HS1252-131	Thermal Relay (for 1PH).....	RHN-10 17-8.5.....	1
	HS1252-131/3	Thermal Relay (for 3PH).....	RHN-5M 5.5-8.5.....	1
132	HS1252-132	Junction Terminal.....	UK3N 10A.....	1
200	HS1252-200	Hydraulic Station.....	.....	1
201	HS1252-201	Oil Tank.....	50L.....	1
202	HS1252-202	Oil Gauge.....	LS-50 .....	1
203	HS1252-203	Filter .....	JL-04 .....	1
204	HS1252-204	Filter Cap.....	JY-50 .....	1
205	HS1252-205	Cover.....	.....	1
206	TS-1482041	Hex Cap Screw .....	M6x20 .....	8
207	HS1252-207	Oil Return Hose.....	.....	2
208	HS1252-208	Regulating Valve.....	Y1 3/4-16UNF .....	1
209	HS1252-209	Block .....	.....	1
210	HS1252-210	Straight Fitting .....	M16x1.5.....	8
211	HS1252-211	Hydraulic Hose.....	Φ18x300mm .....	2
213	HS1252-213	Hydraulic Hose.....	Φ18x430mm .....	2
214	HS1252-214	T-Fitting .....	M16x1.5.....	2
215	HS1252-215	Hydraulic Hose.....	Φ18x930mm .....	2
216	HS1252-216	Socket Head Cap Screw .....	M5X100 .....	4
217	HS1252-217	Magnetic Valve.....	DSG-02-3C6 .....	1
218	HS1252-218	Hydraulic switch .....	.....	1
219	HS1252-219	Valve .....	D1 3/416UNF .....	1
220	HS1252-220	Hydraulic Pressure Gauge .....	.....	1
221	HS1252-221	Gauge Switch.....	.....	1
222	HS1252-222	Hydraulic Hose.....	.....	1
223	HS1252-223	Motor .....	2.2kW 1PH.....	1
	HS1252-223/3	Motor .....	2.2kW 3PH.....	1
224	TS-1490051	Hex Cap Screw .....	M8x30 .....	4
225	HS1252-225	Hydraulic Hose.....	.....	1
226	HS1252-210	Straight Fitting .....	M16x1.5.....	1
227	HS1252-227	Screw .....	M6x25 .....	8
228	HS1252-228	Connect Block .....	.....	2
229	HS1252-229	Hydraulic pump .....	RGP-2A-F11R .....	1
230	HS1252-230	Socket Head Cap Screw .....	M10x25 .....	4
231	HS1252-210	Straight Fitting .....	M16x1.5 .....	1
232	HS1252-232	Filter .....	.....	1
233	HS1252-233	Hex Bolt.....	M8x30 .....	4
234	TS-1505031	Socket Head Cap Screw .....	M10x25 .....	3
235	TS-1550071	Flat Washer.....	M10 .....	3
236	HS1252-236	Front Stop .....	.....	1
237	HS1252-237	Bevel Gauge .....	.....	1
238	HS1252-238	T-Nut .....	.....	3
239	HS1252-239	Plug .....	.....	2


## 12.1 Electrical Connections – single phase only (HS-1452)

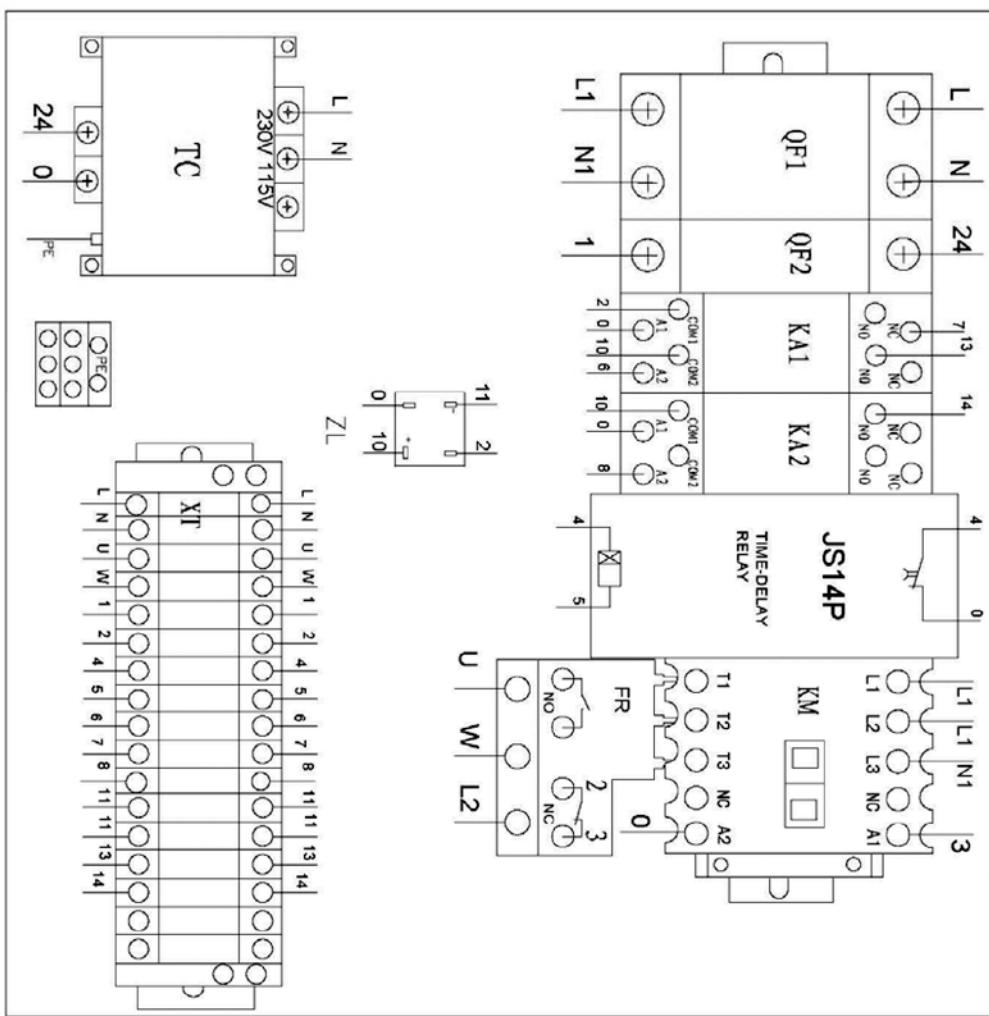


Electric parts of the  
setup disk

SQ1  
Cut finitude  
location


SQ2  
Up finitude  
location

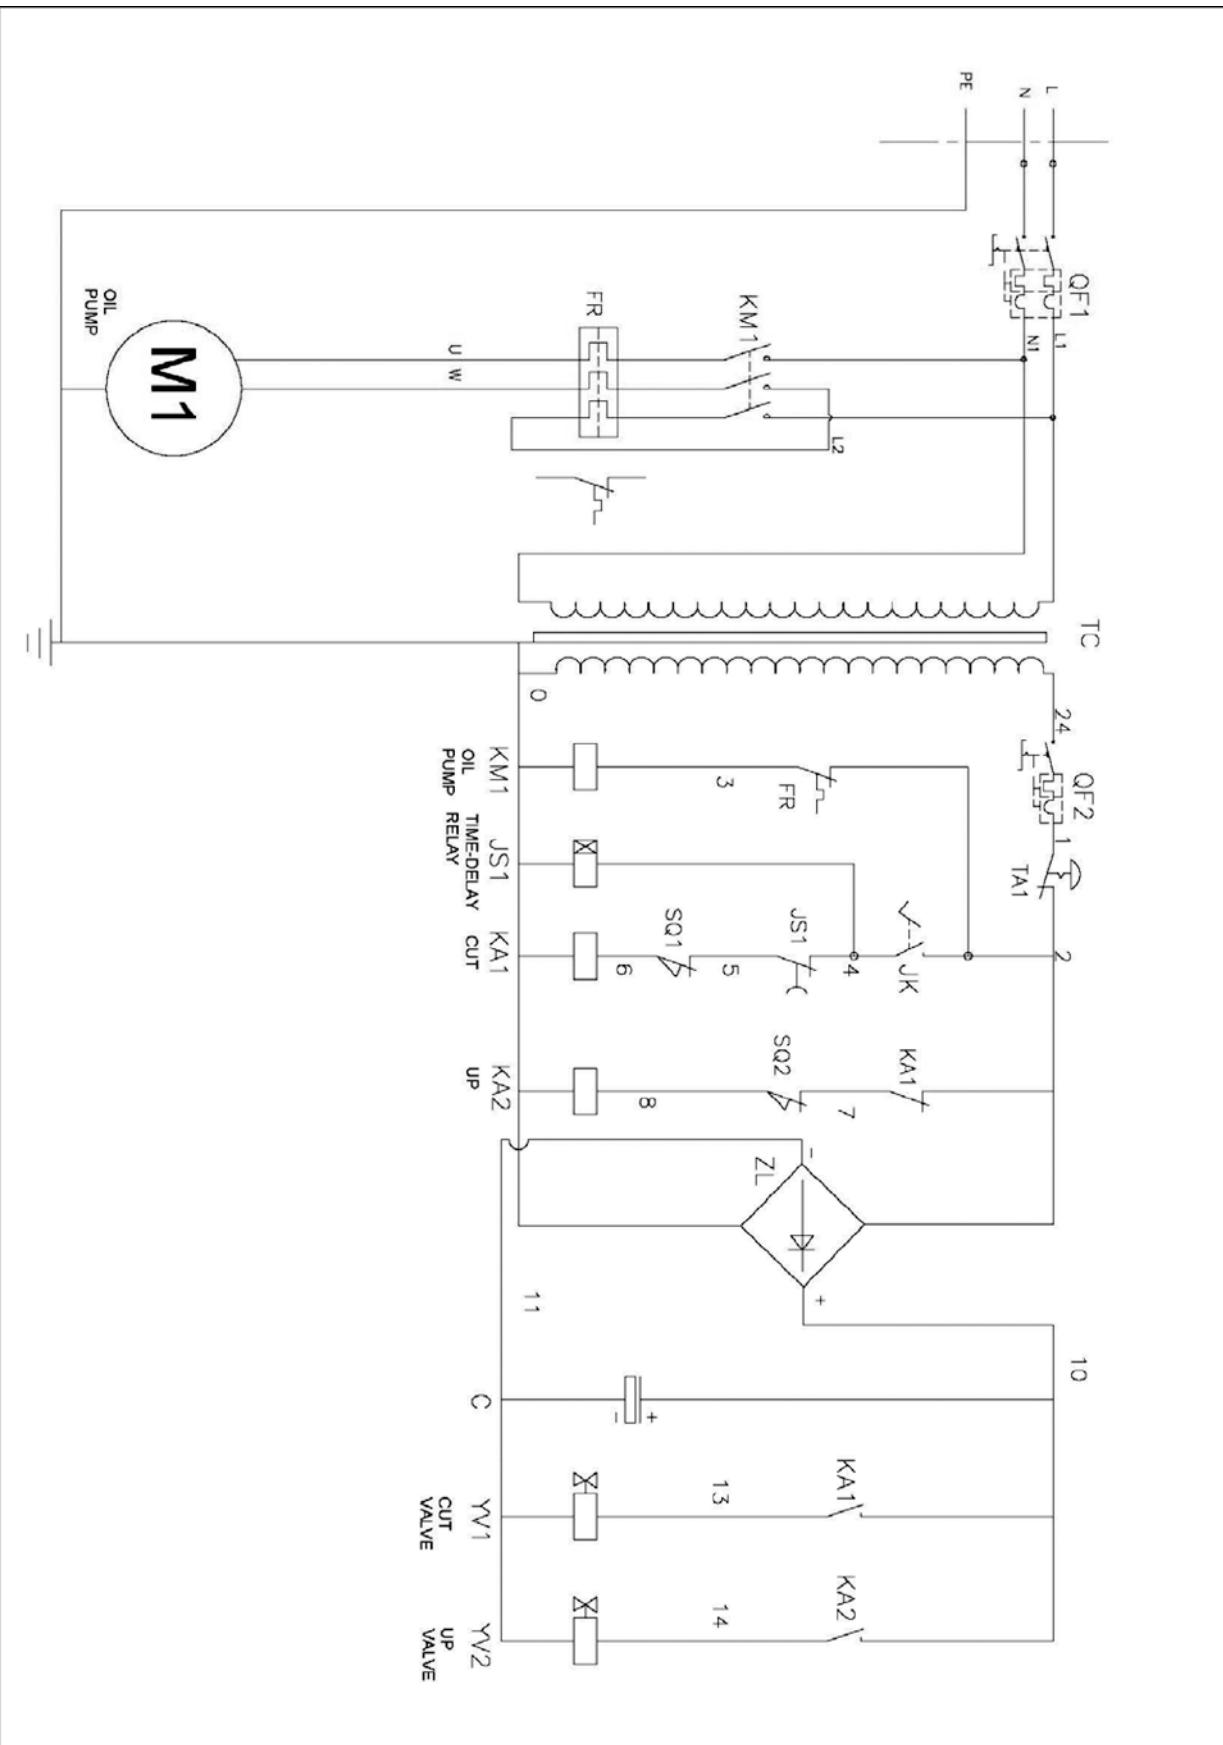


## 12.2 Electrical Connections – 3 phase only (HS-1452)

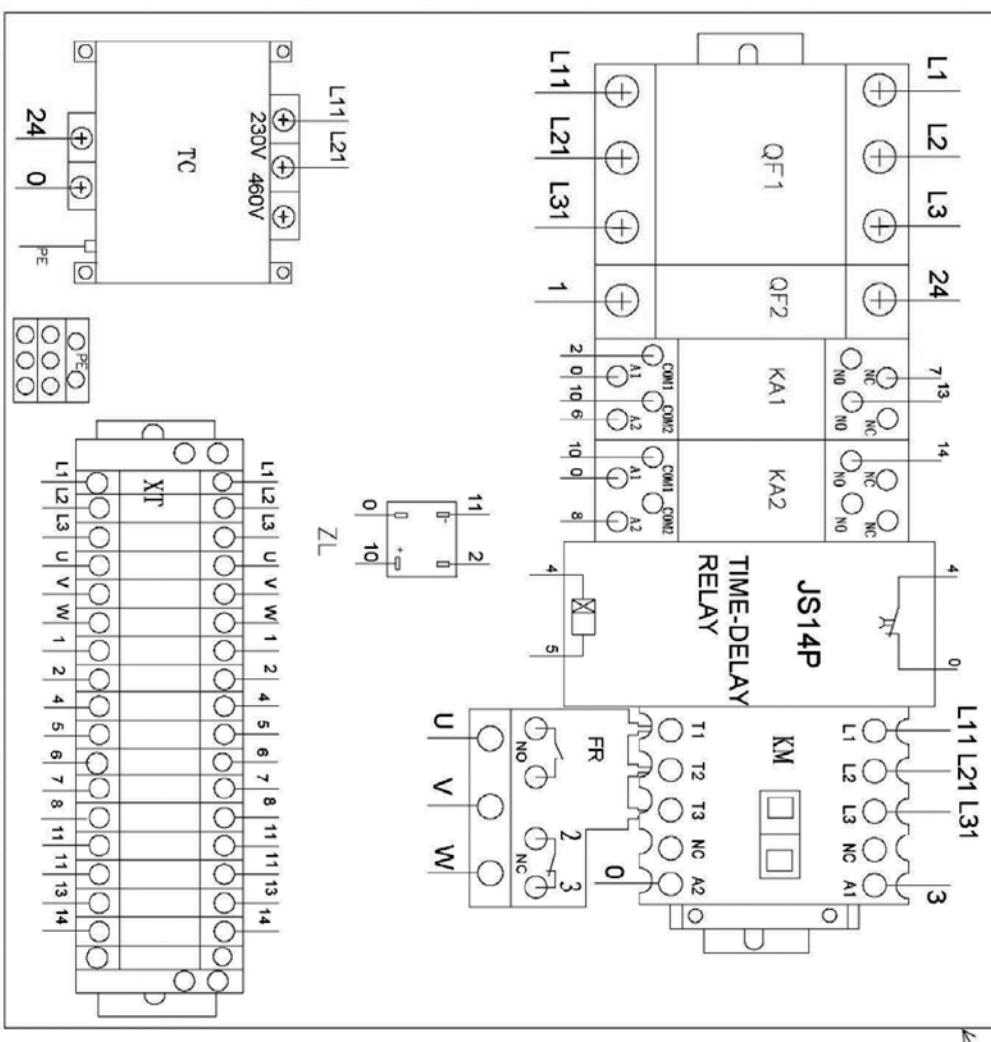


Electric parts of the  
setup disk

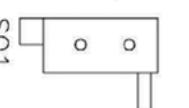



Cut finitude  
location

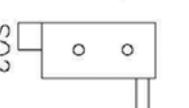


Up finitude  
location

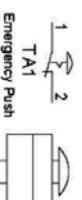


TA1  
Emergency Push  
Button Switch

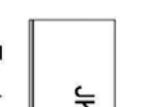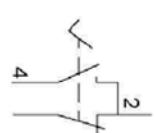

JK  
Foot switch

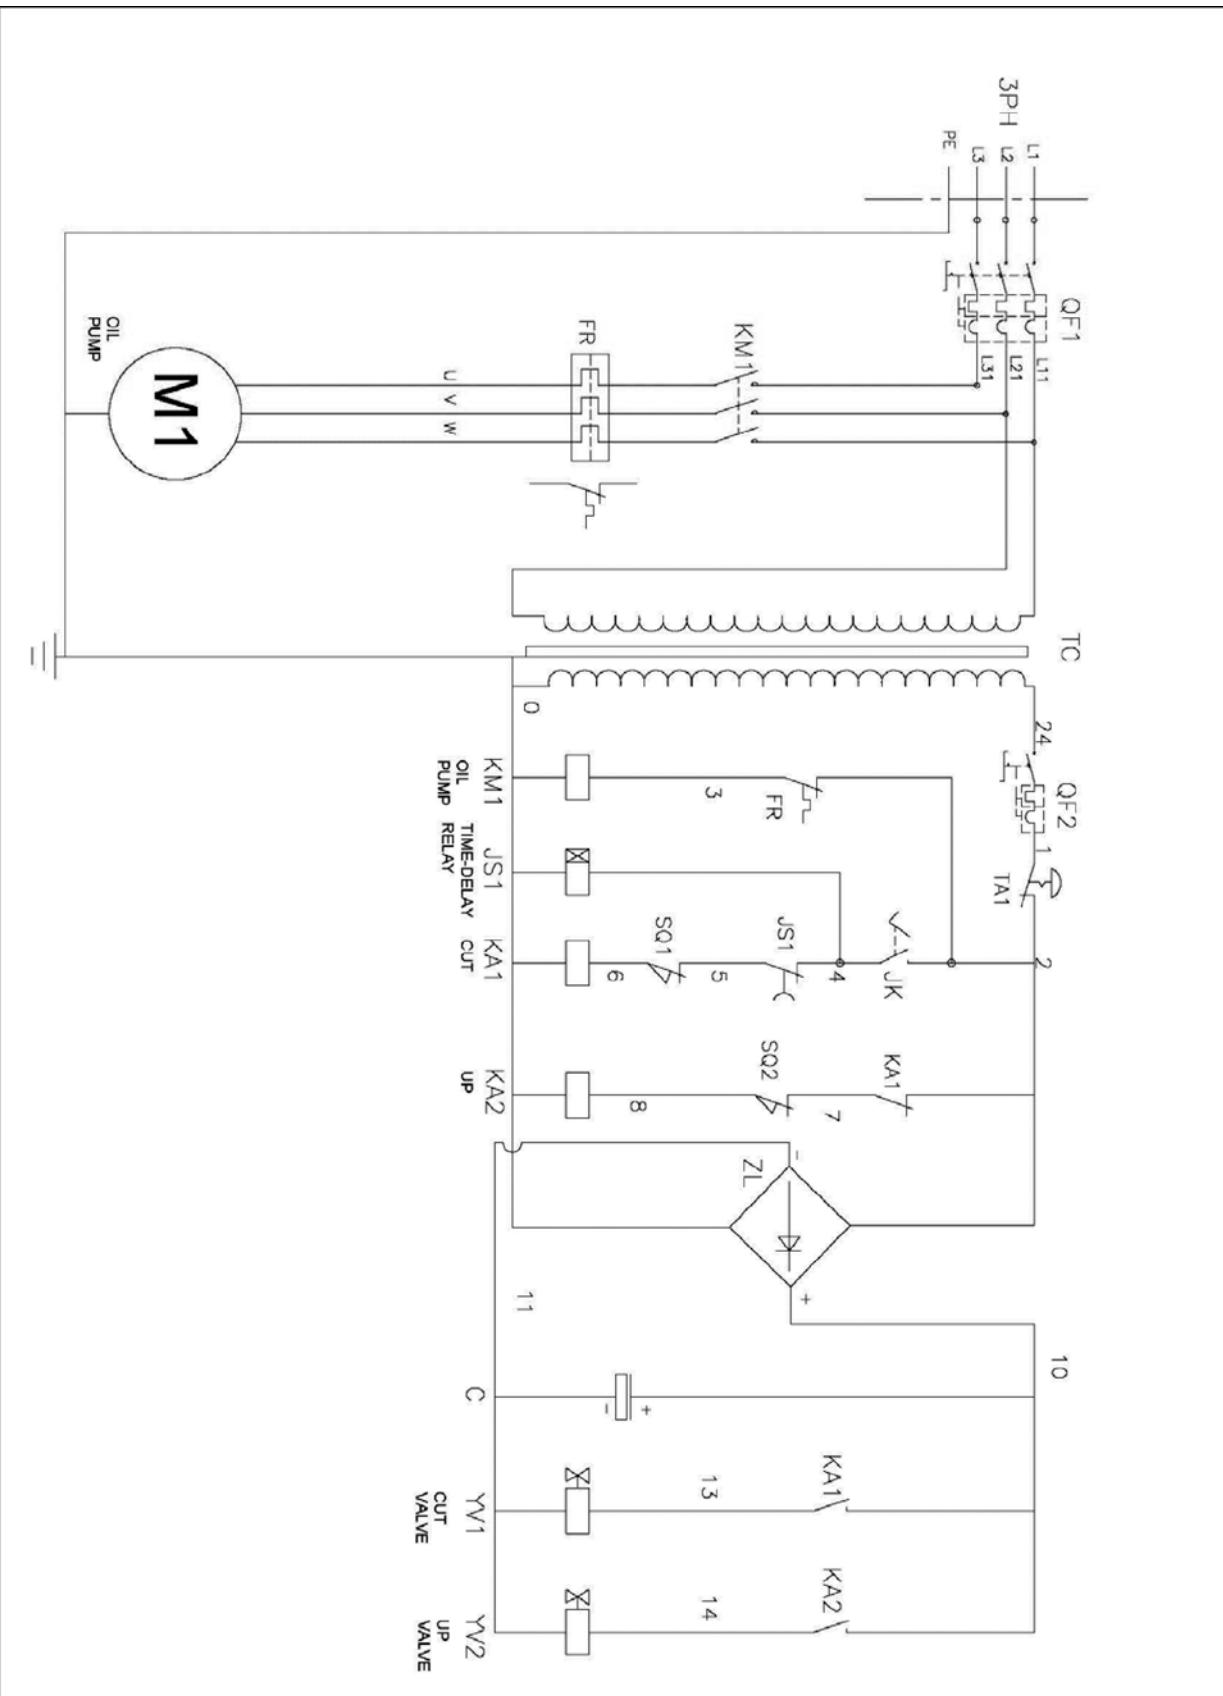

## 13.0 Hydraulic diagram (HS-1452)

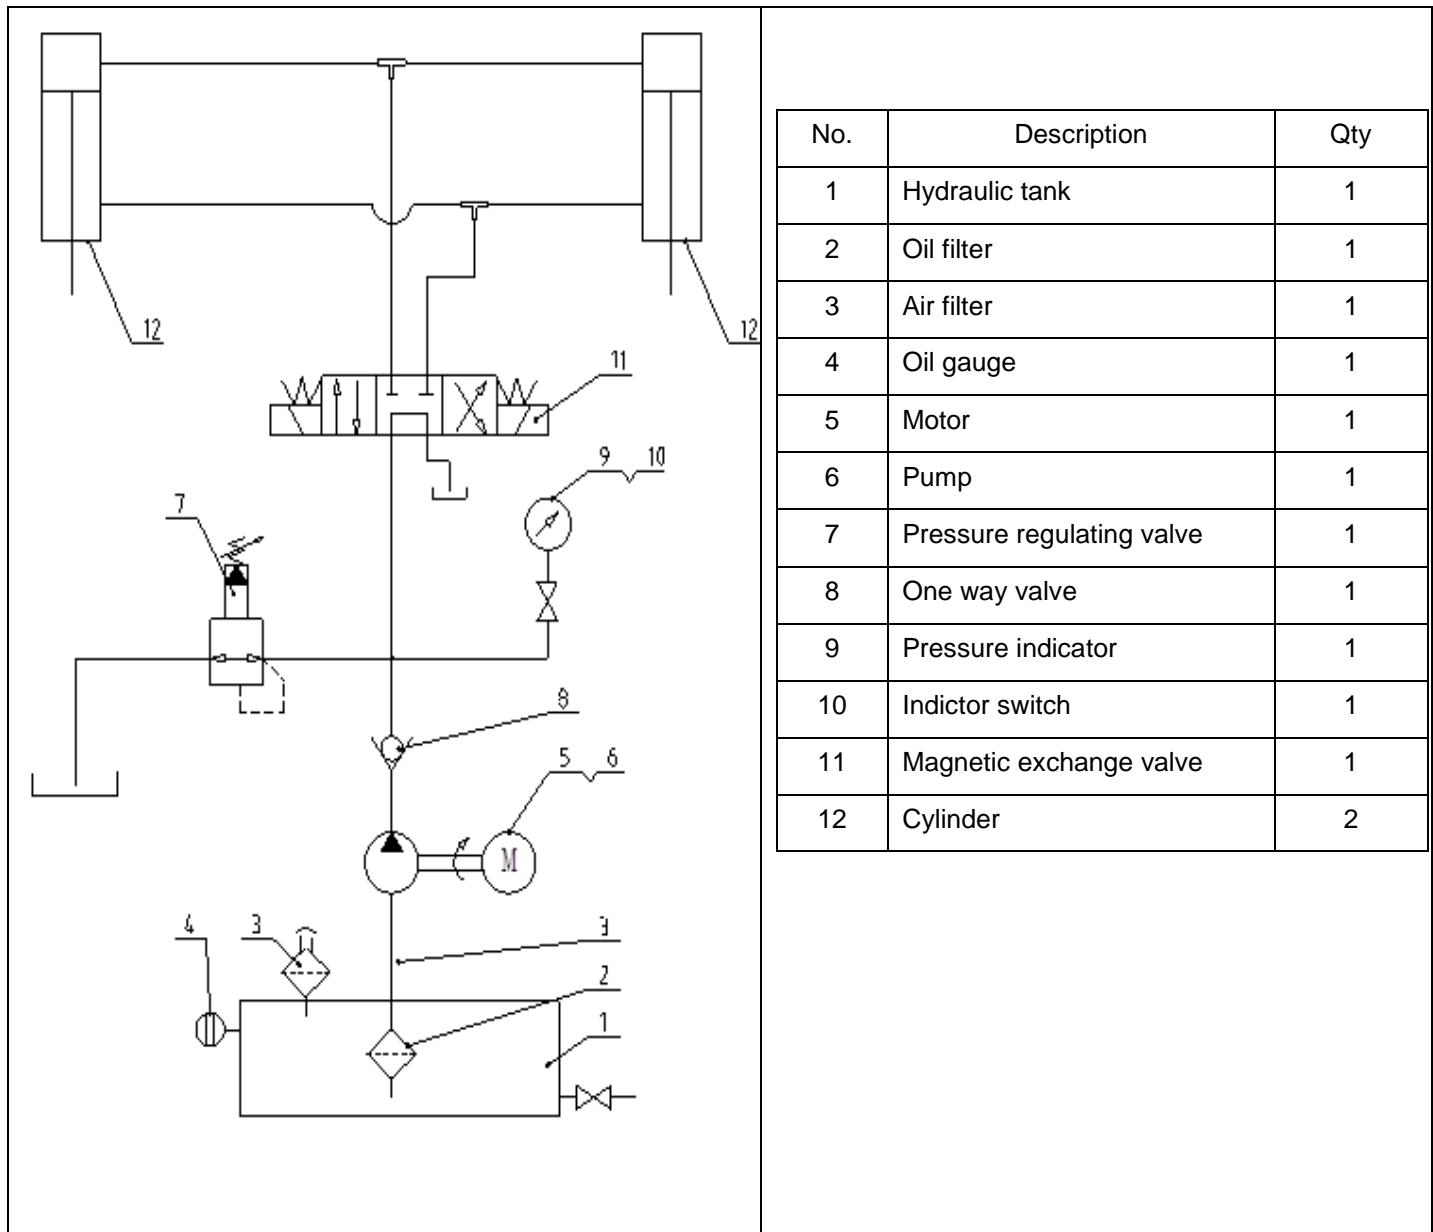

This page intentionally left blank



427 New Sanford Road  
LaVergne, Tennessee 37086  
Phone: 800-274-6848  
[www.jettools.com](http://www.jettools.com)