



Operating Instructions and Parts Manual

Lever Operated Chain Hoist

JLH Series



For JLH-80 serial no. 15070001H and higher
For JLH-100 serial no. 15070145H and higher
For JLH-160 serial no. 15070217H and higher

1 Ton model shown


JET
427 New Sanford Road
LaVergne, Tennessee 37086
Ph.: 800-274-6848
www.jettools.com

Part No. M-275050
Revision G 09/2015
Copyright © 2015 JET

Replacement Parts

Replacement parts are listed on the following pages. To order parts or reach our service department, call 1-800-274-6848, Monday through Friday (see our website for business hours, www.jettools.com). Having the Model Number and Serial Number of your machine available when you call will allow us to serve you quickly and accurately.

JLH Series Lever Hoists (JLH-80/100/160/250/320/630/900)

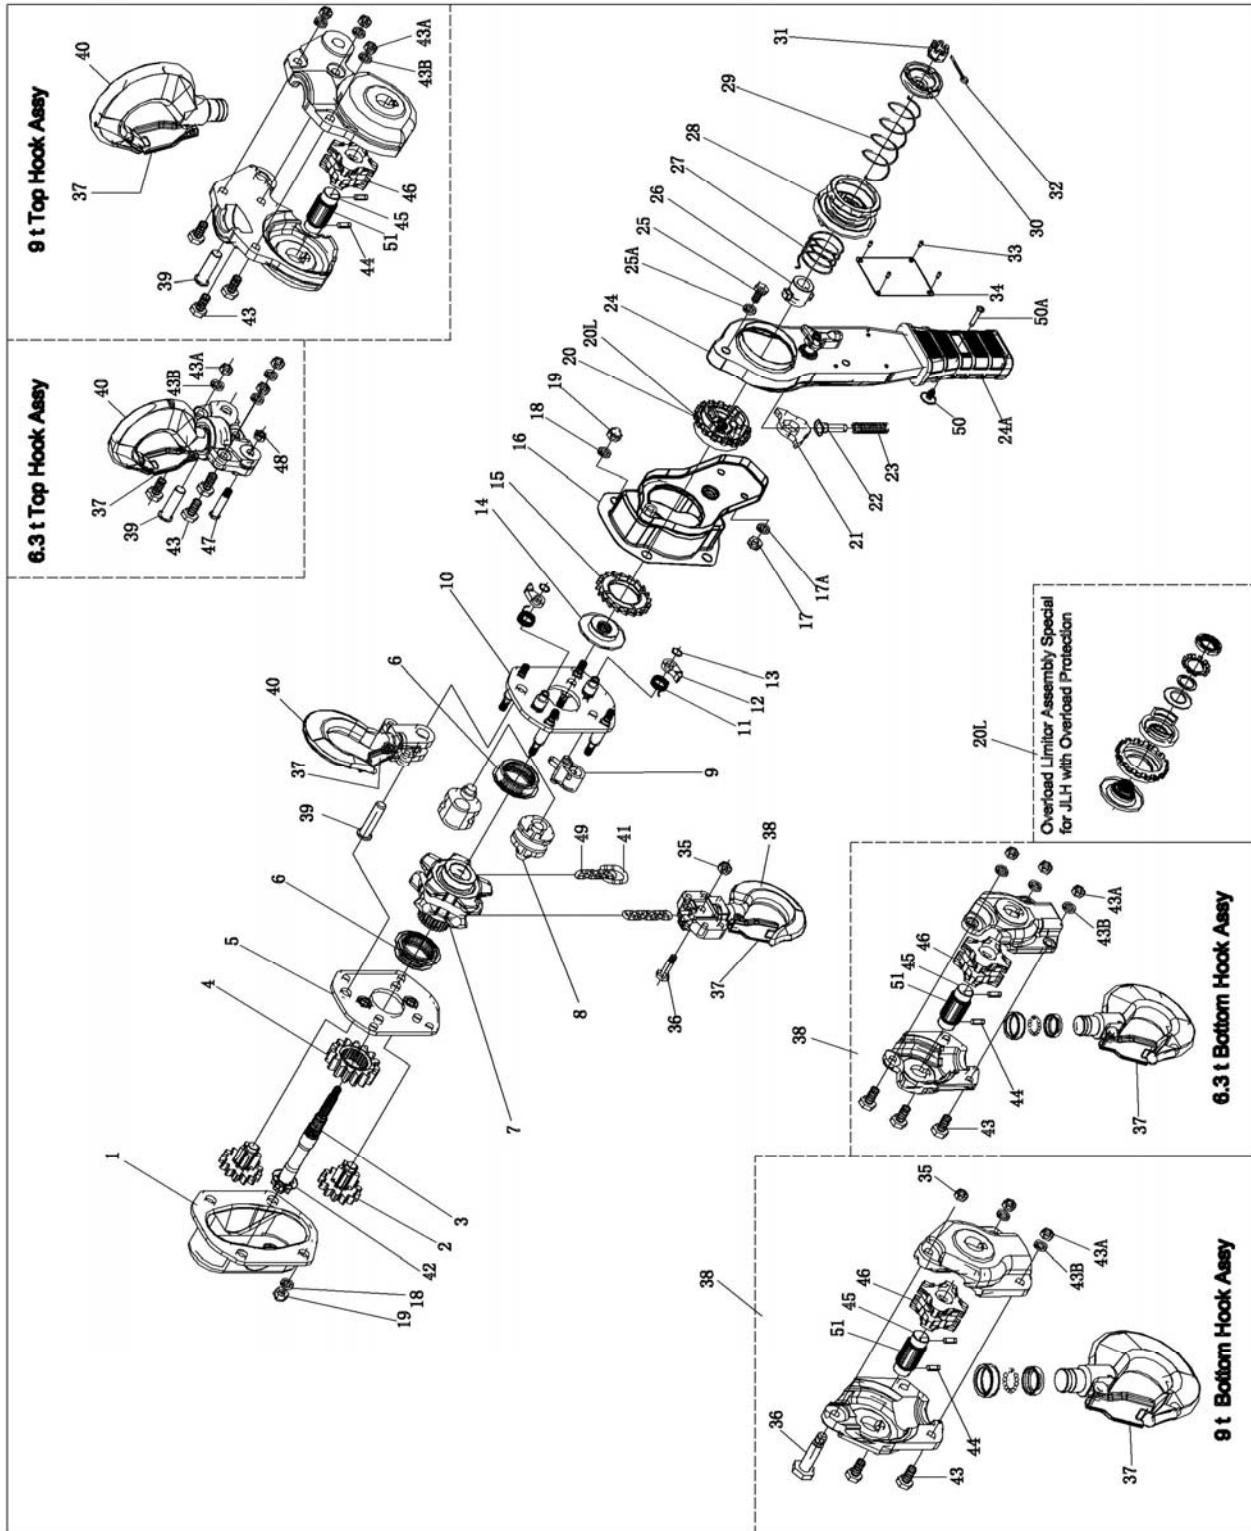

Parts List: JLH-900 (9 Ton)

Non-numbered parts listed under each assembly are parts that make up that assembly.

Index No.	Part No.	Description	Size	Qty
1	JLH320-1G	Gear Case Assembly (3.2, 6.3, 9 Ton)		1
		Gear Case		1
		Bushing		3
		Cover Plate		1
2	JLH320-2	Spur Gear Assembly (3.2, 6.3, 9 Ton)		2
		Spur Gear		2
		Pinion Gear		2
3	JLH320-3-1	Driving Shaft (3.2, 6.3, 9 Ton)		1
4	JLH320-4	Load Gear (3.2, 6.3 Ton)		1
5	JLH320-5	Gear Side Plate Assembly (3.2, 6.3, 9 Ton)		1
		Gear Side Plate		1
		Bushing		2
6	JLH320-6	Caged Roller Bearings (3.2, 6.3, 9 Ton)	Ø40xØ50x15mm	2
7	JLH320-7	Load Sheave (3.2, 6.3, 9 Ton)		1
8	JLH320-8	Guide Roller (3.2, 6.3, 9 Ton)		2
9	JLH320-9	Stripper (3.2, 6.3, 9 Ton)		1
10	JLH320-10	Lever Side Plate Assembly (3.2, 6.3, 9 Ton)		1
		Lever Side Plate		1
		Stay Bolt		4
		Pawl Pin		2
11	JLH320-11	Pawl Spring (3.2, 6.3, 9 Ton)		2
12	JLH320-12	Pawl (3.2, 6.3, 9 Ton)		2
13	JLH320-13	Snap Ring (3.2, 6.3, 9 Ton)	Ø 10mm	2
14	JLH320-14	Disc Hub (3.2, 6.3, 9 Ton)		1
15	JLH320-15	Ratchet Disc (3.2, 6.3, 9 Ton)		1
16	JLH320-16G	Brake Cover Assembly (3.2, 6.3, 9 Ton)		1
		Brake Cover		1
		Handle Case		1
		Bushing		1
		Thread Housing		1
17	JLH320-17G	Acorn Nut (3.2, 6.3, 9 Ton)	M8	2
17A	JLH320-17AG	Lock Washer (3.2, 6.3, 9 Ton)	8mm	2
18	JLH80-18G	Lock Washer (0.8 to 9 Ton)	8mm	8
19	JLH80-19G	Acorn Nut (0.8 to 9 Ton)	M8	8
20	JLH320-20-1	Change Over Gear (3.2, 6.3, 9 Ton)		1
20L	JLH900-20L-1	Overload Limiter Assembly (For JLH-900WO-10 only)		1
		Overload Limiting Plate		1
		Change Over Gear		1
		Pressure Plate		1
		Dish Spring		1
		Adjusting Nut	M22x1.25-7H	1
21	JLH320-21	Change Over Pawl (3.2, 6.3, 9 Ton)		1
22	JLH320-22	Spring Shaft (3.2, 6.3, 9 Ton)		1
23	JLH320-23	Spring (3.2, 6.3, 9 Ton)		1
24	JLH320-24G	Lever Handle Assembly (3.2, 6.3, 9 Ton)		1
		Lever Handle		1
		Selector Lever		1
		Change Over Shaft		1
		Bolt		2
		Spring Seat		1
		Bushing		1
24A	JLH320-24A	Rubber Grip (3.2, 6.3, 9 Ton)		1
25	F008785	Hex Cap Screw (2.5, 3.2, 6.3, 9 Ton)	M8 x 16	1
25A	JLH320-25AG	Lock Washer (2.5, 3.2, 6.3, 9 Ton)	8mm	1
26	JLH320-26-2	Cam (3.2, 6.3, 9 Ton)		1
27	JLH320-27	Twisting Spring I (3.2, 6.3, 9 Ton)		1
28	JLH320-28-1G	Hand Wheel (3.2, 6.3, 9 Ton)		1
28L	JLH320-28LG	Hand Wheel (3.2, 6.3, 9 Ton)		1
29	JLH320-29	Twisting Spring II (3.2, 6.3, 9 Ton)		1
30	JLH320-30G	Twisting Spring Housing (3.2, 6.3, 9 Ton)		1

Index No.	Part No.	Description	Size	Qty
31	F005922	Castle Nut.....	M10.....	1
32	JLH80-32	Split Pin (0.8 to 9 Ton).....	2 x 18mm.....	1
33	JLH80-33	Rivet (0.8 to 9 Ton).....	3 x 6mm.....	4
34	LM000047	Name Plate JLH-900		1
35	F001755	Lock Nut.....	M10.....	1
36	JLH900-35	Chain Pin		1
37	JLH900-37-1	Safety Latch Kit.....		2
		.. Safety Latch.....		2
		.. Double Spring.....		2
		.. Socket Cap Screw.....	M6 x 33.....	2
		.. Lock Nut.....	M6.....	2
38	JLH900-38-1	Bottom Hook Assembly (incls. 35 & 36)		1
		.. Bottom Hook.....		1
		.. Safety Latch.....		1
		.. Double Spring.....		1
		.. Socket Cap Screw.....	M6 x 33.....	1
		.. Lock Nut.....	M6.....	1
		.. Bottom Hook Holder		2
		.. Socket Cap Screw.....	M10 x 40.....	3
		.. Lock Nut.....	M10.....	3
		.. Straight Pin.....	Ø8 x 18mm	2
		.. Idle Shaft.....		1
		.. Idle Sheave.....		1
		.. Needle Bearing	Ø3 x 40mm	29
39	JLH320-39	Top Hook Shaft (3.2, 6.3, 9 Ton)		1
40	JLH900-40-1	Top Hook Assembly.....		1
		.. Top Hook.....		1
		.. Safety Latch.....		1
		.. Double Spring.....		1
		.. Socket Cap Screw.....	M6 x 33.....	1
		.. Lock Nut.....	M6.....	1
		.. Top Hook Holder		1
		.. Socket Cap Screw.....	M10x40	2
		.. Lock Nut.....	M10.....	2
		.. Straight Pin.....	Ø8 x 18mm	2
		.. Idle Shaft.....		1
		.. Idle Sheave.....		1
		.. Needle Bearing	Ø3 x 40mm	29
41	JLH320-41	Chain Stop (3.2, 6.3, 9 Ton)		1
42	JLH320-42	Drive Shaft Washer (3.2, 6.3, 9 Ton)		1
43	JLH630-43	Socket Cap Screw (<i>includes 43A nut, 43B washer</i>)	M10 x 30	5
44	JLH630-44	Straight Pin	Ø8 x 18	2
45	JLH630-45	Idle Shaft (6.3, 9 Ton)		1
46	JLH630-46	Idle Sheave (6.3, 9 Ton)		1
49	JLH320-49	Load Chain (3.2, 6.3, 9 Ton) – <i>specify length</i>	#100, Ø10 x 28mm	3
50	JLH320-50	Rubber Grip Fastening (3.2, 6.3, 9 Ton)		1
50A	JLH320-50A	Fastening Screw (3.2, 6.3, 9 Ton)		1
51	JLH900-51	Needle Bearing		2x29
	JLH-7040WL	Warning Label (not shown)	70x40mm	1
	L100-WT	Warning Tag (not shown)		1

Note: Top and bottom hooks are sold as an assembly only.

When ordering replacement chain (#49), specify length.