




## Assembly Instructions & Parts List #708127 JRBG-14 Roller Bearing Guide Set

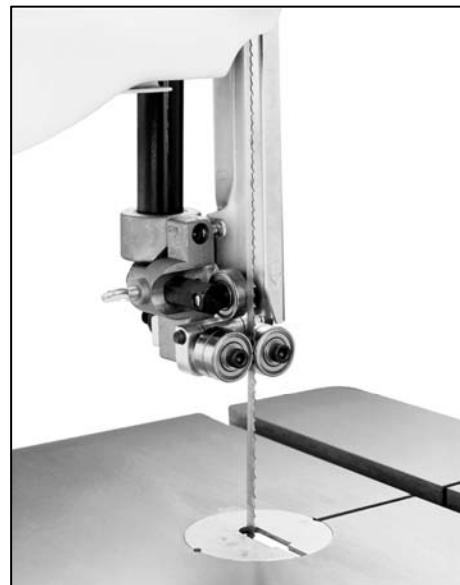

### Pre-Assembly

1. Disconnect the saw from the power source, unplug.
2. It is easier to install the new guides if you remove the band saw's table.
3. Remove the circular *table insert* found on the top of the table, and also the *table pin* found on the side of the table. The table can be removed by unscrewing the *lock knobs* found below the table trunnion.
4. Remove the existing *blade guides*.

### Upper Bearing Guide

Referring to Figure 1:

1. Fit the *upper bearing guide* onto the *guide post* and tighten the hex cap screw.

**Note:** Model JWBS-14OS Band Saw requires *bushing* (Part No. 150214) shown in G, Fig. 2.

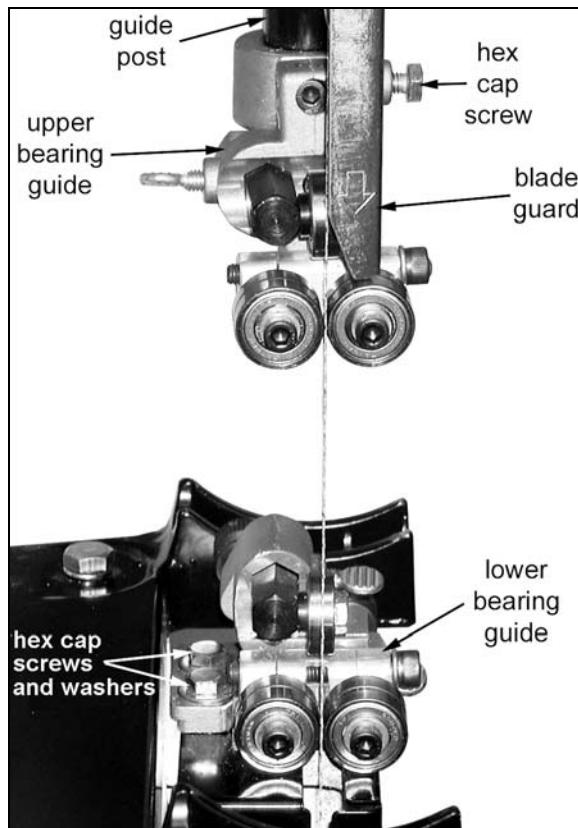


Figure 1


**JET**

427 New Sanford Road  
LaVergne, Tennessee 37086  
Ph.: 800-274-6848  
[www.jetools.com](http://www.jetools.com)

**Part No. M-708127**  
Revision C1 05/2014  
Copyright © 2014 JET, a Division of JPW Industries, Inc.


## Parts List for #708127, JRBG-14

### Upper Support and Blade Guide Assembly

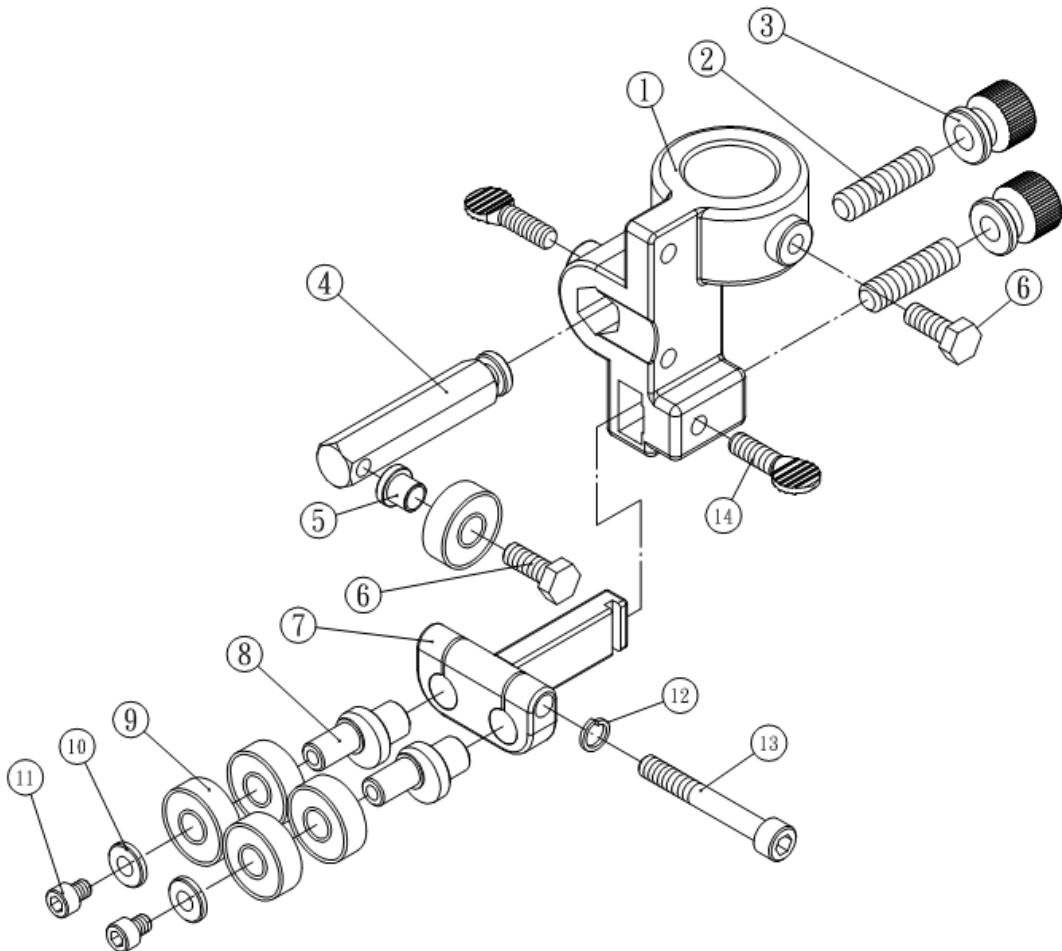

| Index No | Part No           | Description  | Size    | Qty |
|----------|-------------------|--|---------|-----|
|          | JWBS14DP-4.....   | Upper Support & Blade Guide Assembly (#1-14) ..... |         | 1   |
| 1.....   | PWBS14-226.....   | Upper Support Bracket .....                        |         | 1   |
| 2.....   | JWBS14DP-4-3..... | Socket Set Screw .....                             | M8x35   | 2   |
| 3.....   | 150010A .....     | Adjusting Nut .....                                |         | 2   |
| 4.....   | PWBS14-230.....   | Spacing Sleeve .....                               |         | 1   |
| 5.....   | PWBS14-231.....   | Bearing Sheath .....                               |         | 1   |
| 6.....   | TS-1482041 .....  | Hex Cap Screw .....                                | M6x20   | 2   |
| 7.....   | PWBS14-239 .....  | Support Bracket .....                              |         | 1   |
| 8.....   | PWBS14-240 .....  | Eccentric Shaft .....                              |         | 2   |
| 9.....   | BB-608ZZ .....    | Ball Bearing .....                                 | 608ZZ   | 5   |
| 10.....  | TS-1550031 .....  | Flat Washer .....                                  | M5..... | 2   |
| 11.....  | TS-1502031 .....  | Socket Head Cap Screw .....                        | M5x12   | 2   |
| 12.....  | TS-2361051 .....  | Lock Washer .....                                  | M5..... | 1   |
| 13.....  | TS-1502091 .....  | Socket Head Cap Screw .....                        | M5x40   | 1   |
| 14.....  | 150013A .....     | Thumb Screw .....                                  | M6x16   | 2   |

## Lower Support and Blade Guide Assembly

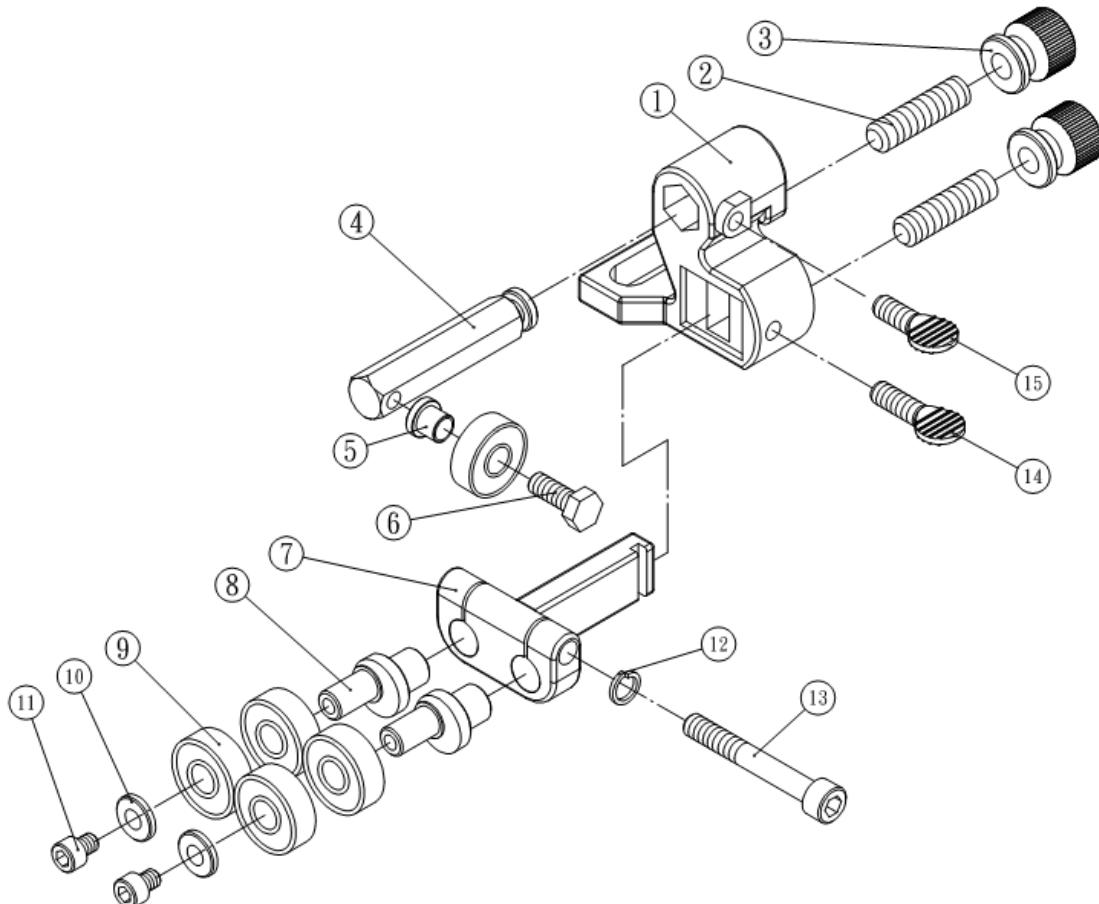

| Index No | Part No      | Description                                  | Size  | Qty |
|----------|--------------|--|-------|-----|
|          | JWBS14DP-5   | Lower Support & Blade Guide Assembly (#1-15) |       | 1   |
| 1        | PWBS14-241   | Lower Support Bracket                        |       | 1   |
| 2        | JWBS14DP-4-3 | Socket Set Screw                             | M8x35 | 2   |
| 3        | 150010A      | Adjusting Nut                                |       | 2   |
| 4        | PWBS14-230   | Spacing Sleeve                               |       | 1   |
| 5        | PWBS14-231   | Bearing Sheath                               |       | 1   |
| 6        | TS-1482041   | Hex Cap Screw                                | M6x20 | 1   |
| 7        | PWBS14-239   | Support Bracket                              |       | 1   |
| 8        | PWBS14-240   | Eccentric Shaft                              |       | 2   |
| 9        | BB-608ZZ     | Ball Bearing                                 | 608ZZ | 5   |
| 10       | TS-1550031   | Flat Washer                                  | M5    | 2   |
| 11       | TS-1502031   | Socket Head Cap Screw                        | M5x12 | 2   |
| 12       | TS-2361051   | Lock Washer                                  | M5    | 1   |
| 13       | TS-1502091   | Socket Head Cap Screw                        | M5x40 | 1   |
| 14       | 150013A      | Thumb Screw                                  | M6x16 | 1   |
| 15       | 150014A      | Thumb Screw                                  | M6x12 | 1   |

To order parts or reach our service department, call 1-800-274-6848 Monday through Friday (see our website for business hours, [www.jettools.com](http://www.jettools.com)).