



# Operating Instructions and Parts Manual

## Toe Jack


Models JTJ-2ST, JTJ-5ST and JTJ-10ST



(5-Ton model shown)

**JET**  
427 New Sanford Road  
LaVergne, Tennessee 37086  
Ph.: 800-274-6848  
[www.jettools.com](http://www.jettools.com)

**Part No. M-454502**  
Revision A1 05/2014  
Copyright © 2014 JET

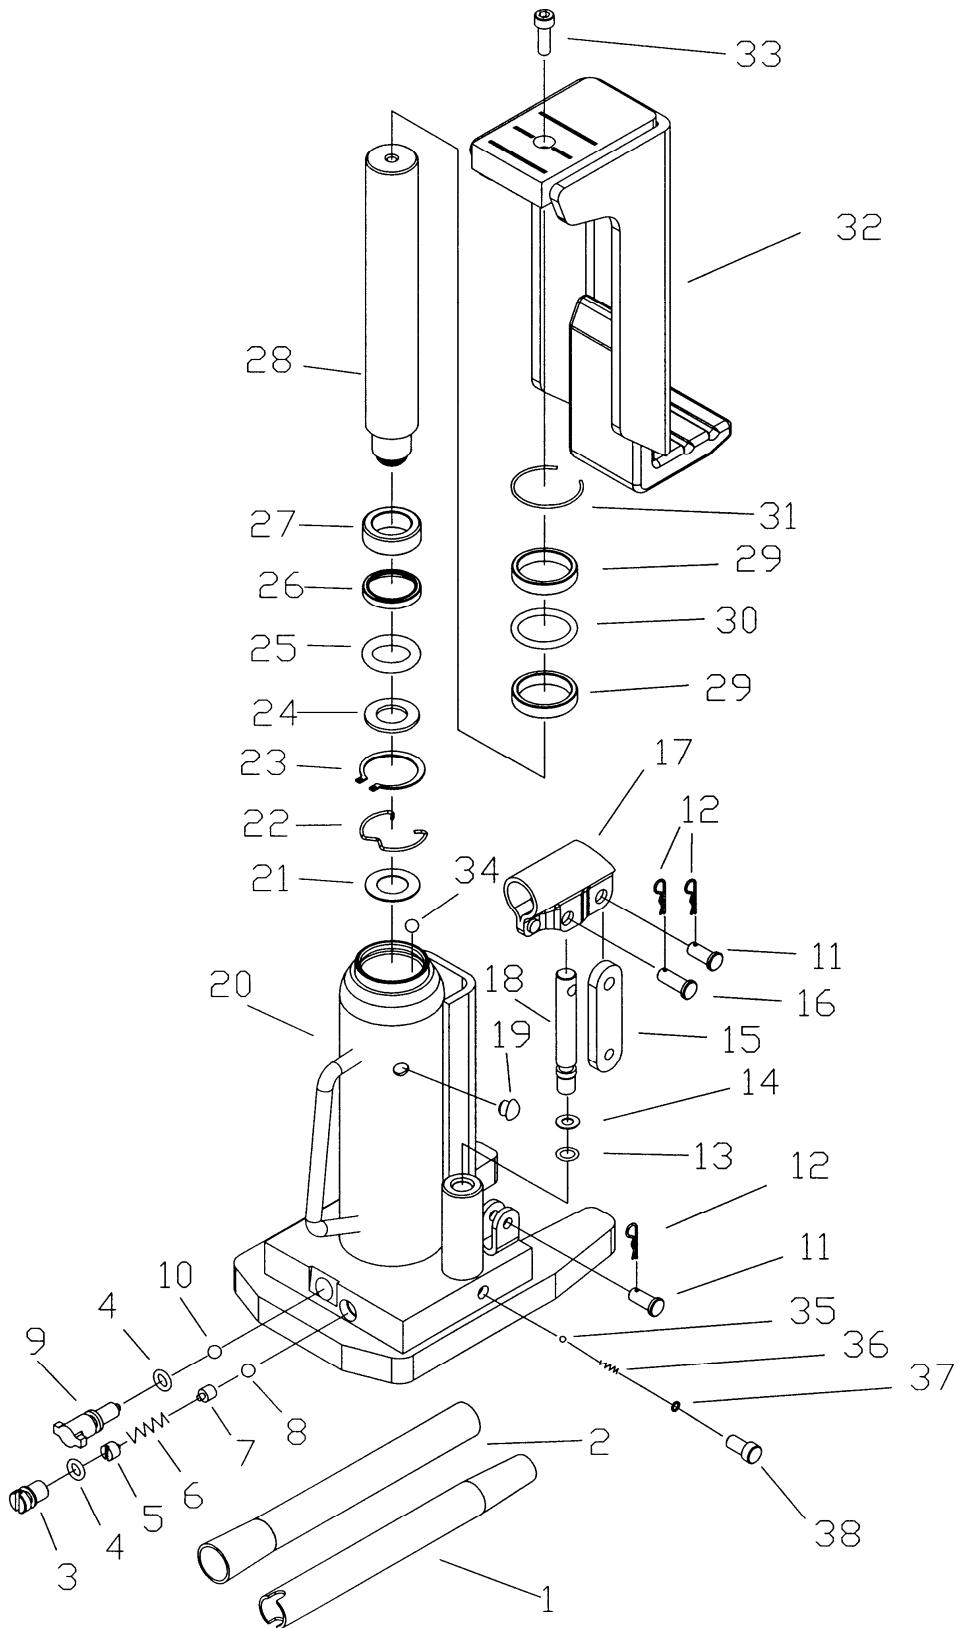

## Parts List for JTJ-2ST 2-Ton Toe Jack

<b>Index No.</b>	<b>Part No.</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
1	JTJ2ST-01	Rear Handle.....		1
2	JTJ2ST-02	Front Handle.....		1
3	JTJ2ST-03	Sealing Bolt.....		1
4	JTJ10ST-03	O-Ring .....	7.1x2.65mm	2
5	JTJ2ST-05	Adjusting Screw .....		1
6	JTJ2ST-06	Safety Valve Spring .....		1
7	JTJ2ST-07	Ball Seat .....		1
8	SB-4MM	Steel Ball.....	4mm	1
9	JTJ2ST-09	Release Stem .....		1
10	SB-6MM	Steel Ball.....	6mm	1
11	JTJ2ST-11	Pin.....		2
12	JTJ2ST-12	Pin.....		3
13	JTJ2ST-13	O-Ring .....	6.7x1.8mm	1
14	JTJ2ST-14	Nylon Gasket .....		1
15	JTJ2ST-15	Rod Joint.....		1
16	JTJ2ST-16	Pin.....		1
17	JTJ2ST-17	Handle Socket .....		1
18	JTJ2ST-18	Pump Plunger .....		1
19	JTJ2ST-19	Oil Fill Plug.....		1
20	JTJ2ST-20	Body.....		1
21	JTJ2ST-21	Washer .....		1
22	JTJ2ST-22	Snap Ring .....		1
23	JTJ2ST-23	Snap Ring .....	16mm	1
24	JTJ2ST-24	Washer .....		1
25	JTJ2ST-25	O-Ring .....	19.5x5.3mm	1
26	JTJ2ST-26	Sealing Washer .....		1
27	JTJ2ST-27	Piston Ring .....		1
28	JTJ2ST-28	Ram .....		1
29	JTJ2ST-29	Bushing.....		2
30	JTJ2ST-30	O-Ring .....	26.4x3.6mm	1
31	JTJ2ST-31	Snap Ring .....		1
32	JTJ2ST-32	Toe.....		1
33	TS-1503041	Socket Head Cap Screw.....	M6x16	1
34	SB-5MM	Steel Ball.....	5mm	1
35	SB-5MM	Steel Ball.....	5mm	1
36	JTJ2ST-36	Spring .....		1
37	JTJ2ST-37	Washer .....		1
38	JTJ2ST-38	Screw.....		1
	JTJ2ST-ID	ID Label (not shown).....		1



427 New Sanford Road  
LaVergne, Tennessee 37086  
Phone: 800-274-6848  
[www.jettools.com](http://www.jettools.com)