



Operating Instructions and Parts Manual

8-inch Bench Grinder

Model JWBG-8




Model 726100 shown

For models with serial no. 15100001 and higher.

JET
427 New Sanford Road
LaVergne, Tennessee 37086
Ph.: 800-274-6848
www.jettools.com

Part No. M-726100
Revision C 07/2015
ECR TW0137
Copyright © 2015 JET

13.1.1 JWBG-8 Bench Grinder – Exploded View

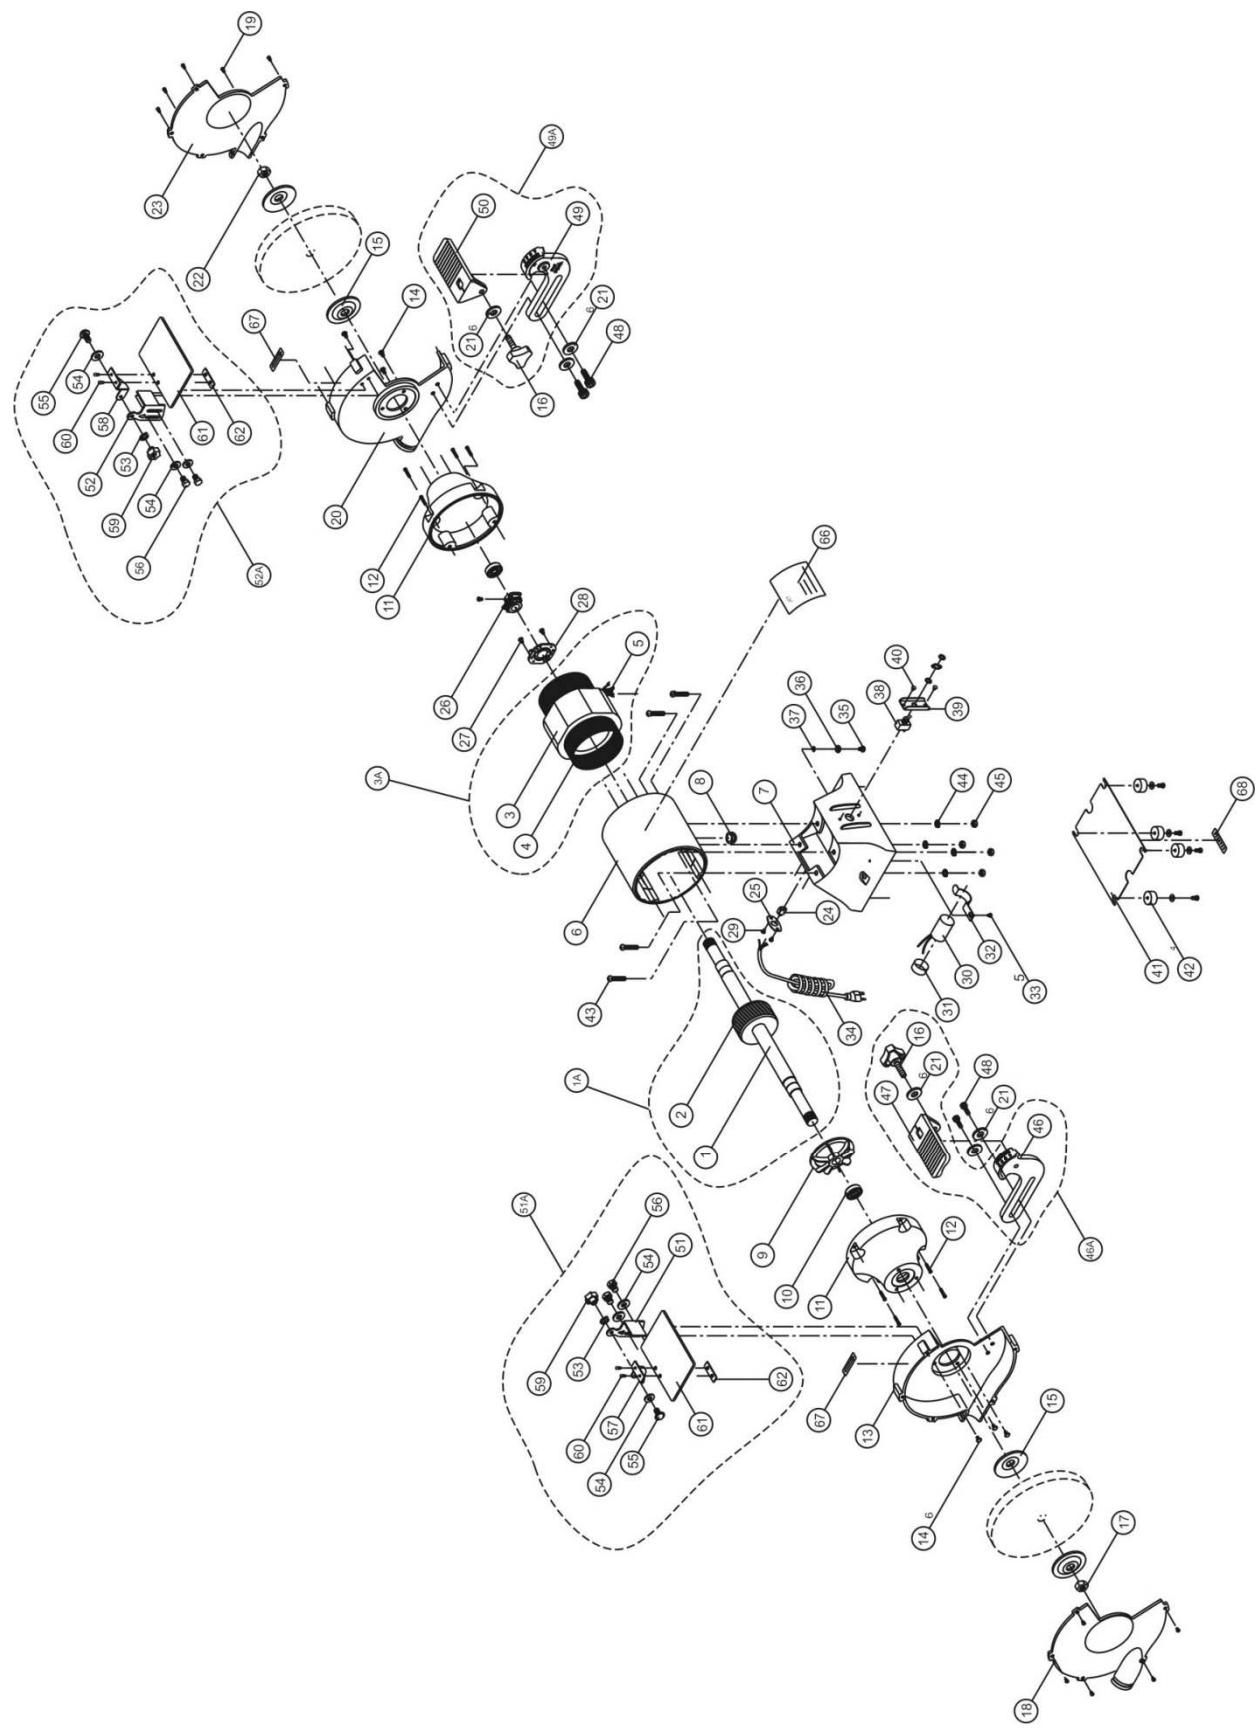

13.1.2 JWBG-8 Bench Grinder – Parts List

| Index No | Part No | Description | Size | Qty |
|-----------------|----------------|--|-----------------|------------|
| 1A | JWBG8-01A | Rotor Assembly | | 1 |
| 1 | JWBG8-01 | Arbor (RE: JWBG8-01A) | | 1 |
| 2 | JWBG8-02 | Rotor (RE: JWBG8-01A) | | 1 |
| 3A | JWBG8-03A | Stator Assembly..... | | 1 |
| 3 | JWBG8-03 | Stator (RE: JWBG8-03A) | | 1 |
| 4 | JWBG8-04 | Coil (RE: JWBG8-03A)..... | | 1 |
| 5 | JWBG8-05 | Export Wire (RE: JWBG8-03A) | | 1 |
| 6 | JBG8A-05W | Motor Housing | | 1 |
| 7 | JBG8A-06W | Base..... | | 1 |
| 8 | JWBG8-08 | Bushing..... | 16 x 1mm | 1 |
| 9 | JBG8A-10 | Fan..... | | 1 |
| 10 | BB-6204ZZ | Ball Bearing | 6204ZZ | 2 |
| 11 | JBG8A-12W | Cover | | 2 |
| 12 | JBG6A-15 | Screw..... | 3/16 x 5/8. | 8 |
| 13 | JBG8A-16B | Inner Wheel Guard – left (serial # 15100001 and higher)..... | | 1 |
| 14 | JBG8A-19 | Cross Head Screw..... | 1/4 x 1/2 | 6 |
| 15 | JWBG8-15 | Wheel Flange..... | 5/8 I.D. | 4 |
| 16 | JWBG8-16 | Triangle Knob | 5/16 x 1-1/4 | 2 |
| 17 | JBG8A-22 | Nut - left hand thread | 5/8..... | 1 |
| 18 | JBG8A-24P | Outer Wheel Guard – left..... | | 1 |
| 19 | JBG8A-19 | Cross Head Screw..... | 1/4 x 1/2 | 10 |
| 20 | JBG8A-17B | Inner Wheel Guard – right (serial # 15100001 and higher) | | 1 |
| 21 | TS-0680031 | Flat Washer | 5/16..... | 6 |
| 22 | JBG8A-23 | Nut – right hand thread | 5/8..... | 1 |
| 23 | JBG8A-25P | Outer Wheel Guard – right..... | | 1 |
| 24 | JBG8A-31 | Rubber Guide | | 1 |
| 25 | JBG8A-32 | Cord Plate..... | | 1 |
| 26 | JWBG8-26 | Centrifugal Start Switch..... | | 1 |
| 27 | JWBG8-27 | Cross Head Screw..... | 3/16 x 3/8 | 2 |
| 28 | JWBG8-28 | Switch Seat..... | | 1 |
| 29 | JBG6A-34 | Cross Screw | 3/16 x 1/4 | 2 |
| 30 | JBG8A-35 | Capacitor | 125 VAC, 200MFD | 1 |
| 31 | JWBG8-31 | Capacitor Cover..... | | 1 |
| 32 | JBG8A-36 | Bracket..... | | 1 |
| 33 | JBG6A-34 | Screw..... | 3/16 x 1/4 | 1 |
| 34 | JBG8A-39 | Power Cord..... | | 1 |
| 35 | JBG6A-34 | Cross Head Screw | 3/16 x 1/4 | 1 |
| 36 | JWBG8-36 | Copper Washer..... | M5..... | 1 |
| 37 | JMS10SCMS-36 | External Tooth Lock Washer | M5..... | 1 |
| 38 | JBG8A-44 | Switch | | 1 |
| 39 | JBG8A-45 | Switch Plate | | 1 |
| 40 | JBG6A-34 | Screw..... | 3/16 x 1/4 | 2 |
| 41 | JBG8A-47 | Base Plate | | 1 |
| 42 | JWBG8-42 | Rubber Foot w/Screw | | 4 |
| 43 | JWBG8-43 | Screw..... | 1/4 x 7/8 | 4 |
| 44 | TS-0720071 | Lock Washer..... | 1/4 | 4 |
| 45 | TS-0570011 | Hex Nut..... | 1/4..... | 4 |
| 46A | JWBG8-46A | Tool Rest Assembly – left..... | | 1 |
| 46 | JWBG8-46 | Tool Rest Bracket – left | | 1 |
| 47 | JWBG8-47 | Tool Rest – left..... | | 1 |
| 48 | TS-0208041 | Socket Head Cap Screw..... | 5/16 x 3/4 | 4 |
| 49A | JWBG8-49A | Tool Rest Assembly – right..... | | 1 |
| 49 | JWBG8-49 | Tool Rest Bracket – right | | 1 |
| 50 | JWBG8-50 | Tool Rest – right | | 1 |
| 51A | JWBG8-51A | Eye Shield Assembly – left..... | | 1 |
| 51 | JBG8A-50 | Eye Shield Fixture (Spark Guard) – left..... | | 1 |
| 52A | JWBG8-52A | Eye Shield Assembly - right..... | | 1 |
| 52 | JBG8A-51 | Eye Shield Fixture (Spark Guard) – right..... | | 1 |
| 53 | TS-0720071 | Lock Washer..... | 1/4..... | 2 |
| 54 | TS-0680021 | Flat Washer | 1/4..... | 6 |

| Index No | Part No | Description | Size | Qty |
|-----------------|----------------|---|------------------|------------|
| 55 | JBG8A-54..... | Cross Head Screw..... | 1/4 x 1/2 | 2 |
| 56 | 6295480 | Hex Head Screw..... | 1/4 x 3/8 | 4 |
| 57 | JBG8A-55..... | Eye Shield Bracket – left..... | | 1 |
| 58 | JBG8A-56..... | Eye Shield Bracket – right | | 1 |
| 59 | JBG6A-57..... | Lock Knob..... | 1/4 | 2 |
| 60 | JBG6A-58..... | Cross Head Screw..... | 3/16 x 3/8 | 4 |
| 61 | JBG8A-59..... | Eye Shield | | 2 |
| 62 | JBG6A-60..... | Eye Shield Fixed Plate..... | | 2 |
| 66 | JWBG8-66..... | I.D. Label | | 1 |
| 67 | JBG6A-63..... | Direction Label..... | | 1 |
| 68 | | Serial Number Label..... | | 1 |
| | | Grinding Wheels (local purchase)* | | 2 |

Note: Some parts may be shown for reference only, not available individually but as part of an assembly.

* The grinding wheels provided with the 726100 may be purchased from Norton Industrial or a local dealer. Refer to the following codes when ordering:

UPC # 07660788282 Aluminum Oxide General Purpose (White), 8", 100 Grit

UPC # 07660705422 Norton 3X High Performance (Blue), 8", 80 Grit



427 New Sanford Road
LaVergne, Tennessee 37086
Phone: 800-274-6848
www.jettools.com