



# Operating Instructions and Parts Manual

## 15-inch Thickness Planer

Models JWP-15DX and JWP-15HH




**JET**

427 New Sanford Road  
LaVergne, Tennessee 37086  
Ph.: 800-274-6848  
[www.jettools.com](http://www.jettools.com)

**Part No. M-708538**  
Revision D 08/2014  
Copyright © 2014 JET


### 12.1.1 Base Assembly – Exploded View

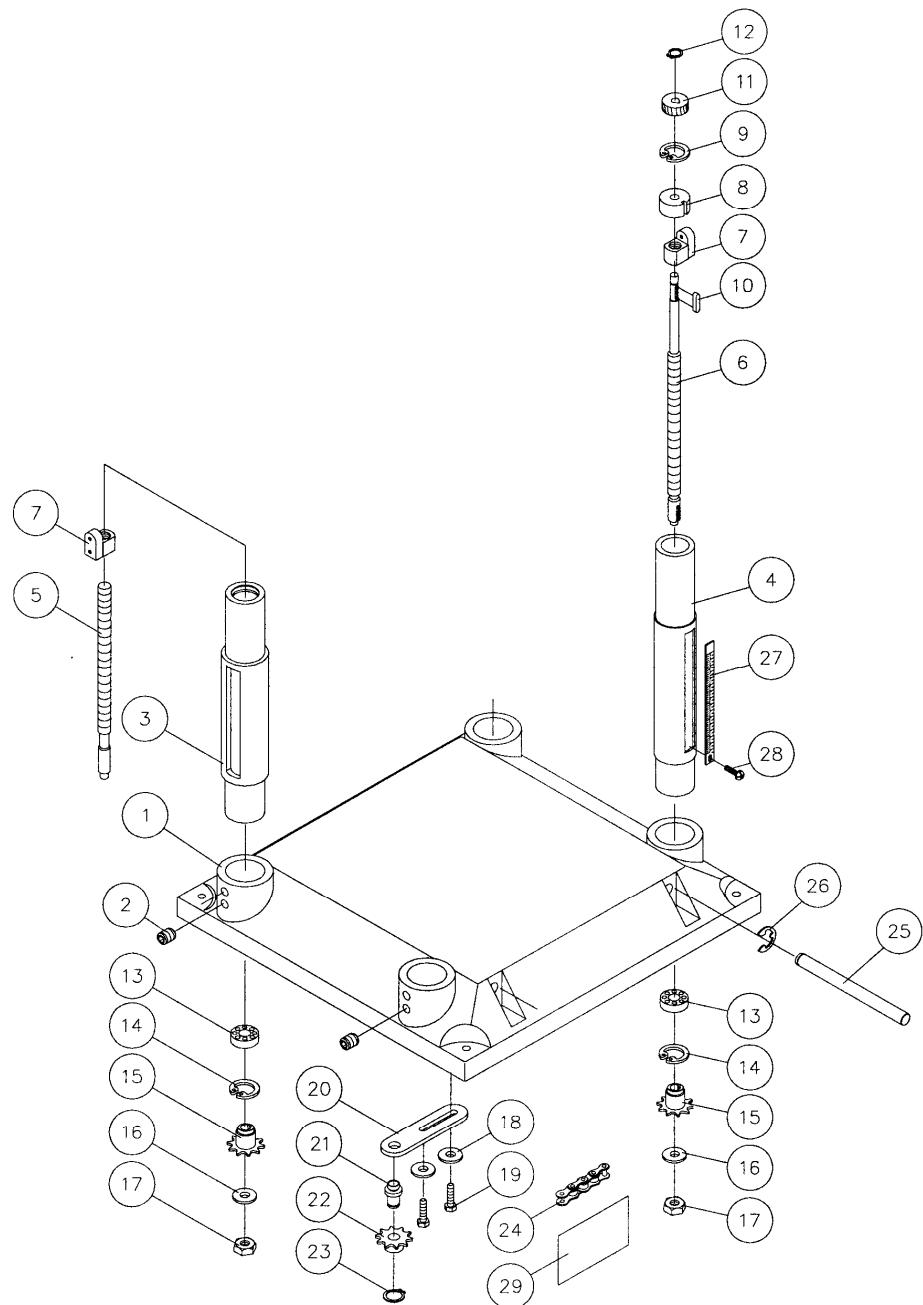

### 12.1.2 Base Assembly – Parts List

<b>Index No.</b>	<b>Part No.</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
1.....	JWP15H-201 .....	Base.....		1
2.....	TS-1525021 .....	Set Screw.....	M10x12 .....	8
3.....	JWP15H-203 .....	Column.....		3
4.....	JWP15H-204 .....	Column.....		1
5.....	JWP15H-205 .....	Lead Screw .....		3
6.....	JWP15H-206 .....	Lead Screw .....		1
7.....	JWP15H-207 .....	Nut .....		4
8.....	JWP15H-208 .....	Bushing .....		1
9.....	JWP15H-209 .....	Retaining Ring.....	RTW-38.....	1
10.....	JWP15H-210 .....	Key.....	4x4x10 .....	1
11.....	JWP15H-211 .....	Gear.....		1
12.....	JWP15H-212 .....	Retaining Ring.....	STW-10.....	1
13.....	BB-6202Z .....	Ball Bearing.....	6202Z.....	4
14.....	JWP15H-214 .....	Retaining Ring.....	RTW-35.....	4
15.....	JWP15H-216 .....	Sprocket.....		4
16.....	TS-1550071 .....	Washer.....	M10.....	4
17.....	TS-1540072 .....	Nut .....	M10x1.25P .....	4
18.....	TS-1550061 .....	Washer.....	M8.....	2
19.....	TS-1490041 .....	Hex Cap Screw .....	M8x25 .....	2
20.....	JWP15H-221 .....	Bracket.....		1
21.....	JWP15H-222 .....	Shaft .....		1
22.....	JWP15H-223 .....	Sprocket.....		1
23.....	JWP15H-224 .....	Retaining Ring.....	STW-15.....	1
24.....	JWP15H-225 .....	Chain .....		1
25.....	JWP15H-226 .....	Lifting Handle .....		4
26.....	JWP15H-227 .....	E-Clip .....	ETW-12 .....	4
27.....	JWP15H-228 .....	Scale .....		1
28.....	TS-1531012 .....	Screw .....	M3x6 .....	1
29.....	PJE-B01 .....	I.D. Label.....		1

### 12.2.1 Table Assembly – Exploded View

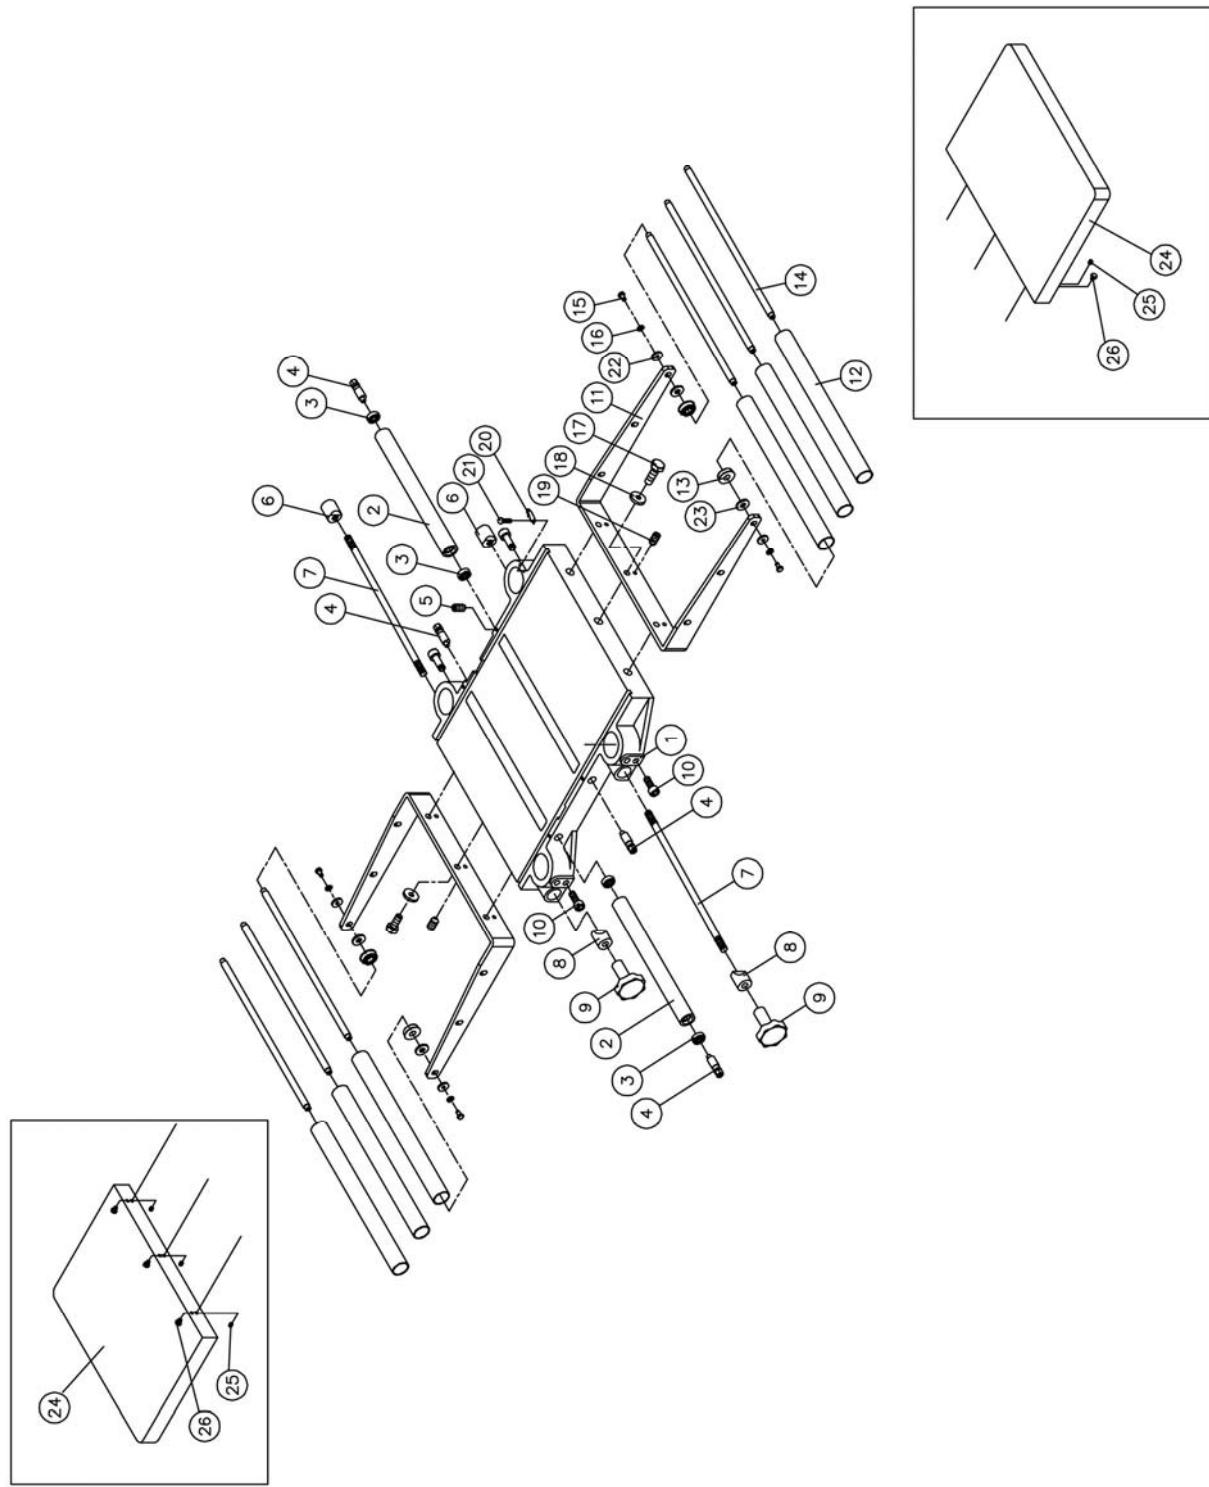


## 12.2.2 Table Assembly – Parts List

<b>Index No.</b>	<b>Part No.</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
1.....	JWP15H-101 .....	Middle Table.....		1
2.....	JWP15H-102 .....	Roller .....		2
3.....	BB-608Z .....	Ball Bearing.....	608Z.....	4
4.....	JWP15H-104 .....	Eccentric Shaft .....		4
5.....	TS-1523041 .....	Set Screw.....	M6x12.....	4
6.....	JWP15H-106 .....	Threaded Lock Bushing.....		2
7.....	JWP15H-107 .....	Lock Bolt .....		2
8.....	JWP15H-108 .....	Lock Bushing.....		2
9.....	JWP15H-109 .....	Knob .....		2
10.....	TS-1503051 .....	Socket Head Cap Screw.....	M6x20.....	8
11.....	PJ020801 .....	Roller Frame* .....		2
12.....	JWP15H-112 .....	Roller* .....		6
13.....	JWP15H-113 .....	Roller Bushing* .....		12
14.....	JWP15DX-114 .....	Shaft* .....		6
15.....	TS-1482021 .....	Hex Cap Screw* .....	M6x12 .....	12
16.....	TS-2361061 .....	Lock Washer* .....	M6.....	12
17.....	TS-1490031 .....	Hex Cap Screw* .....	M8x20 .....	6
18.....	TS-1550061 .....	Washer* .....	M8.....	6
19.....	TS-1524031 .....	Set Screw* .....	M8x12 .....	6
20.....	JWP15H-230 .....	Cut Limit Pointer .....		1
21.....	JWP15H-231 .....	Rivet.....	2x5.....	2
22.....	TS-1550041 .....	Flat Washer* .....	M6.....	12
23.....	TS-1550071 .....	Flat Washer* .....	M10.....	12
24.....	JWP15HH-124 .....	Extension Table** .....		2
25.....	TS-1524051 .....	Socket Set Screw** .....	M8x20 .....	6
26.....	TS-1490041 .....	Hex Cap Screw** .....	M8x25 .....	6

\* Index #11 thru 19, 22 and 23 are used only on model JWP-15DX

\*\* Index # 24, 25 and 26 are used only on model JWP-15HH


### 12.3.1 Gear Box Assembly – Exploded View

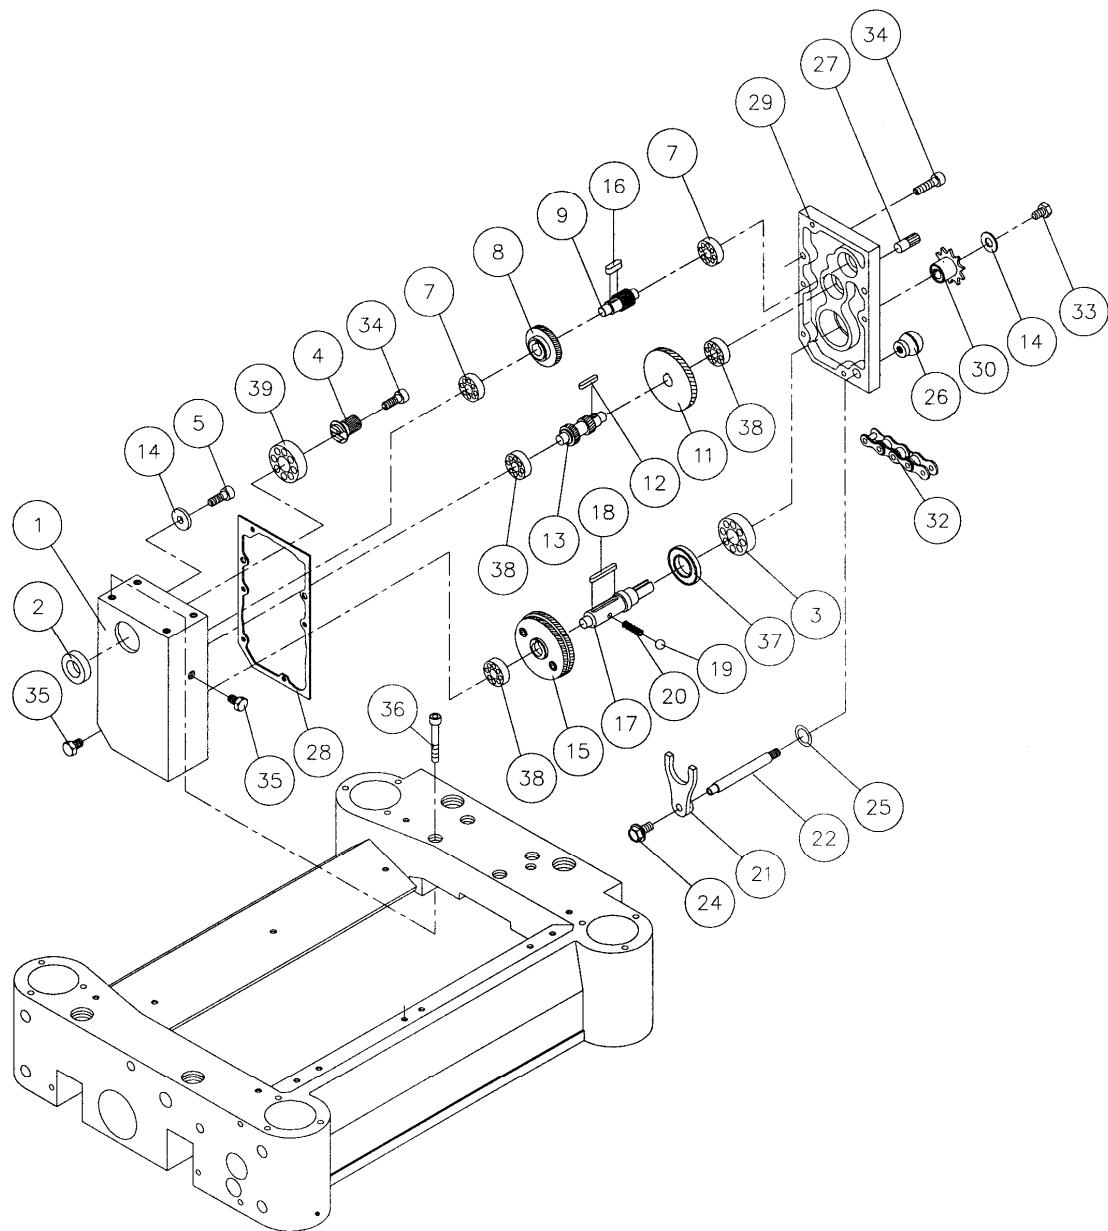

### 12.3.2 Gear Box Assembly – Parts List

<b>Index No.</b>	<b>Part No.</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
1.....	JWP15H-301 .....	Gear Box.....		1
2.....	6284843.....	Oil Seal .....		1
3.....	BB-6204Z .....	Ball Bearing.....	6204Z	1
4.....	JWP15H-304 .....	Gear.....	16T	1
5.....	TS-1503031 .....	Socket Head Cap Screw....	M6x12	1
7.....	BB-6201 .....	Ball Bearing.....	6201	2
8.....	JWP15H-309 .....	Gear.....	47T	1
9.....	JWP15H-310 .....	Shaft .....	18T	1
11.....	JWP15H-312 .....	Gear.....	71T	1
12.....	JWP15H-313 .....	Key.....	5x5x10	1
13.....	JWP15H-314 .....	Shaft .....	18T, 22T	1
14.....	TS-1550041 .....	Washer.....	M6	2
15.....	JWP15H-317 .....	Gear Assembly.....	96T/92T	1
16.....	6292768.....	Key.....	5x5x12	1
17.....	JWP15H-323 .....	Shaft .....		1
18.....	JWP15H-320 .....	Key.....	6x6x40	1
19.....	JWP15H-321 .....	Ball.....		1
20.....	JWP15H-322 .....	Spring.....		1
21.....	JWP15H-329 .....	Clutch.....		1
22.....	JWP15H-330 .....	Handle.....		1
24.....	JWP208-038A.....	Hex Washer Head Screw.....	M6x12	1
25.....	JWP15H-333 .....	Oil Seal .....		1
26.....	JWP15H-334 .....	Knob .....		1
27.....	JWP15H-335 .....	Pin.....		2
28.....	JWP15H-336 .....	Gasket.....		1
29.....	JWP15H-337 .....	Cover .....		1
30.....	JWP15H-325 .....	Sprocket.....	12T	1
32.....	JWP15H-327 .....	Chain .....		1
33.....	TS-1482031 .....	Hex Cap Screw .....	M6x16	1
34.....	TS-1503061 .....	Socket Head Cap Screw.....	M6x25	5
35.....	JWP15H-339 .....	Oil Plug .....		2
36.....	TS-1504101 .....	Socket Head Cap Screw.....	M8x50	4
37.....	OS-25476 .....	Oil Seal .....		1
38.....	BB-6201Z .....	Ball Bearing.....	6201Z	3
39.....	BB-6204ZZ .....	Ball Bearing.....	6204ZZ	1


#### 12.4.1 Stand and Motor Assembly – Exploded View

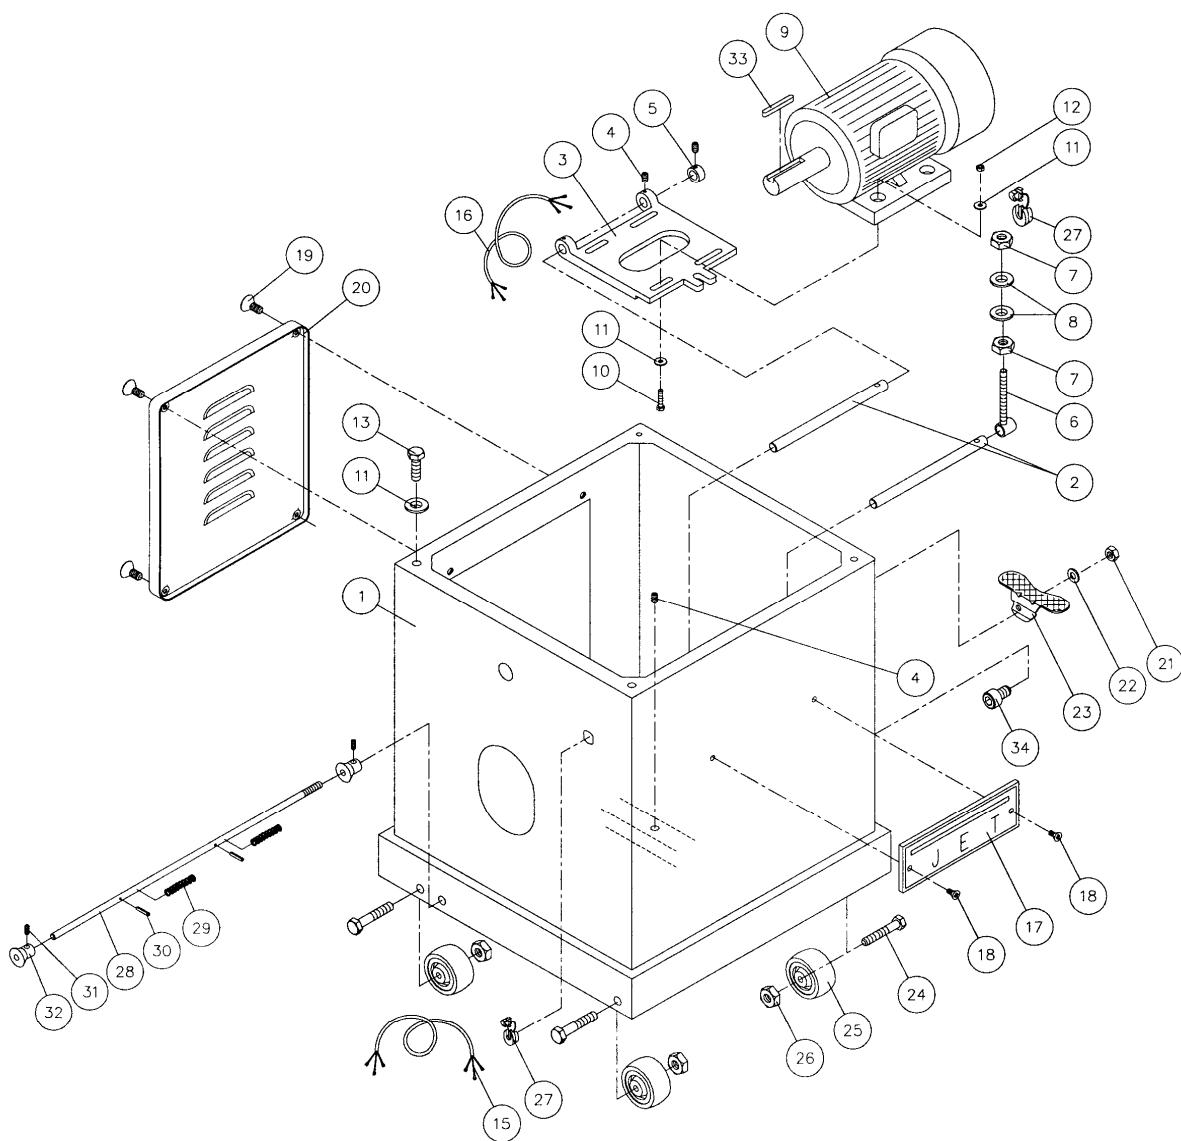

## 12.4.2 Stand and Motor Assembly – Parts List

<b>Index No.</b>	<b>Part No.</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
1.....	PJN-S01.....	Base.....		1
2.....	JWP15H-404 .....	Support Bar.....		2
3.....	JWP15H-406 .....	Motor Mount.....		1
4.....	TS-1523011 .....	Set Screw.....	M6x6.....	4
5.....	JWP15H-408 .....	Collar .....		1
6.....	JWP15H-409 .....	Adjusting Bolt .....		1
7.....	TS-1540072 .....	Nut .....	M10x1.25P .....	2
8.....	TS-0680061 .....	Washer.....	1/2.....	2
9.....	JWP15H-412 .....	Motor.....	3HP .....	1
10.....	TS-1490051 .....	Hex Cap Screw .....	M8x30 .....	4
11.....	TS-1550061 .....	Washer.....	M8.....	12
12.....	TS-1540061 .....	Hex Nut .....	M8.....	4
13.....	TS-1490081 .....	Hex Cap Screw .....	M8x45 .....	4
15.....	JWP15H-418 .....	Power Cable.....		1
16.....	PAG-M02.....	Motor Cable.....		1
17.....	PG-M02 .....	Jet Plaque .....		1
18.....	TS-2245081 .....	Flat Head Screw.....	M5x8 .....	2
19.....	TS-2286201 .....	Flat Head Screw.....	M6x20 .....	4
20.....	PJH-S02 .....	Door .....		1
21.....	TS-1540071 .....	Hex Nut .....	M10 .....	1
22.....	TS-1550071 .....	Flat Washer.....	M10.....	1
23.....	PJN-S02 .....	Foot Brake.....		1
24.....	TS-0060111 .....	Hex Cap Screw .....	3/8-16x2-1/2 .....	4
25.....	PG-M05 .....	Wheel.....		4
26.....	TS-0561031 .....	Hex Nut .....	3/8-16 .....	4
27.....	5MA-L05 .....	Strain Relief Bushing .....		2
28.....	PJN-S03 .....	Shaft .....		1
29.....	PG010033 .....	Spring .....		2
30.....	HG010911 .....	Spring Pin.....	4x20 .....	2
31.....	TS-1523011 .....	Set Screw.....	M6x6 .....	2
32.....	PJN-S04 .....	Eccentric Cam .....		2
33.....	5FK-C13A .....	Key.....	5x5x30 .....	1
34.....	TS-1503031 .....	Socket Head Cap Screw.....	M6x12 .....	1

### 12.5.1 Head Assembly – Exploded View

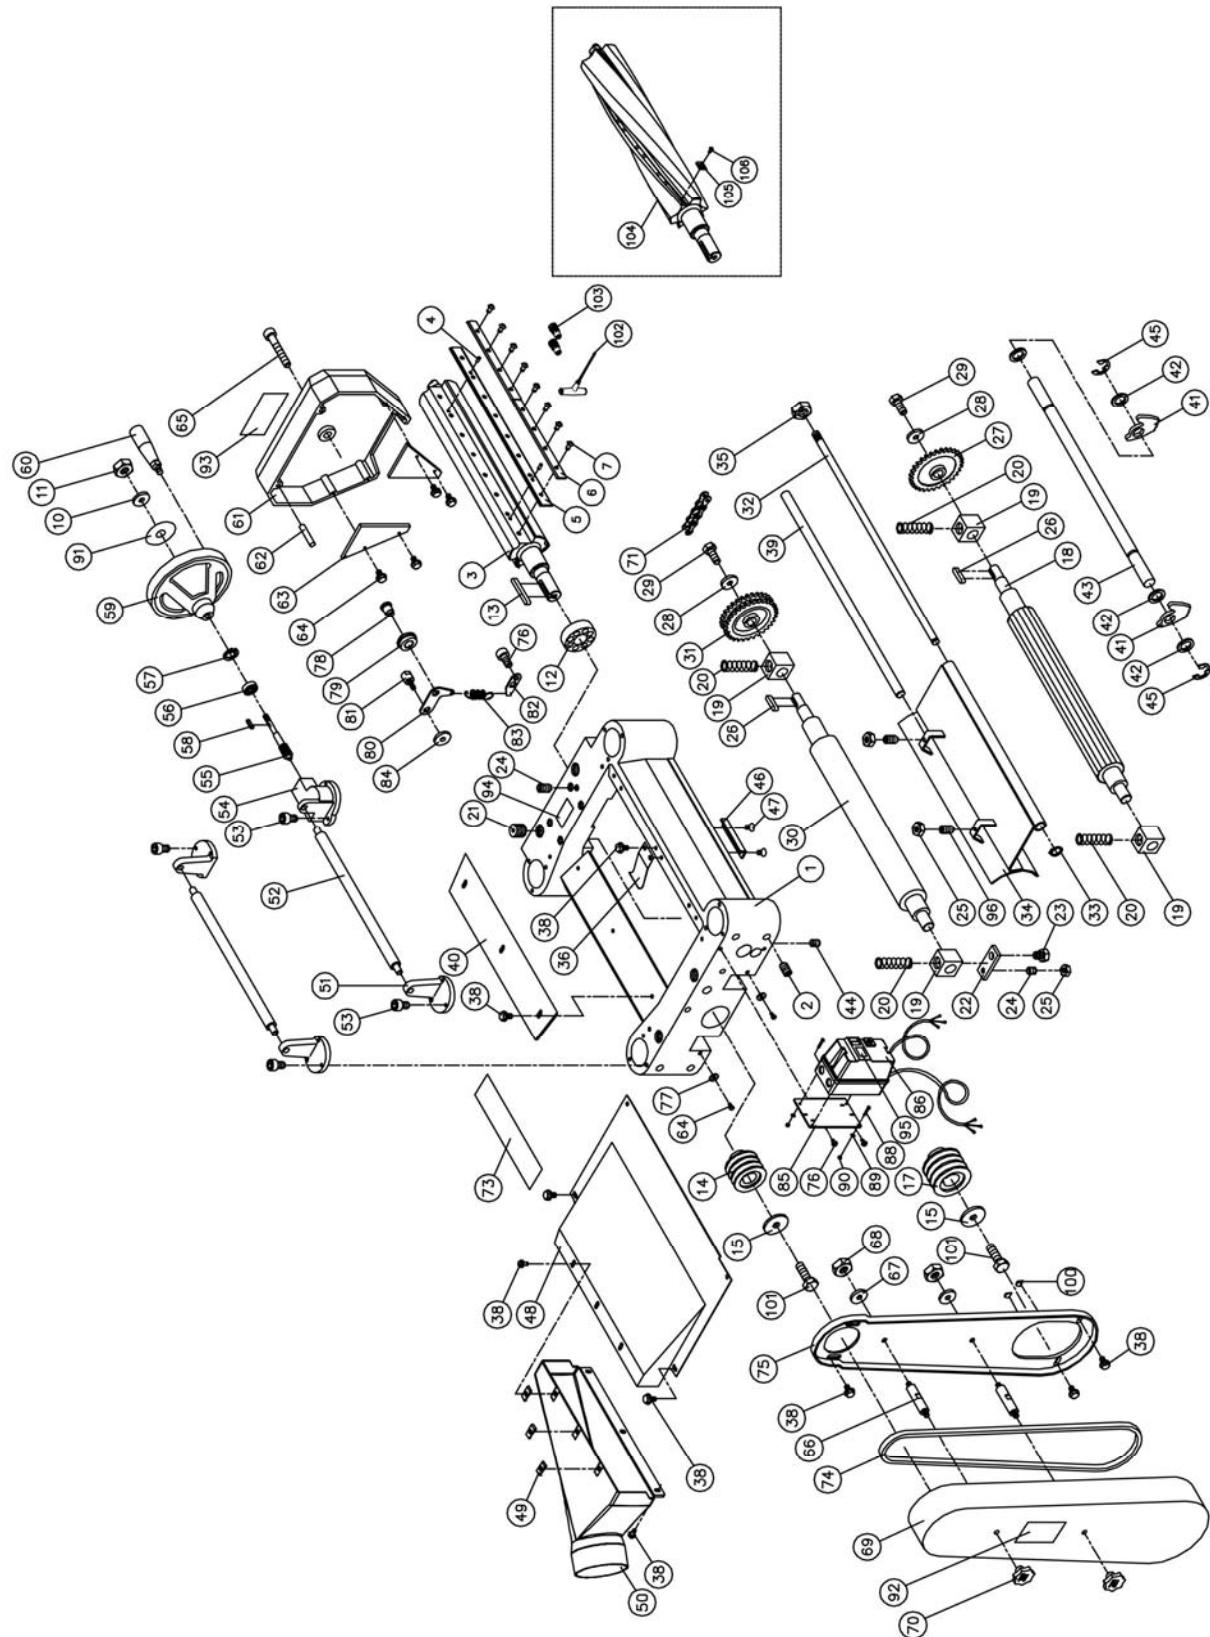

## 12.5.2 Head Assembly – Parts List

<b>Index No.</b>	<b>Part No.</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
1.....	JWP15H-001 .....	Head Casting.....		1
2.....	TS-1525021 .....	Set Screw.....	M10x12 .....	8
	JWP15DX-CA .....	Cutter Head Assembly (Index #3 thru #7)* .....		1
3.....	JWP15DX-003 .....	Cutter Head* .....		1
4.....	JWP15DX-004 .....	Pin* .....		6
5.....	708817 .....	Knives (Set of 3)* .....		1
6.....	JWP15DX-006 .....	Knife Bar* .....		6
7.....	TS-2246122 .....	Button Head Socket Screw* .....	M6x12 .....	24
10.....	TS-1550071 .....	Washer.....	M10 .....	1
11.....	TS-1540072 .....	Hex Nut .....	M10x1.25P .....	1
12.....	BB-6205ZZ .....	Ball Bearing.....	6205ZZ .....	1
13.....	JWP15DX-013 .....	Key .....	8x8x36 .....	1
14.....	JWP15H-014 .....	Machine Pulley .....		1
15.....	JWP15H-015 .....	Washer.....		2
17.....	JWP15H-017 .....	Motor Pulley .....		1
18.....	JWP15H-018 .....	Infeed Roller .....		1
19.....	JWP15H-019 .....	Bushing .....		4
20.....	JWP15H-020 .....	Spring .....		4
21.....	JWP15H-021 .....	Set Screw.....	M22x1.5Px20 .....	4
22.....	JWP15H-022 .....	Plate.....		4
23.....	TS-1490031 .....	Hex Cap Screw .....	M8x20 .....	4
24.....	TS-1523051 .....	Set Screw.....	M6x16 .....	5
25.....	TS-1540041 .....	Nut .....	M6.....	6
26.....	JWP15H-026 .....	Key .....	5x5x22 .....	2
27.....	JWP15H-027 .....	Sprocket .....		1
28.....	TS-0680021 .....	Washer .....	1/4 .....	2
29.....	TS-1482031 .....	Hex Cap Screw .....	M6x16 .....	2
30.....	JWP15H-030 .....	Outfeed Roller .....		1
31.....	JWP15H-031 .....	Sprocket .....		1
32.....	JWP15H-032 .....	Locking Bolt .....		1
33.....	JWP15H-033 .....	Retaining Ring .....	STW-12 .....	1
34.....	JWP15H-034 .....	Chipbreaker .....		1
35.....	TS-1540081 .....	Hex Nut .....	M12 .....	1
36.....	JWP15H-036 .....	Plate Spring .....		3
38.....	JWP208-038A.....	Hex Washer Head Screw.....	M6x12 .....	23
39.....	JWP15H-039 .....	Shaft .....		1
40.....	JWP15H-040 .....	Deflector Plate .....		1
41.....	JWP15H-041 .....	Anti-Kickback Finger .....		39
42.....	JWP15H-042 .....	Collar .....		40
43.....	JWP15H-043 .....	Shaft .....		1
44.....	TS-1524031 .....	Set Screw .....	M8x12 .....	1
45.....	JWP15H-045 .....	Retaining Ring .....	ETW-15 .....	2
46.....	JWP15H-046 .....	Limiter Plate .....		1
47.....	JWP208-053A.....	Flat Head Screw .....	M5x8 .....	2
48.....	JWP15H-048 .....	Upper Cover .....		1
	JWP15DX-CHA.....	Collector Hood Assembly (Index #49, #50) .....		1
49.....	JWP15DX-049 .....	Plate .....		3
50.....	JWP15DX-050 .....	Collector Hood .....		1
51.....	JWP15H-051 .....	Roller Stand .....		3
52.....	JWP15H-052 .....	Roller .....		2
53.....	TS-1503051 .....	Socket Head Cap Screw .....	M6x20 .....	12
54.....	JWP15H-054 .....	Worm Gear Box .....		1
55.....	JWP15H-055 .....	Worm .....		1
56.....	BB-6200Z .....	Ball Bearing .....	6200Z .....	1
57.....	JWP15H-057 .....	Retaining Ring .....	RTW-30 .....	1

\* Index # 3, 4, 5, 6 and 7 are used only on straight cutterhead, model JWP-15DX

58	JWP15H-058	Key	4x4x10	1
59	JWP15H-059	Hand Wheel		1
60	JWP15H-060	Handle		1
61	JWP15H-061	Cover		1
62	JWP15H-062	Spring Pin		2
63	PF-C22	Plate		2
64	TS-1482021	Hex Cap Screw	M6x12	8
65	TS-1504091	Socket Head Cap Screw	M8x45	1
66	JWP15H-067	Bolt		2
67	TS-0680031	Washer	5/16	2
68	TS-0561021	Hex Nut	5/16-18	2
69	JWP208-084	Pulley Cover		1
70	JWP15H-072	Knob		2
71	JWP15H-073	Chain		1
73	PG-C05	Label		1
74	VB-M59	V-Belt	M-59	3
75	JWP208-079	Pulley Guard		1
76	TS-1503021	Socket Head Cap Screw	M6x10	4
77	PF-C26	Washer		4
78	PA-C56	Stud		1
79	PA-C57	Idle Pulley		1
80	PA-C58	Bracket		1
81	PA-C59	Stud		1
82	PA-C60	Hanger		1
83	PA-C61	Spring		1
84	PA-C62	Washer		1
85	JWP15H-076A	Switch Bracket		1
86	JWP15H-077A	Switch		1
88	TS-081C102	Screw	#10-24X1-3/4	2
89	JWP15H-079	Tooth Washer		2
90	TS-0560071	Hex Nut	#10-24	2
91	PF-C27	Direction Indicator Label		1
92	PA-C67	Label		1
93	PA-G18-1	Label		1
94	PA-C66	Label		1
95	PJE-C04	Label		1
96	TS-1523041	Set Screw	M6x12	2
100	JWP15DX-100	Pad		2
101	TS-1490041	Hex Cap Screw	M8x25	2
102	JWP15DX-102	T-Handle Wrench*		1
103	JWP13DX-079	Magnet Tool Assembly*		2
	1791223	Helical Cutterhead Assembly (index #104 through #106)**		1
104	JWP15HH-104	Helical Cutterhead **		1
105	1791212	Knife Insert (sold in set of 10)**		68 total
106	JWP208HH-111	Knife Insert Screw**	#10-32x1/2"	68
107	JJ6HH-113	Star Point Screwdriver (not shown)**		2

\* Index #102 and 103 are used only on straight cutterhead, model JWP-15DX

\*\* Index #104 thru 107 are used only on helical cutterhead, model JWP-15HH



427 New Sanford Road  
LaVergne, Tennessee 37086  
Phone: 800-274-6848  
[www.jettools.com](http://www.jettools.com)