


SERVICE PARTS LIST

BULLETIN NO. 54-30-0150

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS

MAG STAND CONTROL PANEL

CATALOG NO. 23-35-0310 | SERIAL NUMBER | SEE BELOW

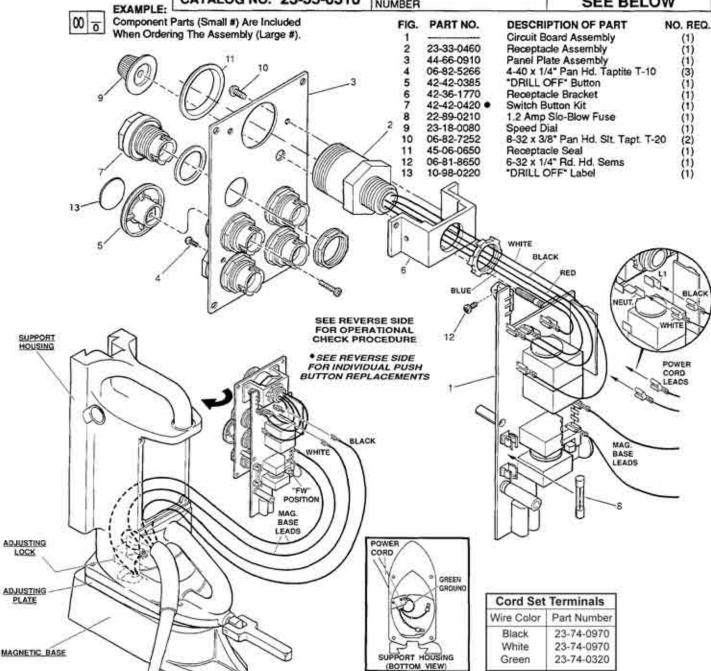

WIRING INSTRUCTIONS

- ROUTE TWO MAGNETIC BASE LEADS (RED WIRES WITH YELLOW SLEEVING) THROUGH ADJUSTING PLATE AND PAST ADJUSTING LOCK MECHANISM, ONE ON EACH SIDE. MAKE SURE SLEEVING IS NOT ABRADED DURING ROUTING.
- 2. SECURE LINE CORD IN SUPPORT HOUSING.
- ATTACH GROUND TERMINAL TO SUPPORT HOUSING WITH GROUND SCREW. POSITION GROUND WIRE TERMINAL SO IT CAN SET FLAT AGAINST HOUSING BEFORE SECURING.
- AFTER ASSEMBLING SUPPORT HOUSING TO ADJUSTING PLATE, ROUTE MAGNETIC BASE AND LINE CORD WIRES AS SHOWN.
- PUSH TERMINAL FROM WHITE LEAD ONTO PANEL TERMI-NAL MARKED "NEUT". PUSH TERMINAL FROM BLACK LEAD ONTO PANEL TERMINAL MARKED "L1".
- PUSH TERMINALS FROM MAGNETIC BASE WIRES ONTO PANEL TERMINALS LABELED "J3" AND "J4".
 NOTE: LEADS FROM MAGNETIC BASE CAN GO TO THE PANEL TERMINALS IN ANY ORDER. BE SURE TO CHECK THAT SLIDE SWITCH IS IN "FW" POSITION.
- PUSH THE BUNDLE OF WIRES DOWNWARD AND INSTALL CONTROL PANEL ONTO HOUSING.

MILWAUKEE ELECTRIC TOOL CORPORATION 13135 W. LISBON RD., BROOKFIELD, WI 53005