




SERVICE PARTS LIST


BULLETIN NO.
54-26-2721

| | | | |
|--|----------------|---|-------------|
| SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS | | REVISED BULLETIN | DATE |
| M18 FUEL™ 1/2" SQUARE IMPACT WRENCH with detent pin | | 54-26-2720 | Nov. 2013 |
| CATALOG NO. | 2762-20 | STARTING SERIAL NO. | F41B |
| | | WIRING INSTRUCTION See Page 2 | |

EXAMPLE:
Component Parts (Small #) Are Included
When Ordering The Assembly (Large #).

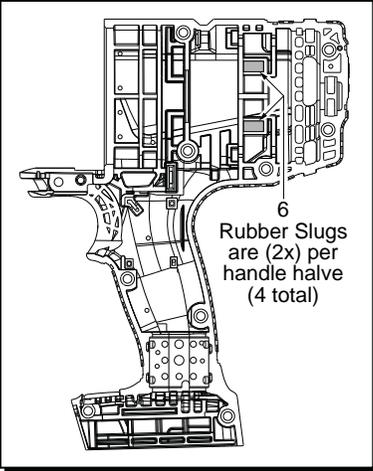


★ = Part number change
from previous service
parts list.

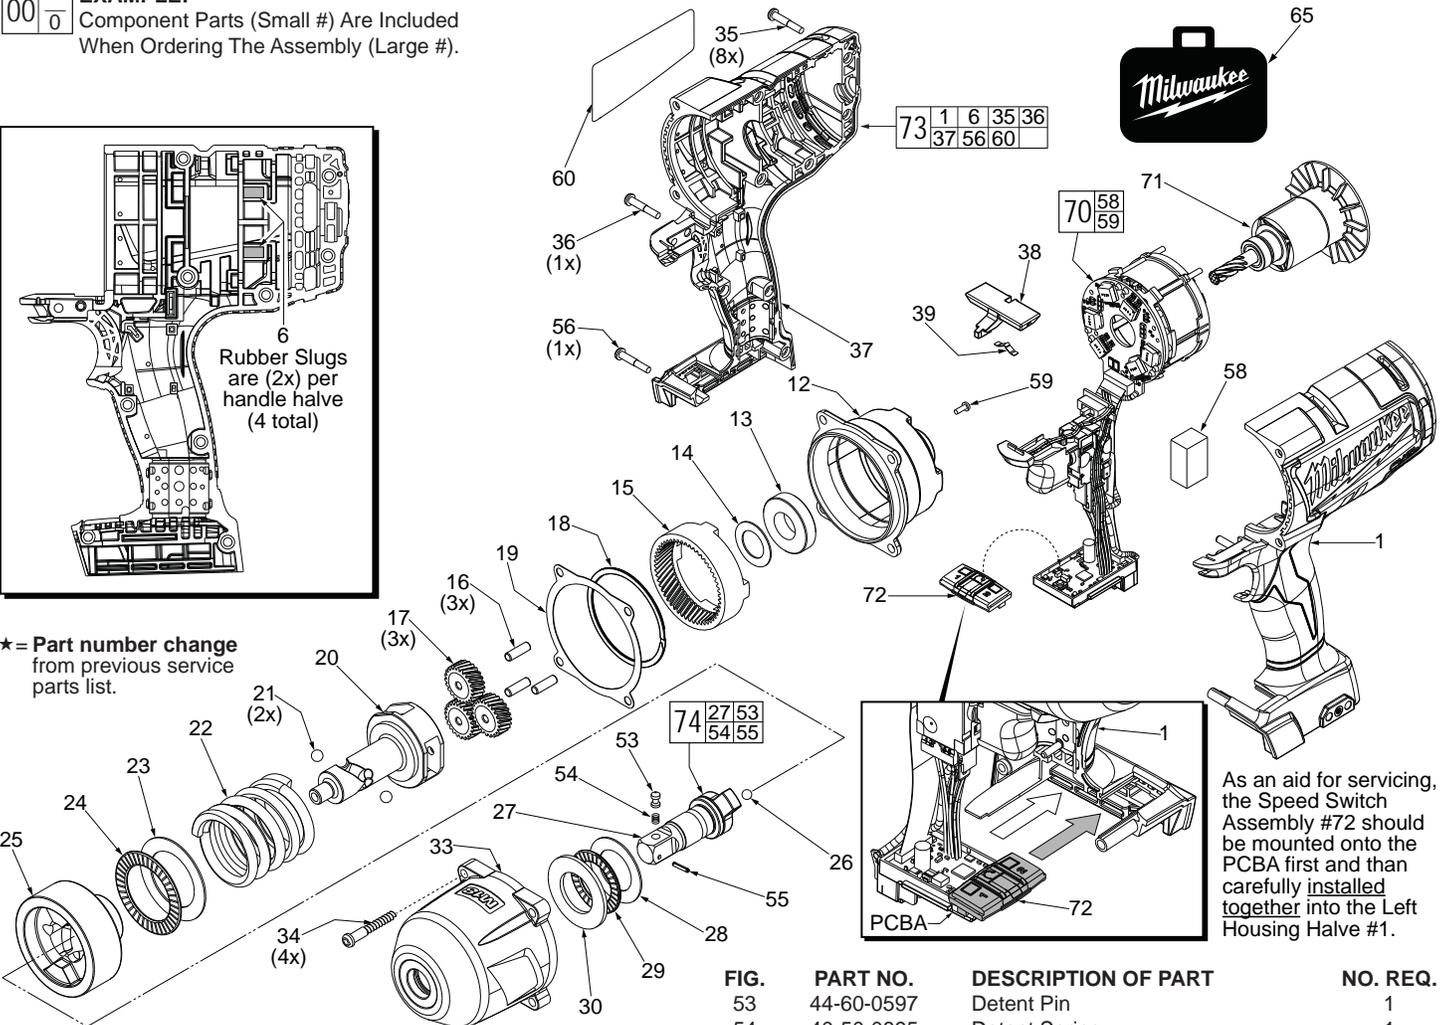

| FIG. | PART NO. | DESCRIPTION OF PART | NO. REQ. |
|------|------------|--|----------|
| 1 | ----- | Handle Support (Housing Halve-Left) w/ metal pin | 1 |
| 6 | 45-30-0255 | Rubber Slug | 4 |
| ★ 12 | 44-66-0417 | Rear Case | 1 |
| 13 | 02-04-0375 | Ball Bearing | 1 |
| 14 | 45-88-1655 | Thrust Washer | 1 |
| 15 | 32-65-0025 | Ring Gear | 1 |
| 16 | 44-60-1960 | Planet Pin | 3 |
| 17 | 32-62-0500 | Planet Gear | 3 |
| 18 | 30-40-0052 | Retaining Ring | 1 |
| 19 | 43-44-0065 | Gasket | 1 |
| 20 | 36-10-0020 | Camshaft | 1 |
| 21 | 02-02-0250 | 1/4" Steel Ball | 2 |
| 22 | 40-50-0957 | Hammer Spring | 1 |
| 23 | 45-88-1006 | Thrust Washer | 1 |
| 24 | 02-80-0200 | Hammer Thrust Bearing | 1 |
| 25 | 43-81-0120 | Hammer | 1 |
| 26 | 02-02-7010 | 7/32" Steel Ball | 1 |
| 27 | ----- | 1/2" Square Anvil | 1 |
| 28 | 45-88-1875 | Thrust Washer | 1 |
| 29 | 02-80-3256 | Thrust Bearing | 1 |
| 30 | 45-88-1620 | Thrust Washer | 1 |
| 33 | 14-30-0105 | Front Housing Assembly with Bushing | 1 |
| 34 | 06-82-2210 | 50 x 40mm Pan Hd. PT T-20 Screw | 4 |
| 35 | 06-82-0995 | M4 x 16mm Pan Hd. Plastite T-20 Screw | 8 |
| 36 | 06-82-2230 | M4 x 22mm Pan Hd. Plastite T-20 Screw | 1 |
| 37 | ----- | Handle Cover (Housing Halve Right) | 1 |
| 38 | 45-24-0130 | Forward / Reverse Shuttle | 1 |
| 39 | 40-50-1135 | Shuttle Spring | 1 |

| FIG. | PART NO. | DESCRIPTION OF PART | NO. REQ. |
|------|------------|--|----------|
| 53 | 44-60-0597 | Detent Pin | 1 |
| 54 | 40-50-0895 | Detent Spring | 1 |
| 55 | 44-60-0465 | Roller Pin | 1 |
| 56 | 06-81-5383 | M4 x 35mm Pan Hd. Plastite T-20 Screw | 1 |
| 58 | 44-52-0025 | Foam Pad | 1 |
| 59 | 06-82-0165 | High Voltage Screw | 1 |
| 60 | 12-20-2626 | Service Nameplate | 1 |
| 65 | 42-55-2762 | Carrying Case | 1 |
| 70 | 14-20-0092 | Electronics Assembly Consisting of On-Off Switch, Stator, PCBA, Forward/Reverse Switch, LED, Battery Terminal Connector Block, Foam Pad and High Voltage Screw | 1 |
| 71 | 16-01-0105 | Rotor Assembly | 1 |
| 72 | 45-24-0110 | Speed Switch Assembly | 1 |
| ★ 73 | 31-44-0868 | Housing Assembly | 1 |
| 74 | 42-06-0055 | 1/2" Square Anvil Assembly w/ detent pin | 1 |

| SCREW TORQUE SPECIFICATIONS | | | | |
|-----------------------------|------------|---------------------|-------------|----------|
| FIG. | PART NO. | WHERE USED | SEAT TORQUE | |
| | | | (KG/CM) | (IN/LBS) |
| 34 | 06-82-2210 | Front Housing Assy. | 36 | 31 |
| 35 | 06-82-0995 | Housing Assembly | 12.5 | 11 |
| 36 | 06-82-2230 | Housing Assembly | 8.5 | 7 |
| 56 | 06-82-2240 | Housing Assembly | 12.5 | 11 |
| 59 | 06-82-0165 | High Voltage Screw | | |

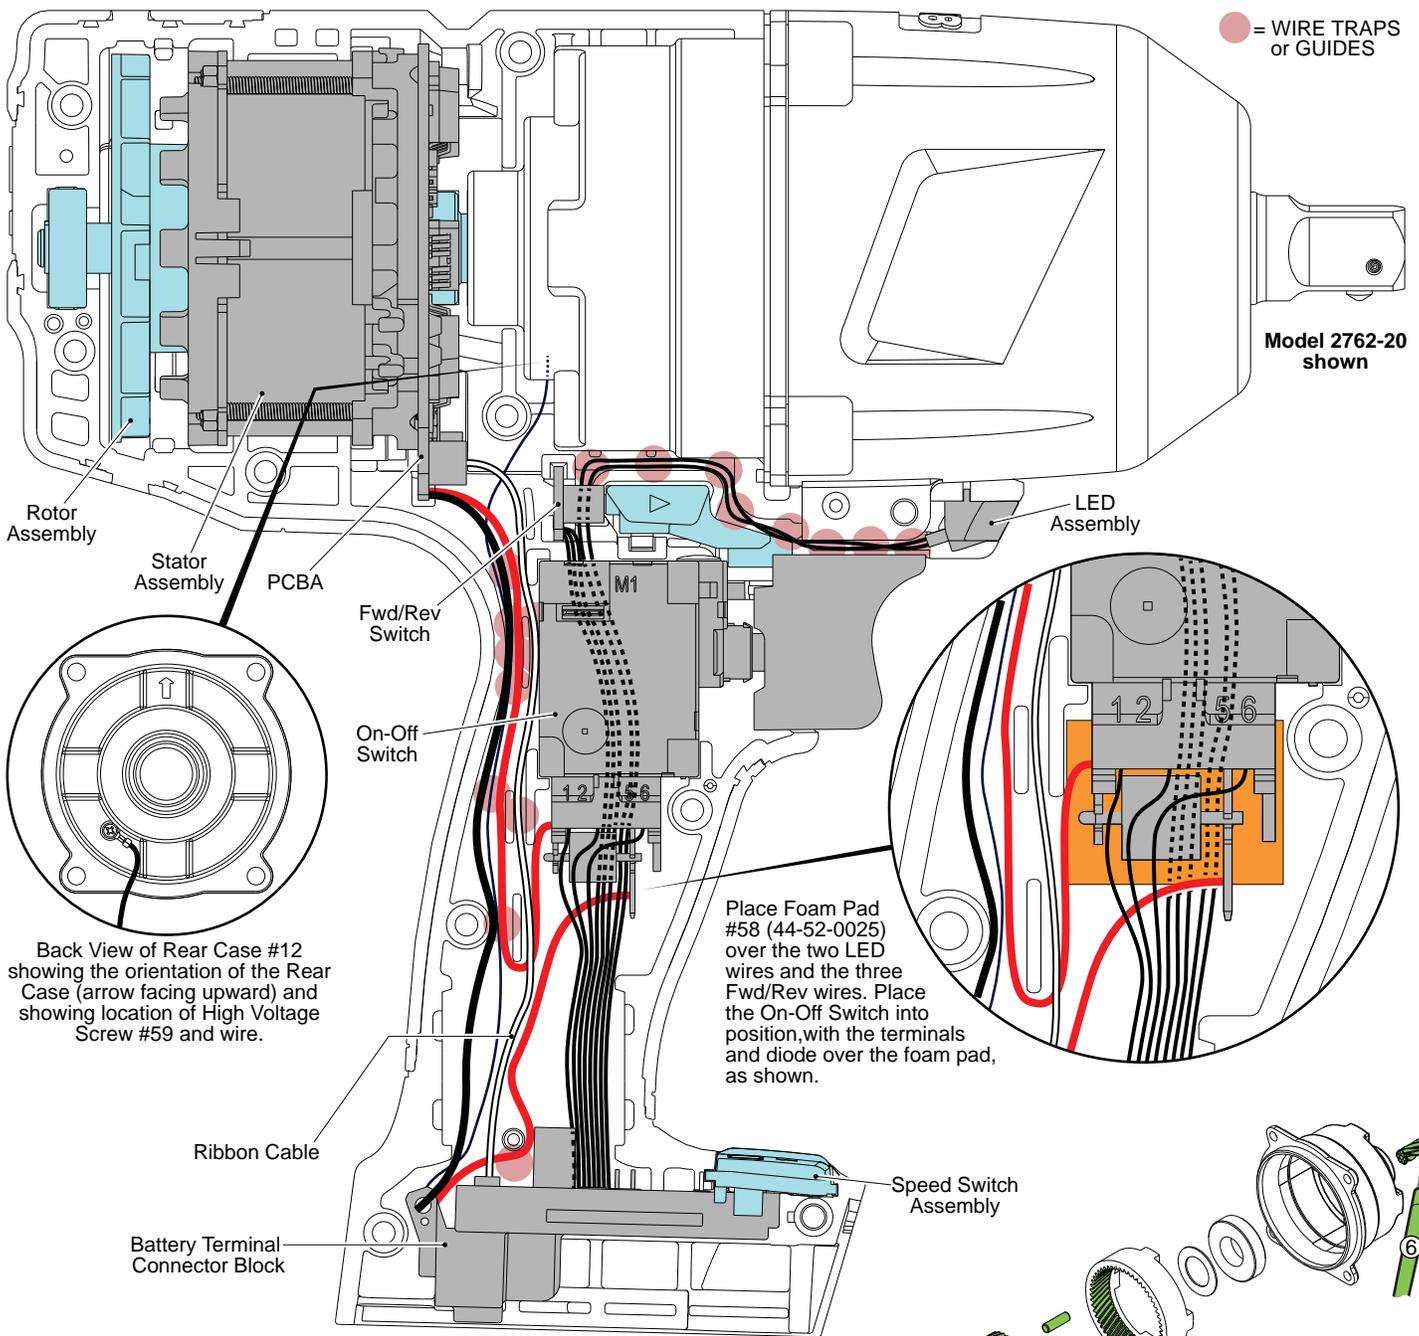

● LUBRICATION NOTES:

Type 'J' Grease

No. 49-08-4220, 1 lb. can

A total of approx. 11 grams (.4 oz) will be used.

Prior to reinstalling, clean gear assemblies with a clean, dry cloth. Lightly coat all parts highlighted here with 'J' grease. Apply a greater amount of grease to all internal and external gear teeth.

