



SERVICE PARTS LIST

BULLETIN NO.
54-38-0261

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS

5" D.I. SANDER-GRINDER

CATALOG NO. 6141

STARTING
SERIAL NO.

763E

REVISED BULLETIN

54-38-0260

DATE

Oct. 2004

WIRING INSTRUCTION

58-01-0309

00
0

EXAMPLE:
Component Parts (Small #) Are Included
When Ordering The Assembly (Large #).

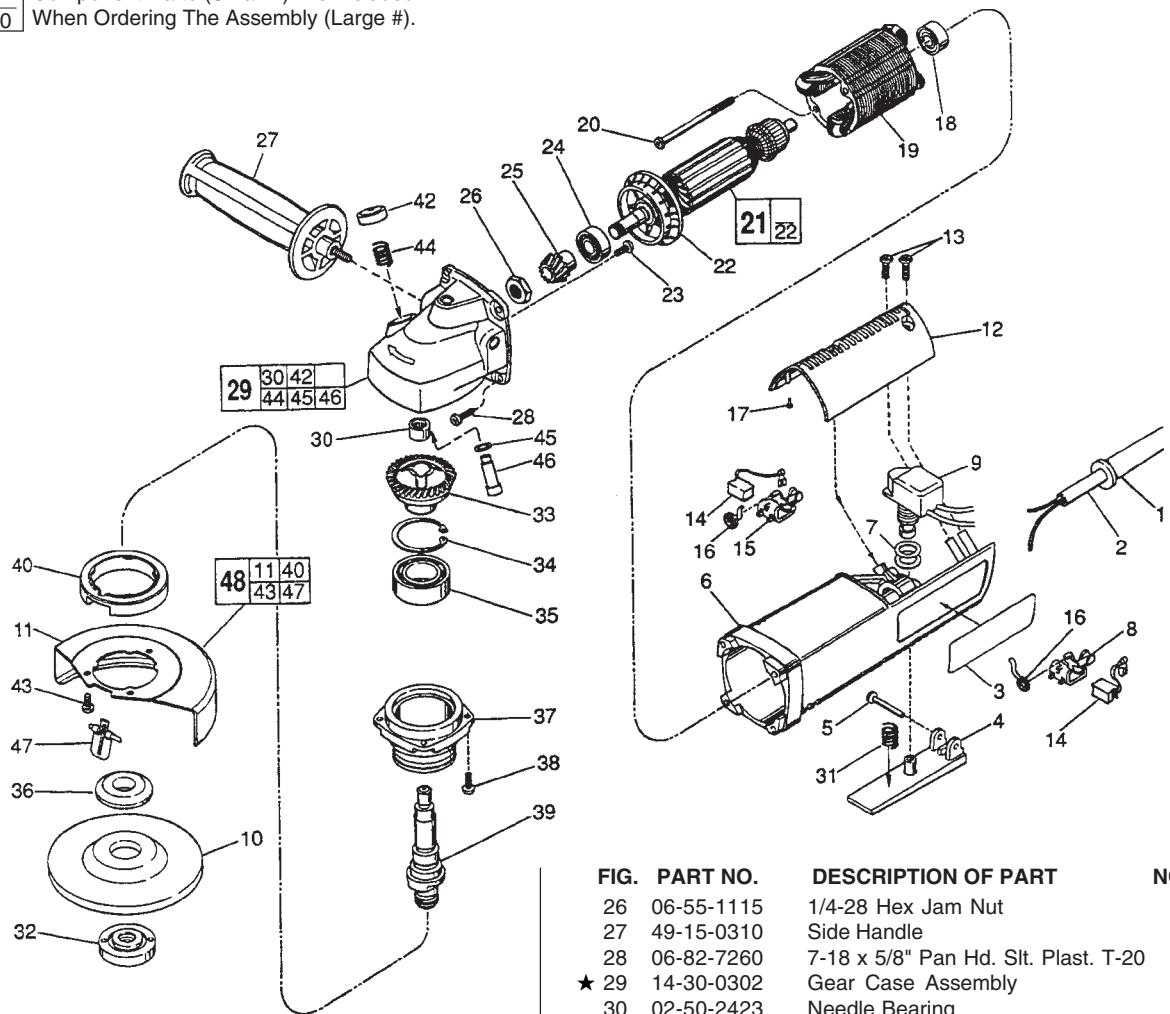


FIG. PART NO.

DESCRIPTION OF PART

NO. REQ.

1	44-76-0130	Cord Protector	(1)
2	22-64-0215	Cord Set	(1)
3	12-20-0510	Service Nameplate Kit	(1)
4	31-92-0112	Trigger	(1)
5	06-72-0815	.146 Dia. x 1-3/8" Rivet	(1)
6	31-50-0426	Motor Housing	(1)
7	34-40-4015	O-Ring	(2)
8	22-20-0691	Left Brush Holder	(1)
9	23-66-2171	Switch	(1)
10	-----	5" Disc-Select from Catalog	(1)
★ 11	28-41-1025	Hood	(1)
12	31-15-0143	Cover	(1)
13	06-82-7270	8-16 x 5/8" Pan Hd. Slt. Plast. T-20	(3)
14	22-18-0710	Carbon Brush	(2)
15	22-20-0692	Right Brush Holder	(1)
16	23-52-0240	Brush Spring	(2)
17	42-38-0181	Rubber Bumper	(2)
18	02-04-0848	Ball Bearing	(1)
19	18-07-0055	120 Volt Field	(1)
20	06-82-7375	8-16 x 2-1/2" Pan Hd. Plast. T-20	(2)
21	16-07-0060	120 Volt Armature	(1)
22	22-84-0680	Fan	(1)
23	06-82-2292	8-32 x 3/8" Pan Hd. Slt. Taptite T-20	(2)
24	02-04-1020	Ball Bearing	(1)
25	32-60-1305	Pinion	(1)

FIG. PART NO.

DESCRIPTION OF PART

NO. REQ.

26	06-55-1115	1/4-28 Hex Jam Nut	(1)
27	49-15-0310	Side Handle	(1)
28	06-82-7260	7-18 x 5/8" Pan Hd. Slt. Plast. T-20	(4)
★ 29	14-30-0302	Gear Case Assembly	(1)
30	02-50-2423	Needle Bearing	(1)
31	40-50-1300	Coil Spring	(1)
★ 32	49-05-0110	Flange Nut	(1)
33	32-05-2240	Spiral Bevel Gear	(1)
34	34-80-2960	Retaining Ring-Internal	(1)
35	02-04-1746	Ball Bearing	(1)
★ 36	49-05-0125	Flange	(1)
★ 37	28-52-0222	Spindle Hub	(1)
38	06-82-5316	8-32 x 1/2" Pan Hd. Slt. Taptite T-20	(4)
★ 39	38-50-5212	Spindle	(1)
★ 40	45-36-1551	Spacer	(1)
42	31-12-0205	Cap	(1)
★ 43	06-82-7251	8-16 x 3/8" Pan Hd. Slt. Plastite T-20	(3)
44	40-50-8650	Coil Spring	(1)
45	34-40-4300	O-Ring	(1)
46	44-60-0845	Lock Pin	(1)
★ 47	44-20-0325	Lock Lever	(1)
★ 48	49-12-0366	Guard Assembly	(1)
	49-96-7201	Spanner Wrench	(1)

FIG. LUBRICATION

29 1/4 Oz. "O" Grease, No. 49-08-4200.

FIG. NOTES:

26 Torque To 60 In./Lbs.

37 Position The Spindle Hub With The Side That Has The Word "Back" Orientated Toward The Rear Of The Tool.

MILWAUKEE ELECTRIC TOOL CORPORATION

13135 W. LISBON RD., BROOKFIELD, WI 53005

Dwg. 3